

Register your instrument!  
[www.eppendorf.com/myeppendorf](http://www.eppendorf.com/myeppendorf)



# CellXpert® C170

Operating Manual

Copyright © 2022 Eppendorf SE, Germany. All rights reserved, including graphics and images. No part of this publication may be reproduced without the prior permission of the copyright owner.

Eppendorf® and the Eppendorf Brand Design are registered trademarks of Eppendorf SE, Germany.

CellXpert® and VisioNize® are registered trademarks of Eppendorf SE, Germany.

Registered trademarks and protected trademarks are not marked in all cases with ® or ™ in this manual.

The software of CellXpert® C170 contains open source software. License information is available in the delivery box.

## Table of contents

<b>1</b>	<b>Operating instructions</b>	<b>7</b>
1.1	Using this manual	7
1.2	Danger symbols and danger levels	7
1.2.1	Danger symbols	7
1.2.2	Danger levels	7
1.3	Symbols used	8
1.4	Glossary	8
<b>2</b>	<b>Safety</b>	<b>9</b>
2.1	Intended use	9
2.2	User profile	9
2.3	Personal protective equipment	9
2.4	Application limits	10
2.4.1	Description of ATEX Guideline 94/9EC	10
2.5	Information on product liability	10
2.6	Warnings for intended use	11
2.6.1	Personal injury and damage to device	11
2.7	Warning signs on the device	14
<b>3</b>	<b>Product description</b>	<b>15</b>
3.1	Product overview	15
3.1.1	CellXpert C170	15
3.1.2	Inside the chamber	18
3.1.3	Inner door	19
3.1.4	Segmented inner doors (options)	19
3.1.5	Connectivity	21
3.2	Delivery package	22
<b>4</b>	<b>Installation</b>	<b>23</b>
4.1	Utilities requirements	23
4.2	Selecting the location	23
4.3	Positioning the incubator	25
4.4	Initial setup	27
4.4.1	Leveling the incubator	27
4.4.2	Fixing the incubator	28
4.5	Making connections	29
4.5.1	Electrical connection	29
4.5.2	Gas connection	30
4.5.3	Ethernet connection	32
4.6	BMS relay contact alarm	32
4.6.1	Incubator operating with and without alarm	34

**Table of contents**CellXpert® C170  
English (EN)

<b>5</b>	<b>Operation</b>	<b>35</b>
5.1	Preparing for operation	35
5.2	Functions and limitations	36
5.2.1	Temperature management	36
5.2.2	Gas pressure	36
5.2.3	CO <sub>2</sub>	37
5.2.4	Alarms	37
5.3	Opening and closing doors	37
5.3.1	Opening the inner and the outer door	38
5.3.2	Closing the inner and the outer door	38
5.4	Using the water tray	38
5.5	Using the access ports	39
5.6	Safety shutdown	40
5.6.1	Temperature	40
5.6.2	Gas	40
5.7	Switching off the device	40
<b>6</b>	<b>Overview of operating controls</b>	<b>41</b>
6.1	Home screen overview	41
6.2	Home screen in normal operation	42
6.3	Menu	42
6.4	Setting the parameter values	44
6.4.1	Save the settings	45
6.4.2	Exit without saving	45
6.5	Getting device information	45
6.6	Error notifications	46
6.7	Settings	47
6.7.1	Switch off the pressure monitor	47
6.7.2	Switch on the pressure monitor	48
<b>7</b>	<b>Maintenance</b>	<b>49</b>
7.1	Routine maintenance	49
7.1.1	General	49
7.1.2	Daily checks	49
7.1.3	Weekly checks	49
7.1.4	Monthly checks	49
7.1.5	Yearly checks	50
7.2	Exterior cleaning	50
7.3	Disinfection/Decontamination	51
7.3.1	Preparing the disinfection/decontamination	51
7.3.2	Disinfecting the exterior	52
7.3.3	Disassembling the interior equipment	52
7.3.4	Disinfecting/Decontaminating the interior	52
7.3.5	Reassembling the interior equipment	53
7.3.6	Putting into operation	54
7.4	High-temperature disinfection (HTD)	55
<b>8</b>	<b>Troubleshooting</b>	<b>57</b>
8.1	General errors	57

<b>9</b>	<b>Transport, storage and disposal</b>	<b>65</b>
9.1	Transport	65
9.1.1	Conditions of transport	65
9.2	Storage	65
9.3	Decontamination before shipment	66
9.4	Disposal	66
<b>10</b>	<b>Technical data</b>	<b>67</b>
10.1	Weight/dimensions	67
10.1.1	Equipment dimensions	67
10.1.2	Internal dimensions	67
10.1.3	Floor space required	68
10.1.4	Transporting dimensions	68
10.1.5	Shelves	68
10.1.6	Stacked CellXpert C170	69
10.2	Power supply	70
10.3	Interfaces	70
10.4	Ambient conditions	70
10.4.1	Temperature management	70
10.4.2	High-temperature disinfection	71
10.4.3	CO <sub>2</sub> control	71
10.4.4	Humidity	71
10.4.5	Calibration	71
<b>11</b>	<b>Ordering Information</b>	<b>73</b>
11.1	Shelves and shelf rack	73
11.2	Gas system	73
11.3	Electrics	73
11.4	Connectivity	74
11.5	Housing	74
11.6	Accessories	74
11.7	Upgrade options	75
	<b>Index</b>	<b>76</b>
	<b>Certificates</b>	<b>77</b>



# 1 Operating instructions











## 1.1 Using this manual

- ▶ Read this operating manual completely before using the device for the first time. Observe the instructions for use of the accessories where applicable.
- ▶ This operating manual is part of the product. Please keep it in a place that is easily accessible.
- ▶ Enclose this operating manual when transferring the device to third parties.
- ▶ The current version of the operating manual for all available languages can be found on our webpage [www.eppendorf.com/manuals](http://www.eppendorf.com/manuals).

## 1.2 Danger symbols and danger levels

The safety instructions of this operating manual indicate the following danger symbols and danger levels:

### 1.2.1 Danger symbols

	Hazard point		Hot surface
	Electric shock		Material damage
	Explosion		Heavy load
	Inhalation		Danger of cuts
	Biohazard		Magnetic fields

### 1.2.2 Danger levels

<b>DANGER</b>	<i>Will</i> lead to severe injuries or death.
<b>WARNING</b>	<i>May</i> lead to severe injuries or death.
<b>CAUTION</b>	May lead to light to moderate injuries.
<b>NOTICE</b>	May lead to material damage.

### 1.3 Symbols used

Depiction	Meaning
1. 2.	Actions in the specified order
▶	Actions without a specified order
•	List
<i>Text</i>	Display or software texts
<b>i</b>	Additional information

### 1.4 Glossary

**High-temperature disinfection/HTD:** Germ reducing method used to destroy microorganisms with temperatures of 120-180 °C.

**Relative humidity/RH:** The ratio of the amount of water vapor present in the air at a specific temperature to the maximum amount that the air could hold at that temperature, expressed as a percentage.

**Stacking stand:** Rack system for at most two devices to place them on top of each other and to fix them to the wall.



## 2 Safety

### 2.1 Intended use

The CellXpert C170 CO<sub>2</sub> incubator is designed to and serve to provide a stable and homogeneous atmosphere required for cell culture by controlling temperature and carbon dioxide for cultivating samples and cells from biological laboratories. It is intended exclusively for use indoors and for operation by qualified staff for research purposes only.



#### **CAUTION! Lack of safety due to incorrect accessories or spare parts**

- ▶ Accessories and spare parts that are not recommended by Eppendorf compromise the safety, functions, and precision of the device. Eppendorf cannot be held liable or accept any liability for damage resulting from the use of non-recommended accessories and spare parts.
- ▶ Only use accessories and original spare parts recommended by Eppendorf.

### 2.2 User profile

The device and accessories may only be operated by trained and skilled personnel.

Before using the device, read the operating manual carefully and familiarize yourself with the device's mode of operation.



#### **CAUTION! Risk of personal injury or damage to equipment due to misappliance of equipment**

- ▶ The equipment must be operated as described in this manual. If operational guidelines are not followed, equipment damage and personal injury can occur.
- ▶ Do not use the equipment in a hazardous atmosphere or with hazardous materials for which the equipment was not designed.
- ▶ Eppendorf is not responsible for any damage to the equipment that may result from the use of an accessory not manufactured by Eppendorf.

### 2.3 Personal protective equipment

Personal protective equipment protects your life and your health.

- ▶ Always wear the personal protective equipment required for the biosafety level and by the laboratory regulations.
- ▶ Always wear protective clothing, protective gloves, and safety boots.
- ▶ If additional protective equipment is required, this is indicated above the respective instruction.

## 2.4 Application limits

### 2.4.1 Description of ATEX Guideline 94/9EC

---



#### **DANGER! Explosion hazard**

- ▶ Do not operate the device in areas where work is completed with explosive substances.
- ▶ Do not use this device to process any explosive or highly reactive substances.
- ▶ Do not use this device to process any substances which could create an explosive atmosphere.



#### **DANGER! Explosion hazard**

- ▶ Use gases in this equipment only within the range between their lower explosion limit (LEL) and their upper explosion limit (UEL).
- ▶ If your process requires or produces gases, be sure to verify their LEL and UEL concentration range (available online or ask your gas supplier).



#### **CAUTION! Lack of safety due to incorrect use of materials**

- ▶ Do not use this device to process any flammable materials, or use materials where the transfer of mechanical energy to glass apparatus could lead to breakage.
- 

Due to its design and the ambient conditions in its interior, the device is not suitable for use in potentially explosive atmospheres.

The device may only be used in a safe environment, e.g., the open atmosphere of a ventilated lab.

The use of substances which may contribute to a potentially explosive atmosphere is not permitted.

The final decision regarding the risks associated with using these types of substances is the user's responsibility.

## 2.5 Information on product liability

In the following cases, the designated protection of the device may be affected. The liability for any resulting damage or personal injury is then transferred to the owner:

- The device is not used in accordance with the operating manual.
- The device is used outside of its intended use.
- The device is used with accessories or consumables which are not recommended by Eppendorf SE.
- The device is maintained or repaired by persons who were not authorized by Eppendorf SE.
- The user makes unauthorized changes to the device.

## 2.6 Warnings for intended use

Before using the device, read the operating manual and observe the following general safety instructions.

### 2.6.1 Personal injury and damage to device



#### **DANGER! Unconsciousness and death by elevated levels of CO<sub>2</sub>**

Elevated levels of CO<sub>2</sub> may be found in the operating area of the CO<sub>2</sub> incubator.

- ▶ Wear personal protective equipment.
- ▶ If the laboratory is not properly ventilated, use a CO<sub>2</sub>/O<sub>2</sub> alarm system.
- ▶ Check the tube connection system with a leakage test.
- ▶ Read the *Information on performing a risk assessment for the operation of incubators with CO<sub>2</sub> and N<sub>2</sub>* from Eppendorf SE.



#### **WARNING! Lack of safety due to incorrect gas installation or insufficient ventilation**

- ▶ Only trained personnel may install and connect the gas tubing.



#### **WARNING! Risk of personal injury and of material damage**

Heavy devices placed on the incubator may topple and injure persons or cause damage to the material.

- ▶ Only stack one CellXpert incubator on top of the other CellXpert incubator. Use the stacking stand and the safety fastening kit.
- ▶ Do not place any other heavy devices on the incubator.



#### **WARNING! Risk of suffocation**

- ▶ Observe the national guidelines on handling gases and on the equipment and operation of laboratories.
- ▶ Prevent a too high concentration of CO<sub>2</sub> in breathing air while working in the laboratory.



#### **WARNING! Risk of personal injury**

Burns due to hot surface.

- ▶ Do not touch the equipment during the high-temperature disinfection cycle.
- ▶ Do not open the doors during the cycle.
- ▶ Do not open the doors after a system crash or a mains/power outage during the high temperature disinfection.



#### **WARNING! Risk of personal injury**

Scalding due to hot water.

- ▶ Remove water from the water tray before starting the high-temperature disinfection cycle.



**WARNING! Damage to health due to infectious liquids and pathogenic germs.**

- ▶ When handling infectious liquids and pathogenic germs, observe the national regulations, the biosafety level of your laboratory, and the manufacturers' Safety Data Sheets and application notes.
- ▶ Wear your personal protective equipment.
- ▶ For comprehensive regulations about handling germs or biological material of risk group II or higher, please refer to the "Laboratory Biosafety Manual" (source: World Health Organization, Laboratory Biosafety Manual, the current edition).



**WARNING! Damage to health due to toxic, radioactive or aggressive chemicals.**

- ▶ Wear your personal protective equipment.
- ▶ Observe the national regulations for handling these substances.
- ▶ Observe the manufacturers' Safety Data Sheets and application notes.



**WARNING! Electric shock due to damage to the device or mains/power cord.**

- ▶ Only switch on the device if the device and the mains/power cord are undamaged.
- ▶ Only operate devices that have been properly installed or repaired.
- ▶ In case of danger, disconnect the device from the mains/power supply voltage. Disconnect the mains/power plug from the device or the earth/grounded socket. Use the isolating device intended for this purpose (e.g., the emergency switch in the laboratory).



**WARNING! Danger due to strong magnetic field**

Magnetic fields may affect pacemakers and defibrillators. Pacemakers may be reset.

- ▶ Keep a distance of at least 20 cm from the magnet.



**WARNING! Risk of personal injury**

- ▶ Do not open the device!
- ▶ Do not operate a broken device! (E.g. if the exterior is damaged)
- ▶ Do not modify the device!



**WARNING! Risk of personal injury and equipment damage**

Single devices or stacked devices on the stacking stand may tip over if not secured with the safety latch.

- ▶ Secure single devices or two stacked devices on the stacking stand to the wall with the safety latch.



**CAUTION! Risk of personal injury**

- ▶ At least 4 people are required to safely lift the incubator.
- ▶ The incubator has a high center of gravity. Make sure that it does not topple over when it is moved.



**CAUTION! Risk of personal injury**

- ▶ Observe the safety standards of your lab.
- ▶ Use your personal protective equipment.



**CAUTION! Risk of personal injury**

- ▶ Before closing the glass door, make sure that the shelves are properly installed inside the chamber. Slamming the glass door against the shelf could cause broken glass and injury.



**NOTICE! Material damage from incorrect connections.**

- ▶ Only make electrical connections to devices that are described in the operating manual.
- ▶ Other connections are only permitted the consent of Eppendorf SE.
- ▶ Only connect devices that meet the safety requirements defined in IEC 62368-1 .



**NOTICE! Damage to the incubator**

Lifting the incubator by the door will cause permanent damage to the incubator.

- ▶ Lift the incubator only by the lifting handles.
- ▶ Never lift the incubator by its door.



**NOTICE! Damage to door latch and hinge**

- ▶ Do not lean on the door.
- ▶ Do not put any items on the door.



**NOTICE! Risk of material damage**

- ▶ Never put any liquid material on the top of the incubator. Spilled liquid could cause a short circuit. This will cause permanent damage to the incubator.



**NOTICE! Risk of material damage**

- ▶ To avoid possible damage to the CO<sub>2</sub> sensor due to condensation, never leave water in the water tray while the incubator is switched off, or when a high temperature disinfection cycle is initiated.



**NOTICE! Risk of material damage**

The gas tubing and in-line gas filter will burst or crack due to high pressure.

- ▶ Incoming CO<sub>2</sub> gas pressure must not exceed 0.15 MPa (1.5 bar, 21.8 psi).



**NOTICE! Risk of material damage**

- ▶ The instrument or equipment, and its external connections, to be used inside the chamber should be specified as suitable for use in a humid environment, and at 37 °C. If in doubt, consult with the manufacturer of the equipment.
- ▶ Always ensure that the connections are properly and securely made.
- ▶ Instruments transfer heat into the chamber. Do not allow too much heat to be transferred into the chamber. Too much heat will affect the temperature control or activate the temperature limiter; this could cause the loss of sample.



**NOTICE! Risk of material damage**

- ▶ Do not modify the device; this could cause the loss of sample.



**NOTICE! Damage due to overheating**

- ▶ Do not place the device close to sources of heat (e.g., radiator, drying cabinet).
- ▶ Do not expose the device to direct sunlight.
- ▶ Ensure that all sides of the device are in an adequate distance from the wall and adjacent devices to guarantee unobstructed air circulation.







The mains/power switch and the disconnecting device for the mains/power line must be easily accessible during operation (e.g., a residual current circuit breaker).



If high temperature settings are used, be aware of heated parts, when touching the incubator or coming into contact with interior parts.

## 2.7 Warning signs on the device

Symbol	Meaning	Location
	Hazard point ▶ Observe the operating manual	On the name plate at the right side next to the mains/power switch
	Risk of burns from hot surfaces	Top left and right on the door panel, visible when outer door is opened
	Read the operating manual	Right side, next to the mains/power switch
	Warning Strong magnetic fields produced by the magnets used for door locking	Top left and top right on the front panel, visible when outer door is opened. Right side next to the door closing magnets (left side when door hinge is on the right side).

**3 Product description**  
**3.1 Product overview**  
**3.1.1 CellXpert C170**

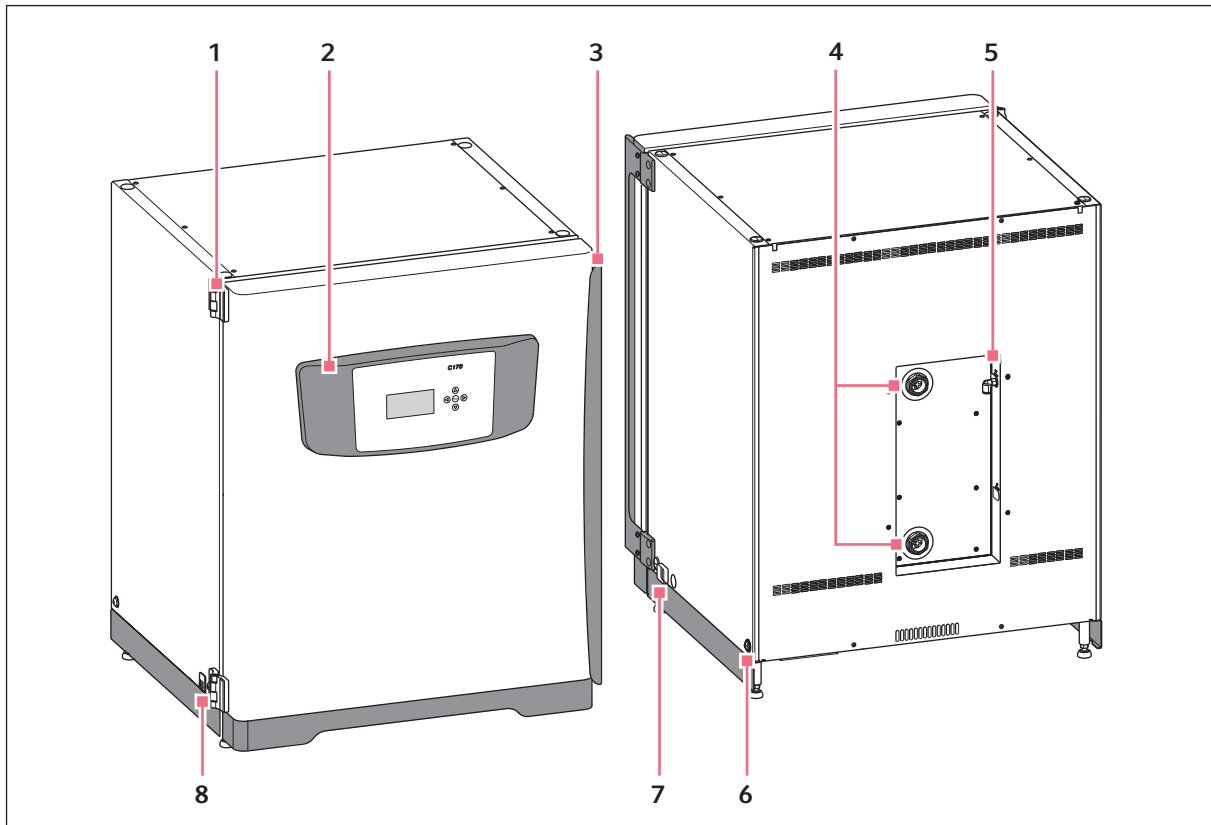 


Fig. 3-1: CellXpert C170: Front and rear view

- |                        |   |
|------------------------|---|
| <b>1 Door hinge</b>    | <b>5 CO<sub>2</sub> gas connection</b>                  |
| <b>2 Control panel</b> | <b>6 Hole for installing the lifting handle<br/>(4)</b> |
| <b>3 Door handle</b>   | <b>7 Mains/power switch</b>                             |
| <b>4 Access ports</b>  | <b>8 Service interface</b>                              |

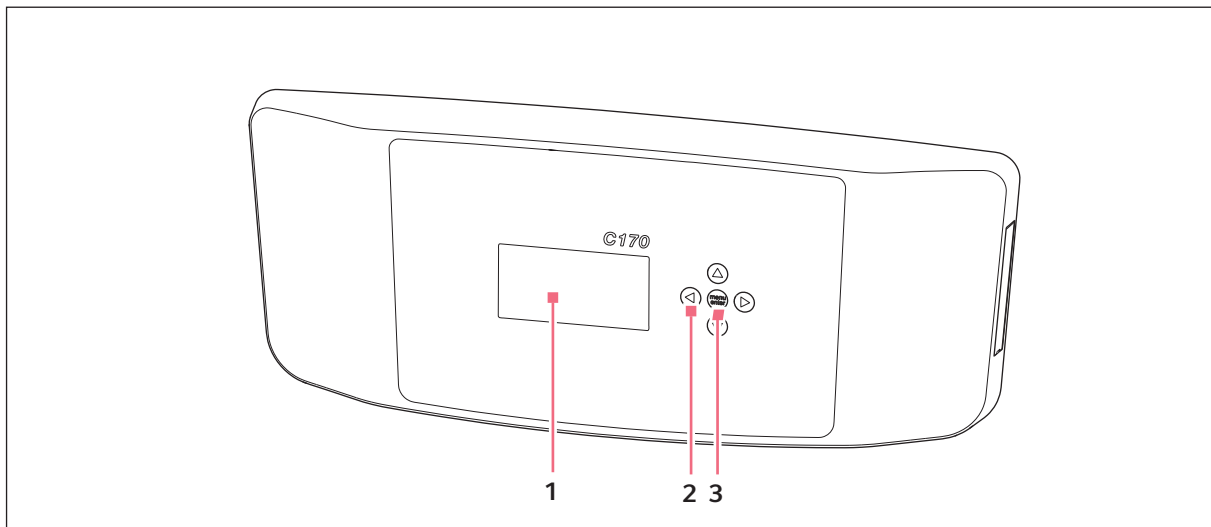 


Fig. 3-2: CellXpert C170: Control unit

**1 Display**

**2 Arrow key**

Navigating the menu: edit the settings

**3 Menu/enter softkey**

Open the menu.

Confirm your selection.



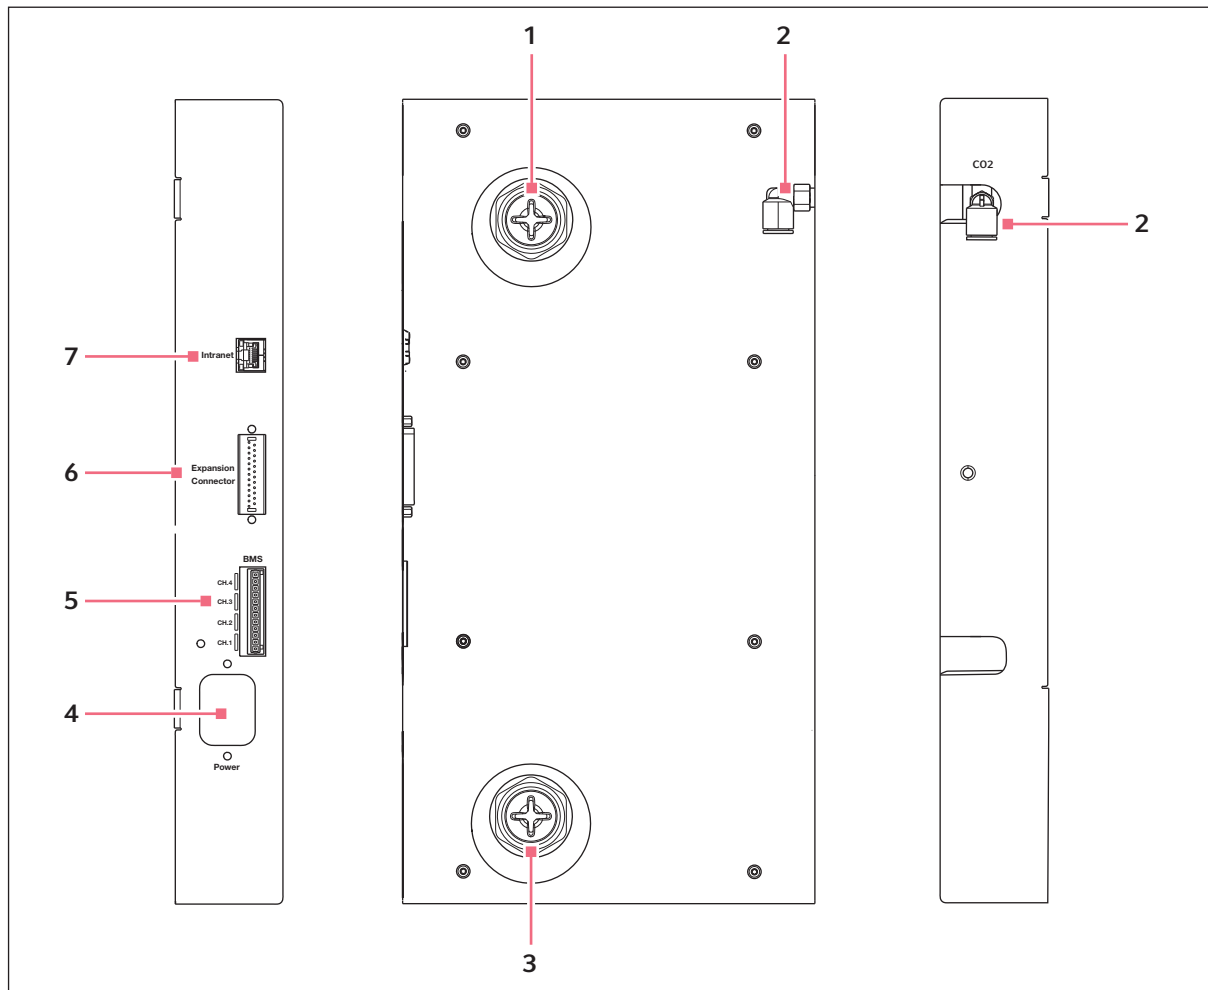 


Fig. 3-3: CellXpert C170: Connections at the rear of the device

- 1 Upper access port
- 2 CO<sub>2</sub> tube connector
- 3 Lower access port
- 4 Mains/power cord socket
- 5 Connection for Building Management System (BMS)  
4 channels
- 6 Expansion connector  
(option)
- 7 Connection for intranet

### 3.1.2 Inside the chamber

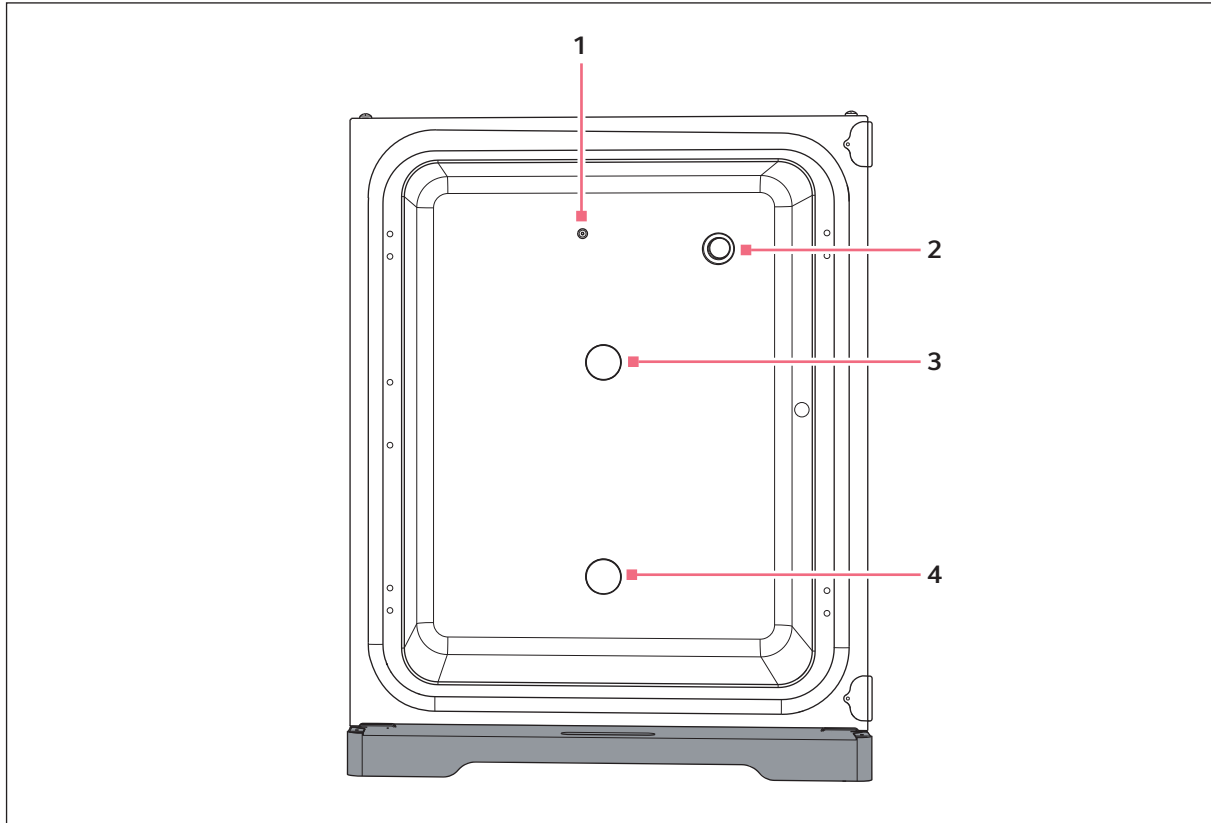 


Fig. 3-4: CellXpert C170: Inside the chamber

**1** Inlet for CO<sub>2</sub> gas

**2** CO<sub>2</sub> sensor

**3** Upper access port

**4** Lower access port

### 3.1.3 Inner door

The standard CellXpert C170 is delivered with a non-segmented inner door.

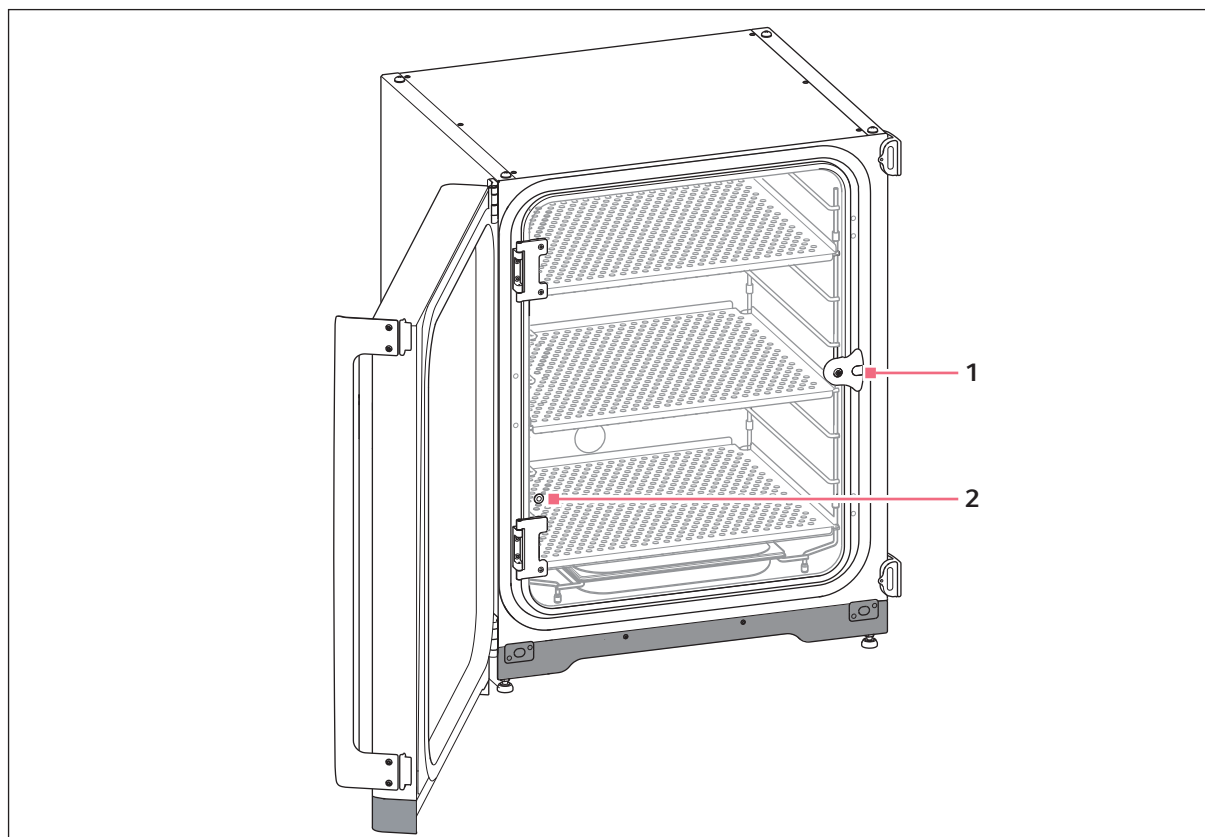 


Fig. 3-5: Non-segmented inner door

1 Inner door latch

2 Sample port

### 3.1.4 Segmented inner doors (options)

There are two options available:

- Inner door with 4 door segments
- Inner door with 8 door segments

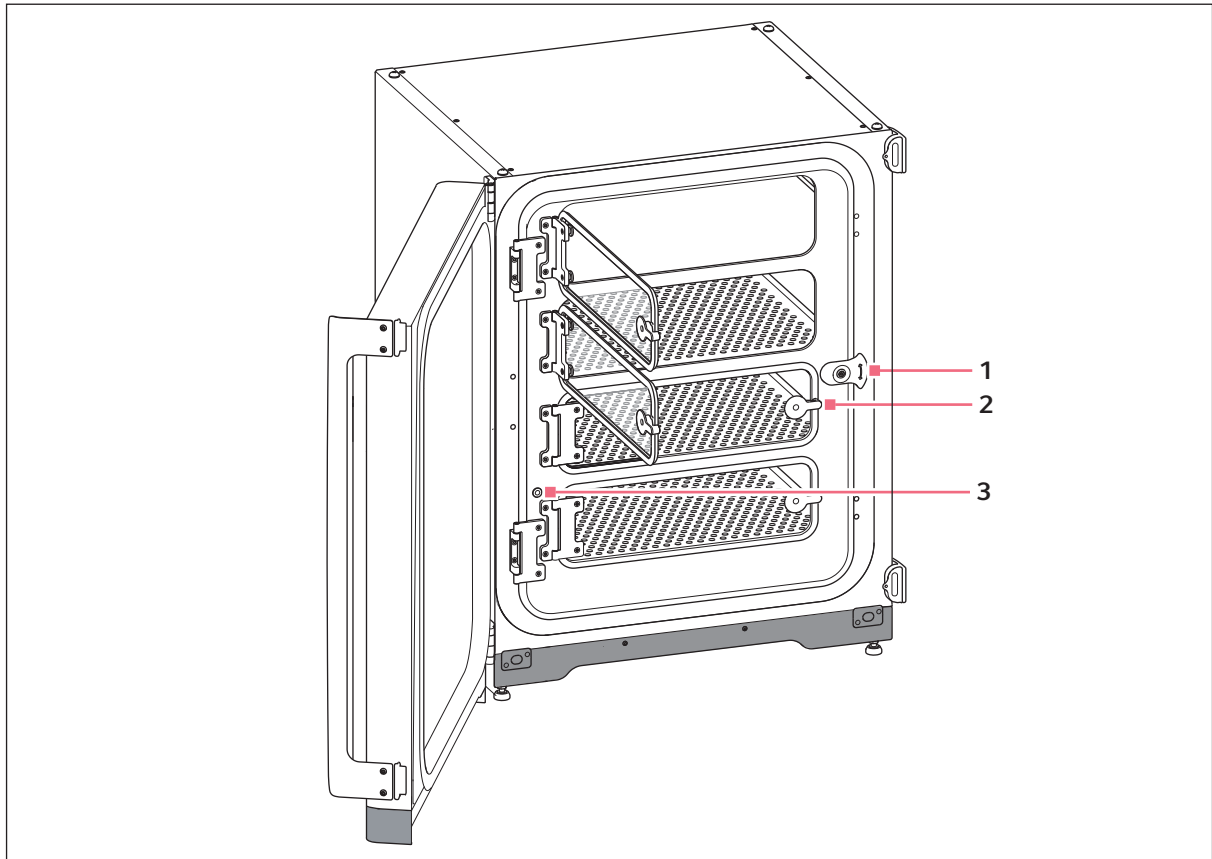 


Fig. 3-6: Inner door with 4 door segments

**1 Inner door latch**

**2 Door segment handle**

**3 Sample port**

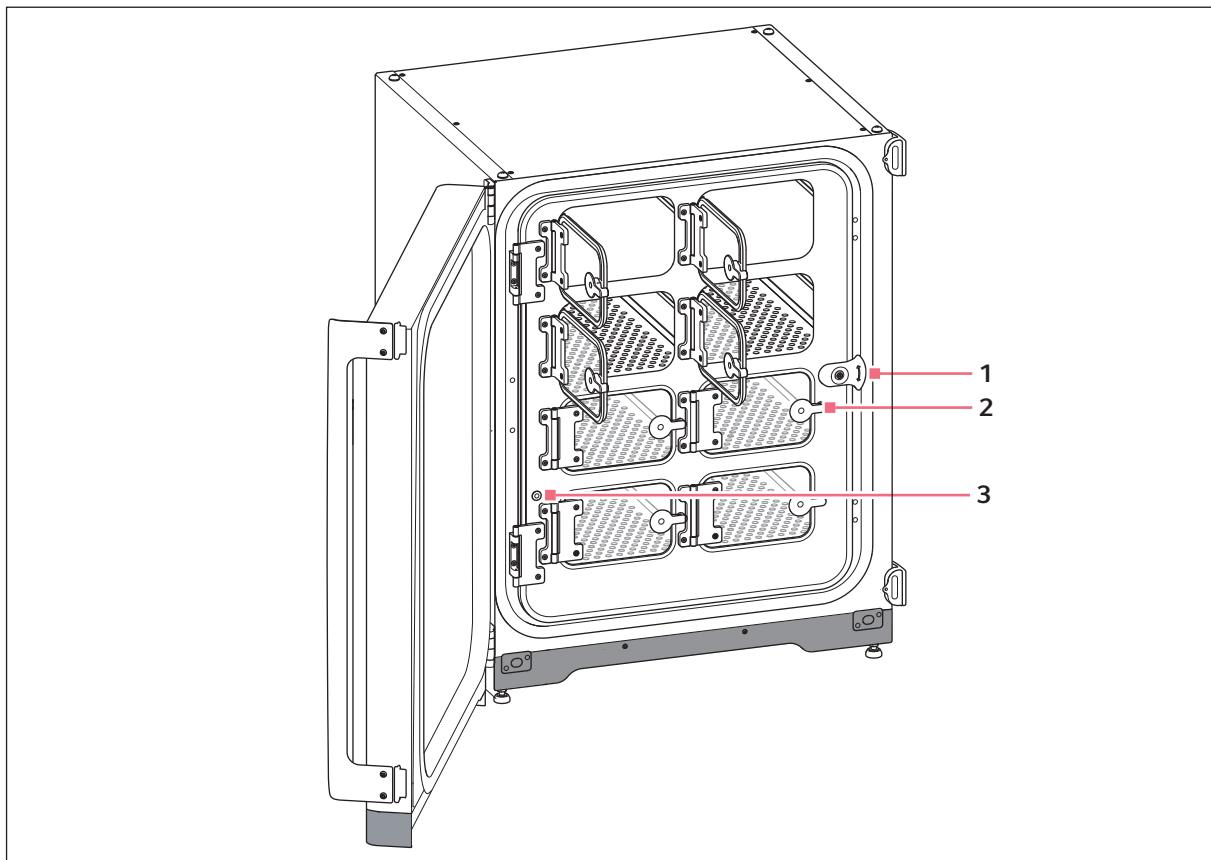 


Fig. 3-7: Inner door with 8 door segments

**1 Inner door latch**

**3 Sample port**

**2 Door segment handle**

### 3.1.5 Connectivity

CellXpert C170 can be integrated into the Eppendorf connectivity solution: VisioNize® allows you to manage connected devices. It enables remote monitoring of device performance and notification of important events by e-mail. Detailed information regarding VisioNize can be found on the website [www.eppendorf.com](http://www.eppendorf.com).

Accessories are required for connecting to VisioNize (see *Connectivity on p. 74*).

**Product description**

CellXpert® C170

English (EN)

**3.2 Delivery package**

- ▶ Check whether the delivery is complete.
- ▶ Check all parts for transport damage.
- ▶ To safely transport and store the device, retain the transport box and packing material.

Report any damage to the carrier and to your local Eppendorf sales order department immediately.

Quantity	Description	Notes
1	Device	Provided
1	Operating manual	Provided
1	Information on performing a risk assessment for the operation of incubators with CO <sub>2</sub> and N <sub>2</sub>	Provided
3	Non-tip perforated shelf	Installed
1	Shelf rack	Installed
1	Water tray	Installed
2	Plug for access port	Installed
1	Mains/power cord	Packed in box inside outer carton
1	10 mm (0.4 in) outer diameter tubing with 6.5 mm (0.2 in) inner diameter with in-line gas filter Length: 3 m	Packed in accessory kit
4	Lifting handle	Packed in accessory kit
4	Cover caps	Packed in accessory kit
3	Spare shelf rack foot	Packed in accessory kit
3	Spare shelf rack spacer	Packed in accessory kit
4	Silicone foot	Packed in accessory kit
1	Safety fastening kit	Packed in accessory kit
1	BMS plug	Packed in accessory kit
2	Open-end wrench for adjusting the feet (8 mm and 13 mm)	Packed in accessory kit
4	Non-slipping cap for adjustable feet	Packed in accessory kit

## 4 Installation

### 4.1 Utilities requirements

The following utilities requirements are needed for operation:

Utility	Requirement
Electricity	Use an earthed/grounded mains/power supply which corresponds to the electrical prerequisites on the name plate. The mains/power supply has to be equipped with a residual current circuit breaker.
Mechanical	Use the safety fastening kit for fixing the incubator or 2 stacked incubators to the wall.
CO <sub>2</sub> gas	Cylinder with 100 % CO <sub>2</sub> vapor withdrawal, together with a two-stage regulator for pressure control between 0.05 MPa and 0.15 MPa (7.2–21.8 psi, 0.5–1.5 bar)



Keep the packing and the transport securing device for later transport or storage.

### 4.2 Selecting the location



#### CAUTION! Lack of safety due to humid storage and transport conditions

- ▶ Evaluate the device for condensation, when received and unpacked for installation.
- ▶ If condensation due to storage and transport in humid conditions has occurred, allow the device to dry out for 12 hours in an environment of 18–28 °C and 20–80 % relative humidity. Only with a drying-out process is the device able to meet safety requirements.



#### NOTICE! Damage due to overheating

- ▶ Do not place the device close to sources of heat (e.g., radiator, drying cabinet).
- ▶ Do not expose the device to direct sunlight.
- ▶ Ensure that all sides of the device are in an adequate distance from the wall and adjacent devices to guarantee unobstructed air circulation.



The mains/power switch and the disconnecting device for the mains/power line must be easily accessible during operation (e.g., a residual current circuit breaker).



The main gas valve must be easily accessible during operation.



Do not place the incubator directly on the floor as it will aspirate dust.

The CellXpert C170 fits on the workbench, under a workbench or it can be double-stacked to save space. Select a level surface capable of withstanding the operating weight of the incubator. The actual operating weight depends on both the options installed, and the material stored in the incubator.

**Minimum floor space required**

- Width: 81 cm (31.9 in)
- Depth: 60 cm (23.6 in)
- Height: 95 cm (37.4 in)

**Optimal distance**

- 15 cm (6 in) at the door hinge side (opening of 90°)
- 10 cm (4 in) at the opposite side for mounting the lifting handles

**The correct location features**

- a minimum ventilation clearance of 5 cm (2 in) to the left and to the right
- a minimum ventilation clearance of 5 cm (2 in) upward
- a minimum ventilation clearance of 3 cm (1.2 in) at the rear side
- a minimum clearance of 5 cm (2 in) on the right side to use the mains/power switch
- protection from direct sunlight
- protection from vibrations
- a clear distance to heat sources, e.g., heaters, autoclaves, or drier compartments
- a clear distance to airflow of heating, air-conditioning ducts, or other drafts
- a clear distance to cold sources, e.g., ultra-low temperature freezers
- an even, stable ground to avoid the device falling down

**The electrical connections feature**

- a matching of the mains/power connection with the specifications on the name plate
- access to the cutting unit of the power system circuit (to unplug the mains/power cord) during operation

Unplug the device to completely disconnect it from the power source. Install the device in a way that allows easy access to the mains/power plug in case of emergency.



### 4.3 Positioning the incubator

---



**WARNING! Danger due to strong magnetic field**

Magnetic fields may affect pacemakers and defibrillators. Pacemakers may be reset.

- ▶ Keep a distance of at least 20 cm from the magnet.



**CAUTION! Risk of injury from lifting and carrying heavy loads**

- ▶ At least 4 people are required to safely lift the incubator.
- ▶ Use a transport aid for transporting the incubator.



**CAUTION! Risk of personal injury**

- ▶ The incubator has a high center of gravity. Make sure that it does not topple over when it is moved.



**NOTICE! Damage to the incubator**

Lifting the incubator by the door will cause permanent damage to the incubator.

 
- ▶ Lift the incubator only by the lifting handles.
- ▶ Never lift the incubator by its door.



**NOTICE! Damage to the incubator**

Pushing, pulling, or turning the incubator on its feet and over barriers will cause damage to the incubator feet.

- ▶ Only lift the incubator by the lifting handles.
  - ▶ At least 4 people are required to safely lift the incubator.
  - ▶ Check if the lock nuts are tightened to the bottom plate of the incubator.
-

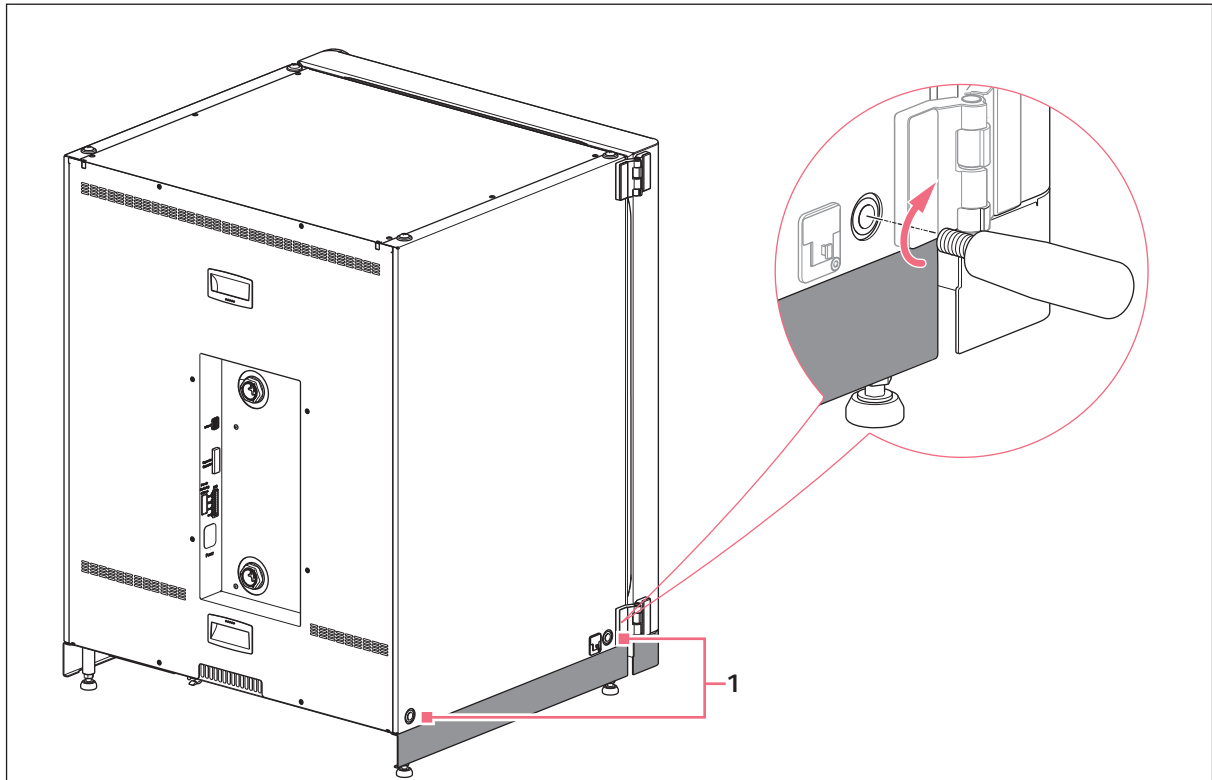

### 1 Holes for lifting handles

1. Install the 4 lifting handles into the tapped holes.
2. Carefully move the incubator to the operational location using the lifting handles.
3. Check to ensure that the door cable is not pinched and may be moved.

For non-slip application use the supplied non-slipping caps:

1. Lift the incubator on one side with the lifting handles.
2. Place a non-slipping cap under each of the 2 incubator feet.
3. Repeat the procedure on the other side of the incubator.
4. Remove the lifting handles and store them for further use.
5. Install the cover caps into the tapped holes on both sides of the incubator.

## 4.4 Initial setup

### 4.4.1 Leveling the incubator

Prerequisites

A spirit level with the ends facing to the left and to the right is placed on one shelf.



Do not place the spirit level on the housing.



**NOTICE! Risk of material damage**

Due to an unlevelled device, it is possible that not all cells are covered with the medium. This could cause the loss of sample.

 
 
 
- ▶ Level the device by adjusting its feet.



**NOTICE! Damage to the incubator**

The feet may bend if they are turned out too far.

- ▶ Turn out the feet less than 2 cm.
- ▶ Tighten the lock nut on each foot.

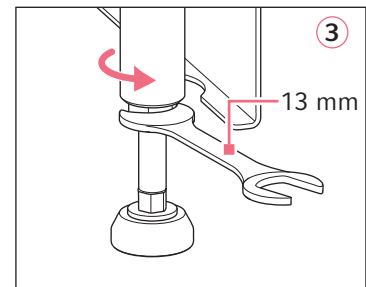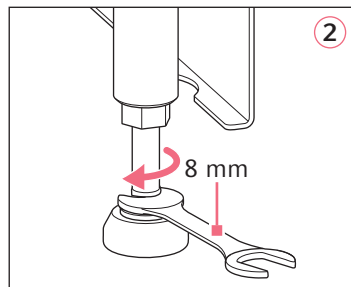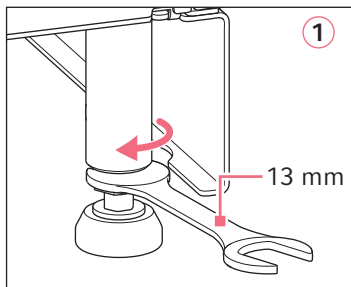

1. Loosen the lock nut with the supplied wrench of 13 mm.
2. Adjust the leveling feet with the wrench of 8 mm until the incubator is level and stable.
3. Turn the spirit level so that the ends face forward and rearward.
4. Level the incubator by adjusting the height of the feet.
5. Place the spirit level on other shelves. Adjust the height of the feet if necessary.
6. Lock the leveling feet by tightening the lock nuts on each foot with the wrench of 13 mm.

#### 4.4.2 Fixing the incubator



**WARNING! Risk of personal injury and equipment damage**

Single devices or stacked devices on the stacking stand may tip over if not secured with the safety latch.

 
- ▶ Secure single devices or two stacked devices on the stacking stand to the wall with the safety latch.




**WARNING! Risk of personal injury and equipment damage**

When moving a stack of two incubators, the upper incubator may topple, if it is still fixed to the wall.


- ▶ Disengage the safety latch before moving the incubators.

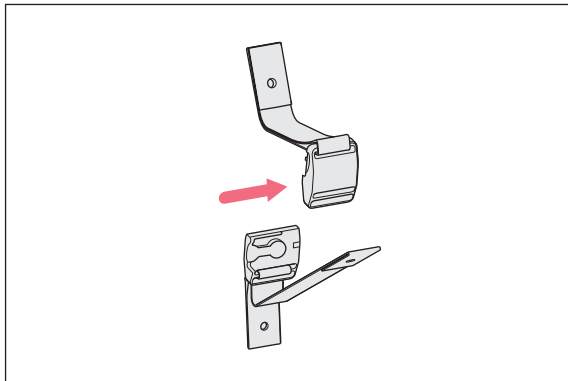

 
1. Disconnect the upper and the lower part of the magnetic safety latch by pushing them aside from each other.

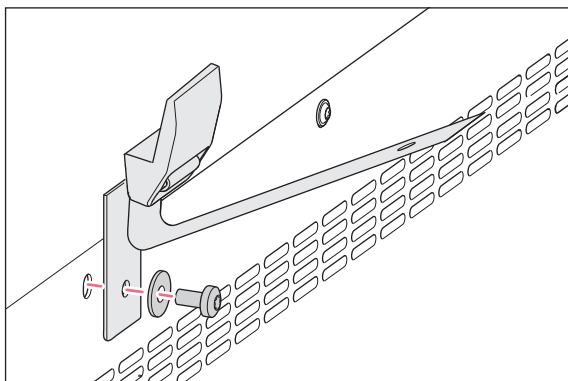

 2. To attach the lower part of the safety latch to the top side of the incubator, use the spare part screw M4x8, Torx 20, and a washer.

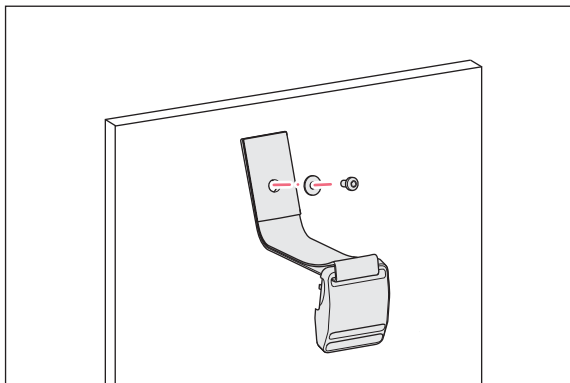

3. Attach the other part of the safety latch and a washer to the wall. The screw must have a pullout strength of at least 250 N (25 kg).

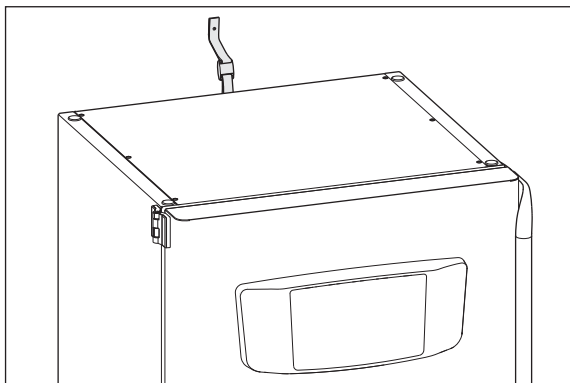 

4. Click the two parts of the magnetic safety latch together.

5. Fasten the belt. Do not fasten too tightly.

## 4.5 Making connections

### 4.5.1 Electrical connection



#### **WARNING! Risk from incorrect voltage supply.**

- ▶ Only connect the device to voltage sources which correspond with the electrical requirements on the name plate.
- ▶ Only use earth/grounded sockets with a protective earth (PE) conductor.
- ▶ Only use the mains/power cord supplied.



#### **WARNING! High voltage**

- ▶ Before taking this device in operation, always make sure that this equipment is properly earthed / grounded by means of the supplied mains/power cord.



Do not use a multiple socket extension cord.

- ▶ Make sure that the voltage requirements match the information on the name plate.

- ▶ Incubators with 100 V – 127 V: Connect only 1 device to 1 fuse.
- ▶ Incubators with 220 V – 240 V: Connect up to 2 devices to 1 fuse.
- ▶ Use the mains/power cord supplied to connect the incubator to the correct mains/power supply voltage.

#### 4.5.2 Gas connection

---



**DANGER! Unconsciousness and death by elevated levels of CO<sub>2</sub>**

Elevated levels of CO<sub>2</sub> may be found in the operating area of the CO<sub>2</sub> incubator.

- ▶ Wear personal protective equipment.
  - ▶ If the laboratory is not properly ventilated, use a CO<sub>2</sub>/O<sub>2</sub> alarm system.
  - ▶ Check the tube connection system with a leakage test.
  - ▶ Read the *Information on performing a risk assessment for the operation of incubators with CO<sub>2</sub> and N<sub>2</sub>* from Eppendorf SE.
- 



**WARNING! Lack of safety due to incorrect gas installation or insufficient ventilation**

- ▶ Only trained personnel may install and connect the gas tubing.



**WARNING! Risk of suffocation**

- ▶ Observe the national guidelines on handling gases and on the equipment and operation of laboratories.
  - ▶ Prevent a too high concentration of CO<sub>2</sub> in breathing air while working in the laboratory.
- 



**NOTICE! Risk of material damage**

The gas tubing and in-line gas filter will burst or crack due to high pressure.

- ▶ Incoming CO<sub>2</sub> gas pressure must not exceed 0.15 MPa (1.5 bar, 21.8 psi).
- 



The main gas valve must be easily accessible during operation.



Only use dry gas.



Do not bend the gas tubing.

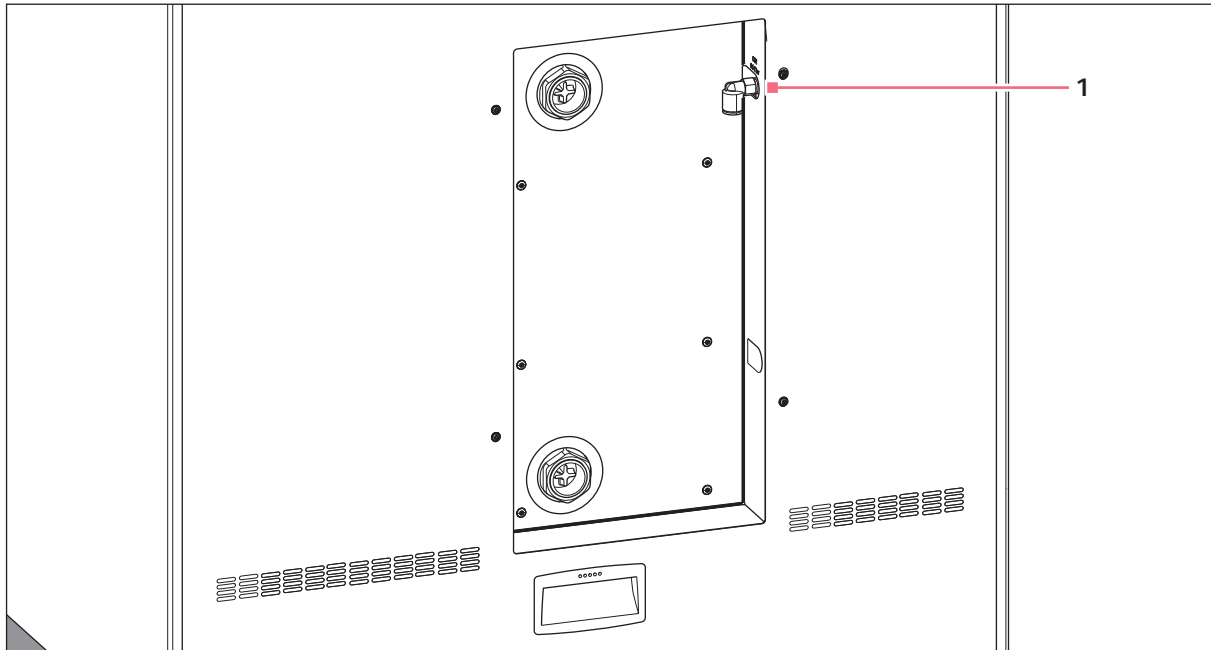 


Fig. 4-1: Connection at the rear of CellXpert C170

### 1 CO<sub>2</sub> tube connector

1. Attach the longer part of the supplied gas tubing to the pressure regulator outlet. Ensure that the gas supply is connected to the *INLET* side of the in-line gas filter. Attach the shorter part of the supplied gas tubing to the CO<sub>2</sub> tube connector at the rear of the incubator. Push the gas tubing into the tube connector until it stops. Check if the gas tubing is fixed by lightly pulling on it. It must not move. Secure the connected end at the pressure regulator.
2. A large-size cylinder of CO<sub>2</sub> with vapor withdrawal is required to supply the incubator. The cylinder controls primary gas pressure. Fitting a two-stage CO<sub>2</sub> pressure regulator is recommended.
3. Check the pressure settings of the CO<sub>2</sub> connections.



A default pressure setting for CO<sub>2</sub> of 0.1 MPa (14.5 psi, 1 bar) or in the range of 0.05–0.15 MPa (7.2–21.8 psi, 0.5–1.5 bar) is recommended, (see *Preparing for operation on p. 35*).

4. To disconnect the gas tubing, switch off the gas pressure and press down the small ring of the tube connector and pull out the gas tubing.

### 4.5.3 Ethernet connection



Only connect devices that meet the safety requirements defined in IEC 60950-1.

The device is equipped with an Ethernet interface. The interface allows you to connect the device to an external monitoring system, e.g., a building management system or a laboratory management system. The interface provides data about the current status and the identity of the device. Contact your local Eppendorf partner for more technical information. Connections must have a double or reinforced insulation, according to DIN EN 61010-1.

Use CAT 5 STP with shielded RJ45 connectors as network cable. The cable must be connected to a grounded RJ45 jack.

### 4.6 BMS relay contact alarm



Only connect devices that meet the safety requirements defined in IEC 60950-1.

The connection to the BMS (Building Management System) allows the centralized monitoring of the device. The alarm sources cannot be changed.

The system is activated by alarm conditions:

- temperature alarm
- CO<sub>2</sub> alarm
- warnings
- errors
- power failure

The power failure alarm cannot be switched off. If mains/power supply voltage fails or the device is being switched off, all relays switch to alarm: Common and normally open contacts are connected.

The system is connected via a 12-pin connector at the rear of the incubator. The matching plug is provided.

Connect the device to the BMS with an unshielded cable harness of single-conductor or multi-conductor type with a cross section of AWG 28-16 or 0.08-1.5 mm<sup>2</sup>. Mount the ferrite core to the cable as described in the instruction for use for the ferrite core.

The maximum cable length must be shorter than 30 m.



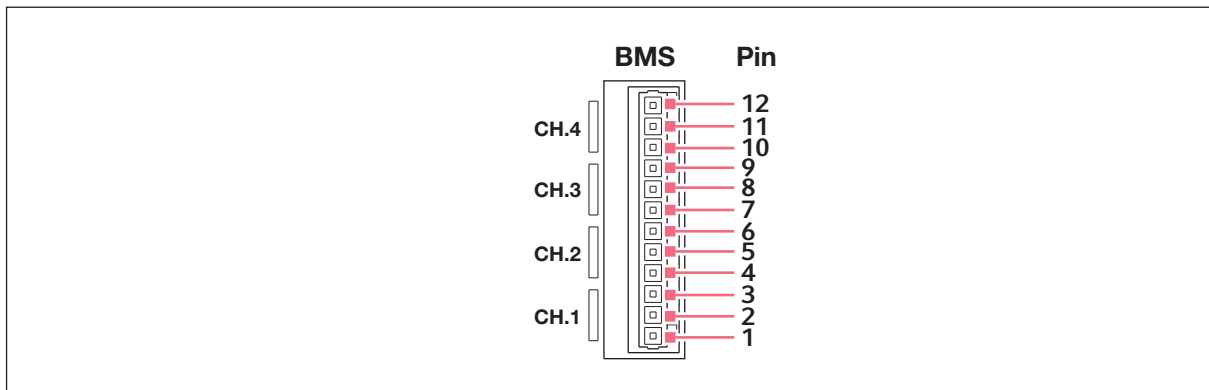 


Fig. 4-2: BMS connector

Pin	Designation
1	Channel 1 common
2	Channel 1 normally closed
3	Channel 1 normally open
4	Channel 2 common
5	Channel 2 normally closed
6	Channel 2 normally open
7	Channel 3 common
8	Channel 3 normally closed
9	Channel 3 normally open
10	Channel 4 common
11	Channel 4 normally closed
12	Channel 4 normally open



The relays must not be operated at more than 2 A and 30 V DC/AC.

Tab. 4-1: Default settings are:

Channel 1 (relay 1)	All temperature alarms
Channel 2 (relay 2)	All CO <sub>2</sub> alarms
Channel 3 (relay 3)	All warnings
Channel 4 (relay 4)	All errors

The alarm sources for the channels cannot be changed.

#### 4.6.1 Incubator operating with and without alarm

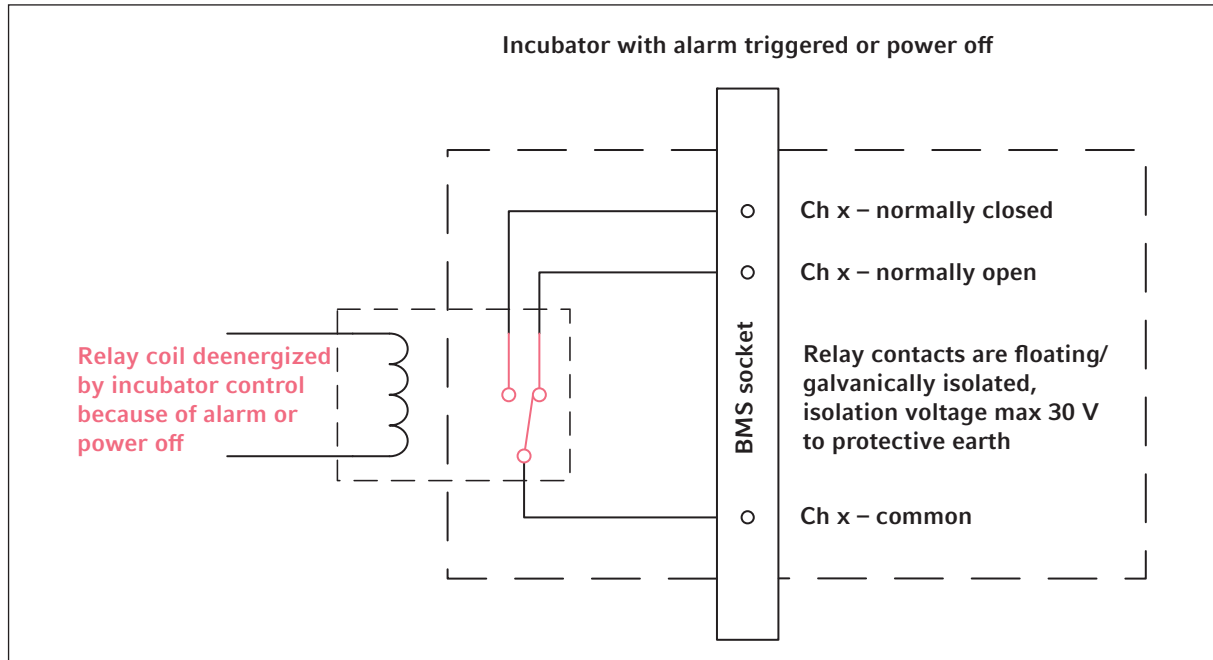 


Fig. 4-3: Incubator operating with alarm

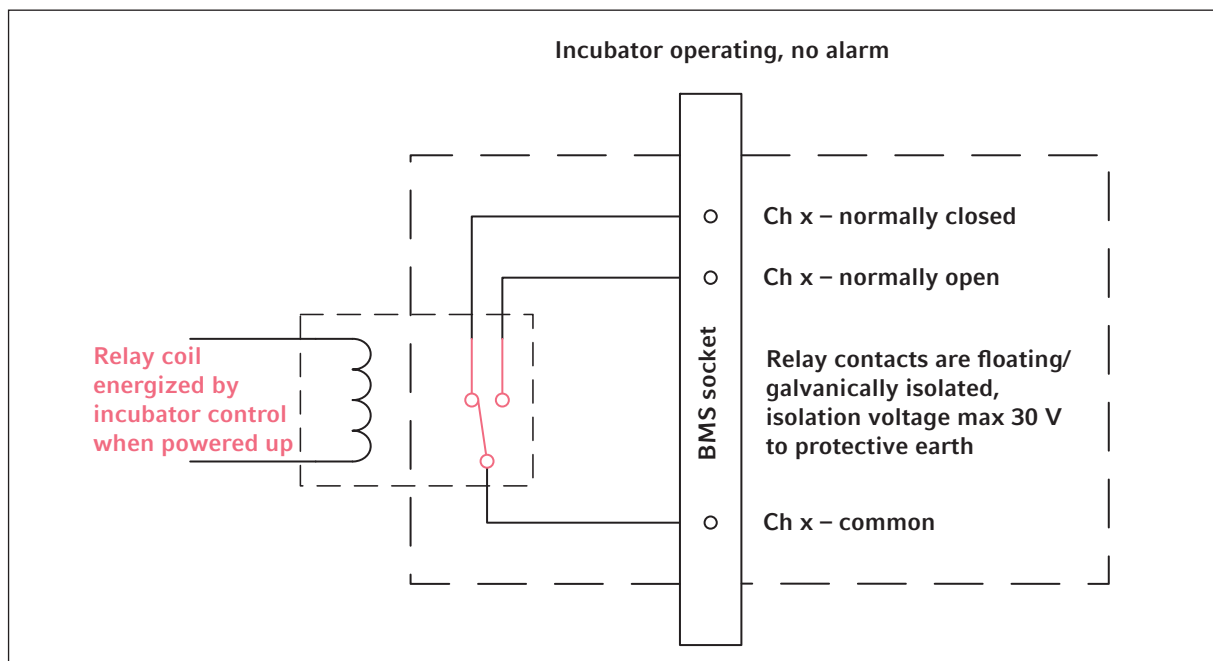 


Fig. 4-4: Incubator operating without alarm

## 5 Operation

### 5.1 Preparing for operation



#### **DANGER! Unconsciousness and death by elevated levels of CO<sub>2</sub>**

Elevated levels of CO<sub>2</sub> may be found in the operating area of the CO<sub>2</sub> incubator.

- ▶ Wear personal protective equipment.
- ▶ If the laboratory is not properly ventilated, use a CO<sub>2</sub>/O<sub>2</sub> alarm system.
- ▶ Check the tube connection system with a leakage test.
- ▶ Read the *Information on performing a risk assessment for the operation of incubators with CO<sub>2</sub> and N<sub>2</sub>* from Eppendorf SE.



#### **NOTICE! Damage to electronic components due to condensation**

Condensate can form in the device after it has been moved from a cool environment to a warmer environment.

- ▶ After installing the device, wait for at least 12 hours. Only then connect the device to the mains/power supply.



#### **NOTICE! Risk of material damage**

The gas tubing and in-line gas filter will burst or crack due to high pressure.

- ▶ Incoming CO<sub>2</sub> gas pressure must not exceed 0.15 MPa (1.5 bar, 21.8 psi).



After switching on the incubator, sensors have to initialize. It may take a few minutes until values are displayed.

1. Using the mains/power cord provided, connect the incubator to an earthed/grounded mains/power supply.
2. Turn on the CO<sub>2</sub> gas supply with the pressure regulator. Set the gas pressure to 0.1 MPa (1 bar, 14.5 psi).



- The CO<sub>2</sub> gas pressure range is adjustable between 0.05 MPa (flow pressure; 0.5 bar; 7.2 psi) and 0.15 MPa (pressure at rest; 1.5 bar; 21.8 psi).
- Open the stop valve completely to ensure an adequate volume flow.
- Ensure that the gas pressure and the volumetric gas flow rate are sufficient, especially if more than one device is connected to the CO<sub>2</sub> gas source.



- The chamber setpoints are pre-programmed at 37 °C and 5 % CO<sub>2</sub>.
- The CO<sub>2</sub> sensor needs 30 minutes for initialization after the switch-on of the device. No process value is displayed during the initialization phase.
- If power is interrupted to the incubator long enough for the temperature to drop below the setpoint, the CO<sub>2</sub> valve is deactivated until the temperature setpoint is achieved again. (The deactivation serves to avoid spurious CO<sub>2</sub> readings while the incubator is below its temperature setpoint).

3. Switch on the incubator using the on/off switch at the right side of the device. Leave the incubator on until the set chamber temperature and CO<sub>2</sub> concentration have been reached.
4. Fill the water tray with 1.5–2.5 L handwarm, steril, distilled water.
5. To allow conditions to stabilize, leave the incubator running for at least 2 hours (preferably overnight).



CO<sub>2</sub> sensors are calibrated at the factory to control accurately at 5 % CO<sub>2</sub> and 37 °C. Changing the temperature or the CO<sub>2</sub> setpoint leads to deviations in accuracy.

## 5.2 Functions and limitations

### 5.2.1 Temperature management

The temperature is adjustable from 22 °C to 50 °C. Incubators are meant to operate with 4 °C above ambient temperature at minimum. If the setpoint is below 4 °C above ambient temperature, the incubator tries to adjust the temperature. It is possible that a sensor error occurs after a certain period. Restart the incubator and adjust another setpoint.

Avoid condensation and reduce the temperature setpoint by:

- cooling down the incubator as fast as possible by opening the doors
- emptying and refilling the water tray with water with a maximum temperature of the new setpoint

### 5.2.2 Gas pressure

CO<sub>2</sub> is connected to the tube connector. The gas pressure ranges from 0.05 – 0.15 MPa (7.2 – 21.8 psi, 0.5 – 1,5 bar). If the pressure is out of the range, the following reactions occur at certain values:

Pressure Value	Reaction
> 1.8 bar	The valve closes to protect the device. The CO <sub>2</sub> control is stopped until the pressure is low enough.
< 0.2 bar	An error occurs. The CO <sub>2</sub> control is stopped until the pressure is high enough.

You can switch off the pressure monitor for low gas pressure (see *Switch off the pressure monitor on p. 47*).

### 5.2.3 CO<sub>2</sub>

The CO<sub>2</sub> concentration is adjustable from 0.1 % to 20 %. It is possible to deactivate the gas control and to operate with temperature control only.

If you want to reduce the setpoint for the CO<sub>2</sub> concentration during the operation, let CO<sub>2</sub> escape by opening the outer and the inner door.

The sensors have to reinitialize after a switch-on of the device or after a high temperature disinfection took place. The status *Initializing Sensor* is described in the function areas. It is not possible to adjust a setpoint during this period.

### 5.2.4 Alarms

**Several conditions trigger alarms:**

- Temperature alarm  
is triggered, if the interior temperature exceeds the alarm limits of  $\pm 0.5$  °C
- CO<sub>2</sub> alarm  
is triggered, if the CO<sub>2</sub> concentration exceeds the alarm limits of  $\pm 0.5$  %
- Door alarm  
is triggered, if the outer door was left open too long  
Warning after 30 seconds and alarm after 5 minutes

## 5.3 Opening and closing doors



#### **WARNING! Danger due to strong magnetic field**

Magnetic fields may affect pacemakers and defibrillators. Pacemakers may be reset.

- ▶ Keep a distance of at least 20 cm from the magnet.



#### **CAUTION! Cuts due to broken glass**

A damaged glass door leads to cuts on the hands.

- ▶ Remove the broken glass with a suitable tool.



#### **CAUTION! Risk of personal injury**

- ▶ Before closing the glass door, be sure that the shelves are properly installed inside the chamber. Slamming the glass door against the shelf could cause broken glass and potential injury.
-

### 5.3.1 Opening the inner and the outer door

1. To open the outer door, pull the door handle.  
 The hint "Door open" is displayed on the screen.
2. To open the inner door, pull on the inner door latch.

### 5.3.2 Closing the inner and the outer door

1. Close the inner door until it is fixed by the magnet.



An incorrectly closed door could cause condensation.

2. Close the outer door until it is fixed by the magnets.

## 5.4 Using the water tray



### NOTICE! Risk of material damage

- ▶ To avoid possible damage to the CO<sub>2</sub> sensor, never leave water in the water tray while the incubator is switched off, or when a high temperature disinfection cycle is initiated.



### NOTICE! Risk of material damage due to spilled water

Spilled water could cause corrosion.

- ▶ To avoid possible damage to the device, observe the maximum capacity of the water tray.
- ▶ Do not move the device when the water tray is filled.



- Always leave the water tray in place.
- Use warm, distilled, sterile water only in the water tray. The usage of any other types of water including deionized water may cause corrosion inside the incubator.

1. Fill the water tray with 1.5–2.5 liters of warm, distilled, sterile water.
2. The usage of any biocide in the water tray is not recommended. To reduce the possibility of contamination, empty the tray every 7–14 days, clean it with a solution of 70 % isopropyl alcohol and 30 % distilled water, and then refill it with 1.5–2.5 liters of warm distilled, sterile water.



The humidity level within the chamber is not adjustable. The chamber reaches between 85 % and 95 % relative humidity at 37 °C (depending on ambient humidity) with the water tray.

## 5.5 Using the access ports

It is possible to insert components, e.g., sensors, into the chamber via the access ports.

### Prerequisites

- The component, e.g., sensor, with wire is placed in the chamber.
  - Both of the access ports are closed with the blind plugs.
  - Make sure that the component is not bigger than the inner diameter of 25 mm (0.98 in) of the access port.
1. Remove one of the blind plugs.
  2. Pull the component wire through the open access port.
  3. For optimal gas tightness, make a cut into the cover of the blind plug. Wrap the component wire around the plug.

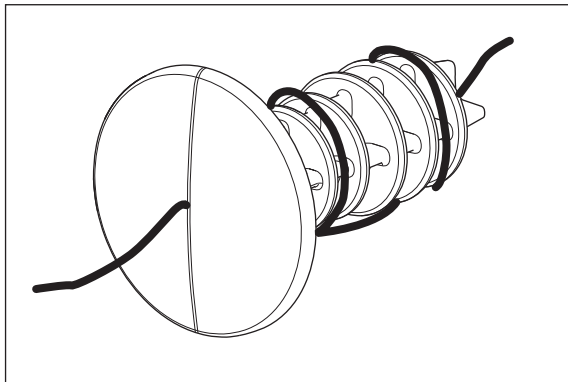 


Fig. 5-1: Wire wrapped around the blind plug

4. Refit the blind plug. Make sure that the plug is securely fixed and flush with the rear panel.
5. Put the end of the wire on the top of the incubator.



Make sure that the access port is cleaned and dried before reinstallation of the plug.

## 5.6 Safety shutdown

---



### **NOTICE! Risk of material damage**

The gas tubing and in-line gas filter will burst or crack due to high pressure.

- ▶ Incoming CO<sub>2</sub> gas pressure must not exceed 0.15 MPa (1.5 bar, 21.8 psi).
- 

### 5.6.1 Temperature

The CellXpert C170 features a shutdown at 10 K over the setpoint of one heat circuit or 5 K below the setpoint according to standard **DIN 12880** (temperature limiter class 1).

- Restart the device.
- If the error occurs again, contact Eppendorf Service.

### 5.6.2 Gas

The inlet gas valve switches off above 1.8 bar (0.18 MPa).

## 5.7 Switching off the device

 
1. Switch off the device.
2. Disconnect the power cord.
3. Switch off the gas pressure.
4. Disconnect the pressure tube.
5. Empty the water tray.
6. Clean the device.
7. Let the incubator dry with opened doors.
8. Let the incubator cool down.



## 6 Overview of operating controls

### 6.1 Home screen overview

The display shows the temperature, the CO<sub>2</sub> percentage, and additional information.

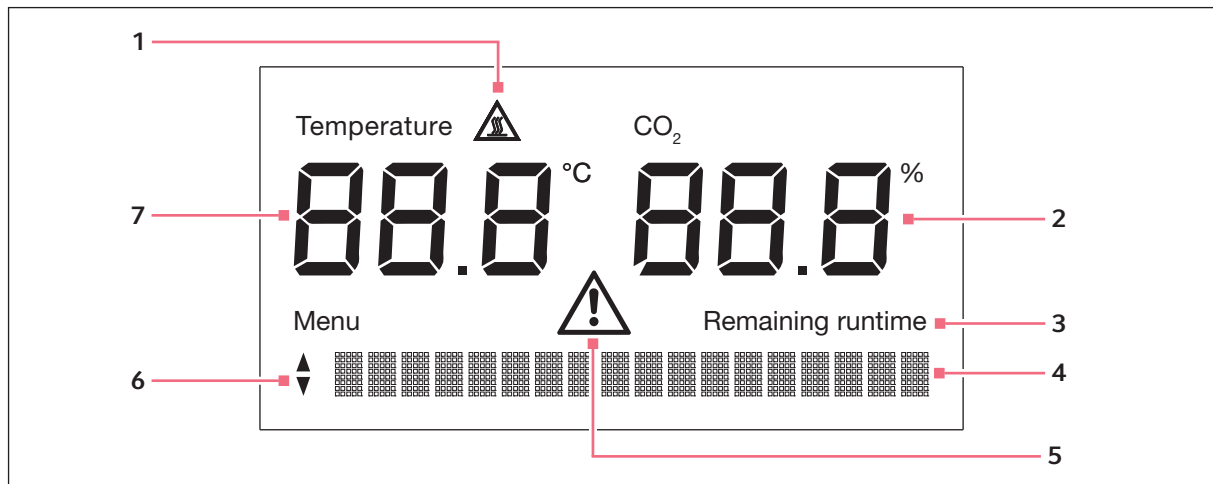

**1 Warning symbol for high-temperature disinfection (HTD)**  
active above 50 °C

**2 CO<sub>2</sub> value in %**

**3 Estimated remaining run time**  
active when using the HTD

**4 Display of menu or settings or error messages**

**5 Warning symbol**  
active when error messages occur

**6 Up-down arrow for menu**

**7 Temperature value in °C**

## 6.2 Home screen in normal operation

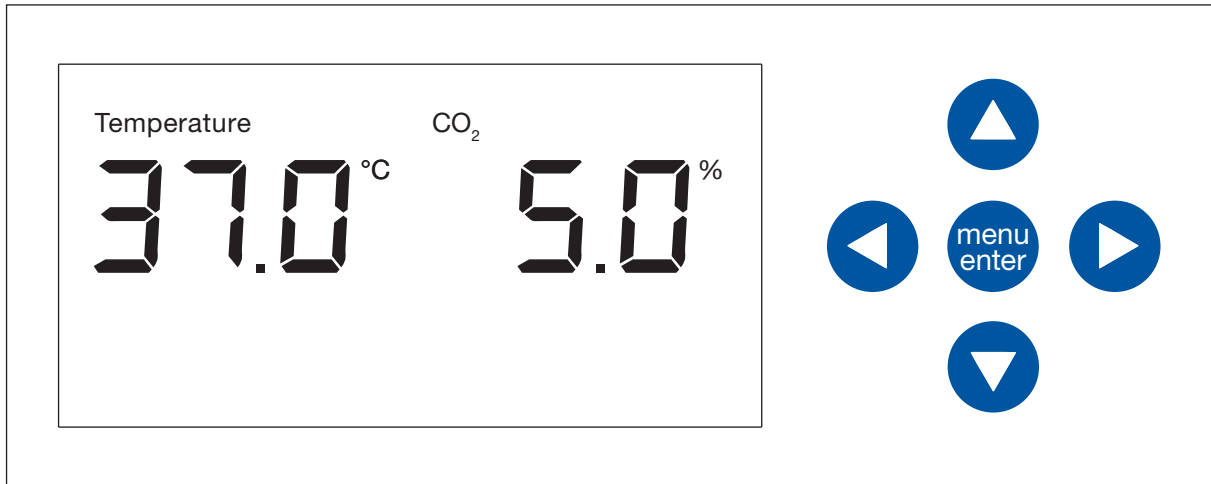 


Fig. 6-1: Home screen and menu arrow keys

The display shows the temperature and the CO<sub>2</sub> percentage. The arrow keys are not usable during normal operation.


## 6.3 Menu

 In the *Menu* area, you can adjust the settings for temperature and CO<sub>2</sub> concentration, and you can start the high-temperature disinfection.

Prerequisites

The *Home* screen is displayed.

- ▶ Press the menu/enter softkey.

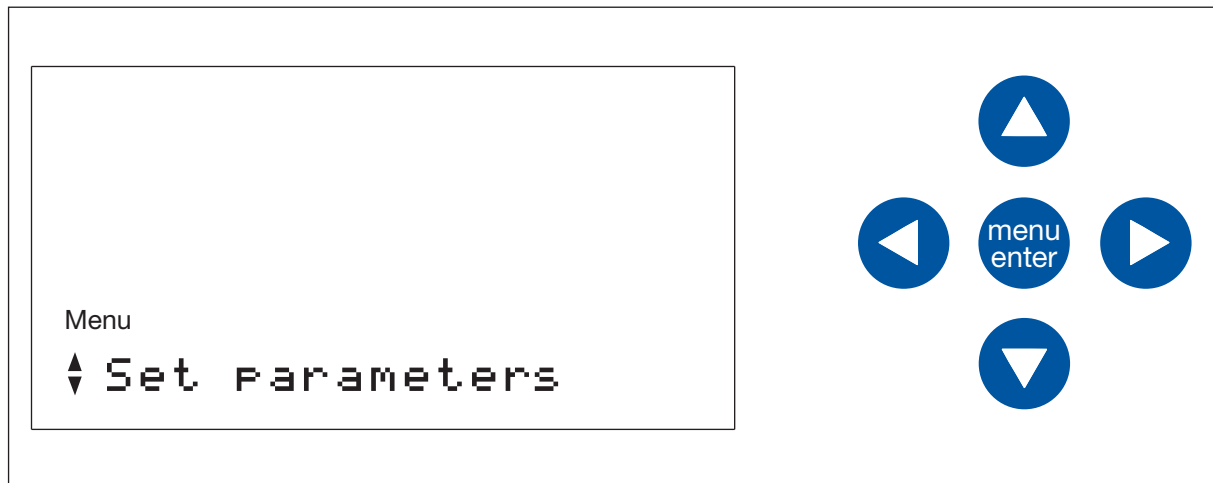

The first menu item *Set parameters* is displayed. You can navigate in the menu with the up and down arrow keys, indicated by the up-down arrows on the display.

Select your menu item with the menu/enter softkey.

The menu items are:

- Set parameter
- Disinfect
- About this device
- Settings
- Service login
- Back

The menu item *Service login* is reserved for authorized service only.

To leave the *Menu* and get back to the *Home* screen, select the menu item *Back* with the arrow keys and the menu/enter softkey.


Alternatively, you can quit every menu item with the left arrow key.

## 6.4 Setting the parameter values

 Prerequisites


The *Home* screen is displayed.

1. Press the menu/enter softkey.

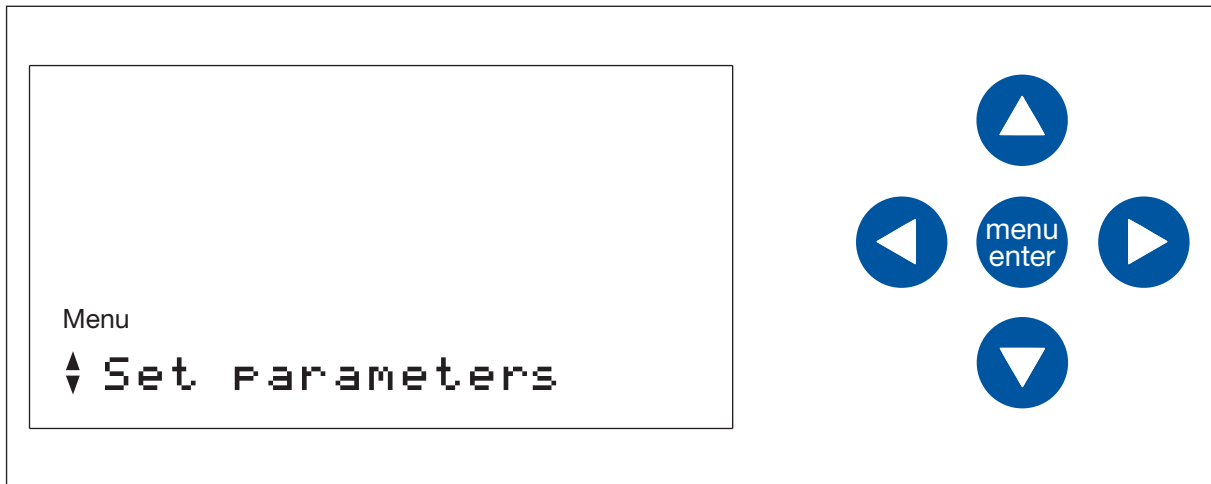


2. Press the menu/enter softkey.

 The parameters are displayed. The adjustable parameter is blinking. To change the value, use the up or the down arrow key.

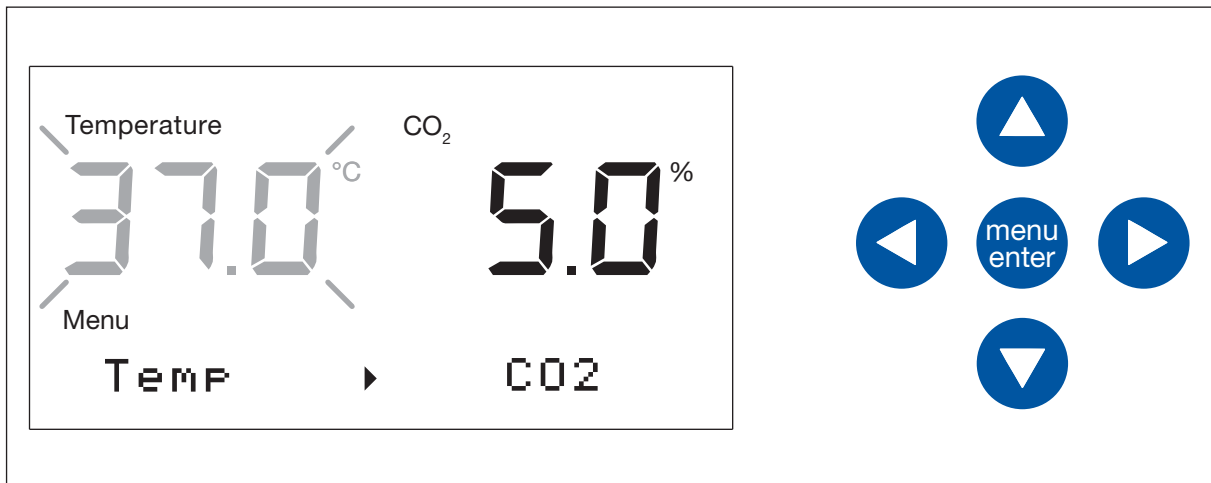

 - The right arrow on the screen indicates that you can change to the parameter on the right by using the right menu arrow key.
- By using the up-down arrow keys, you can set the value.

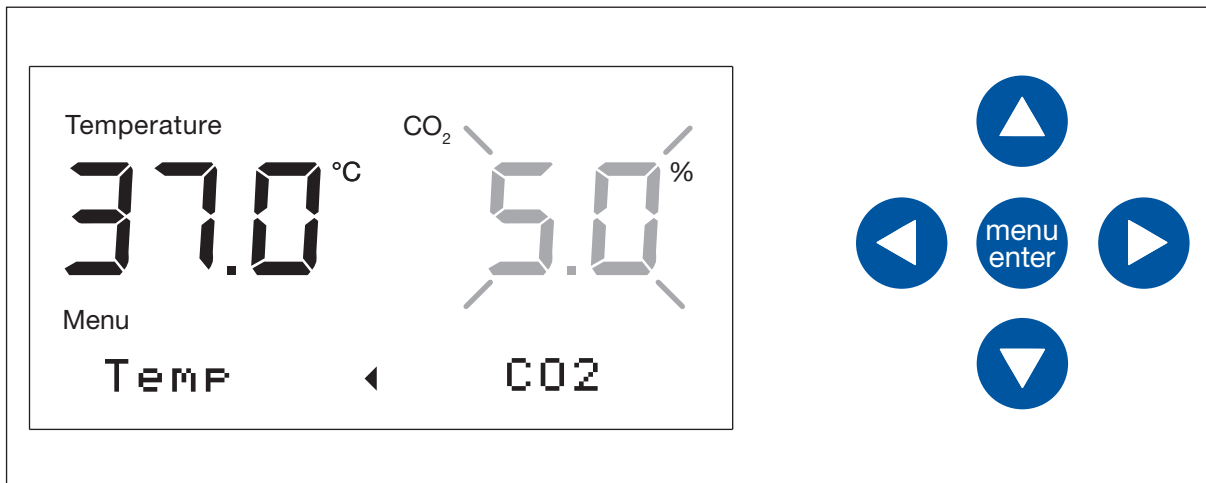

- The left arrow on the screen indicates that you can change to the parameter on the left by using the left menu arrow key.
- By using the up-down arrow keys, you can set the value.

#### 6.4.1 Save the settings

- ▶ Press the menu/enter softkey.  
The *Home* screen is displayed.

#### 6.4.2 Exit without saving

- ▶ Press the left arrow key.  
The *Home* screen is displayed.

### 6.5 Getting device information

 
 
1. To switch to the *Menu*, press the menu/enter softkey.
2. Press the down arrow key 3 times.  
“About this device” appears on the screen.
3. Press the menu/enter softkey.
4. To navigate through the menu items, use the up-down arrow keys:  
Serial number of the device  
Software version of the device  
Name of the device  
Back
5. To quit the menu, select the menu item *Back* and press the menu/enter softkey. Alternatively, you can quit with the left arrow key.  
The *Home* screen appears.

## 6.6 Error notifications


If there are several events at the same time, the most important event notification is displayed. After the confirmation of the first notification, the next notification is displayed. Up to 10 event notifications can be saved.

- ▶ To confirm the first displayed notification, press the menu/enter softkey.
- ▶ To confirm the second displayed notification, press the menu/enter softkey.
- ▶ If, for example, the notification "E292:CO2 pressure..." blinks and a warning sign is displayed: Confirm the notification.

An error notification is displayed until the error is resolved.

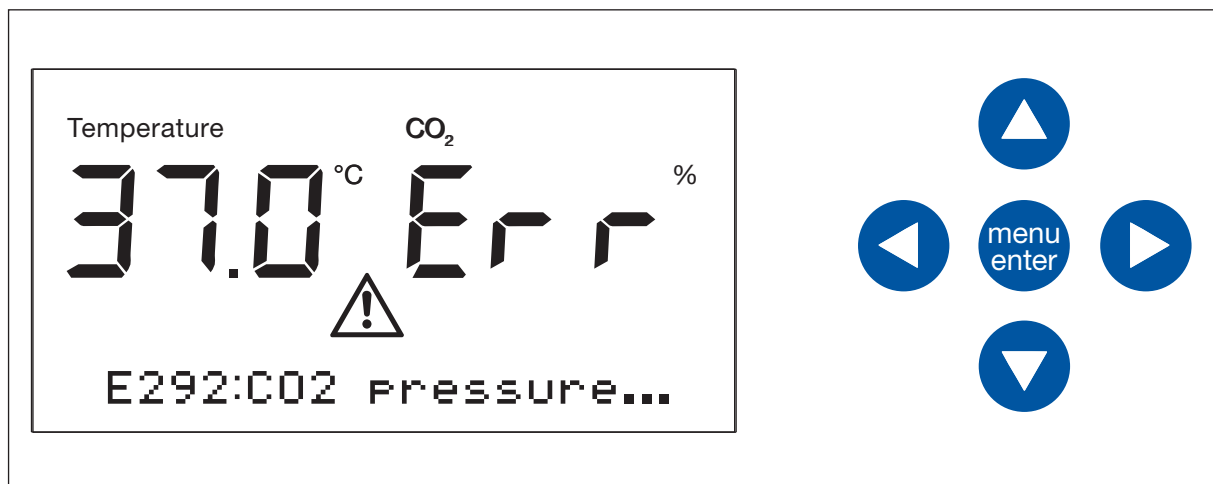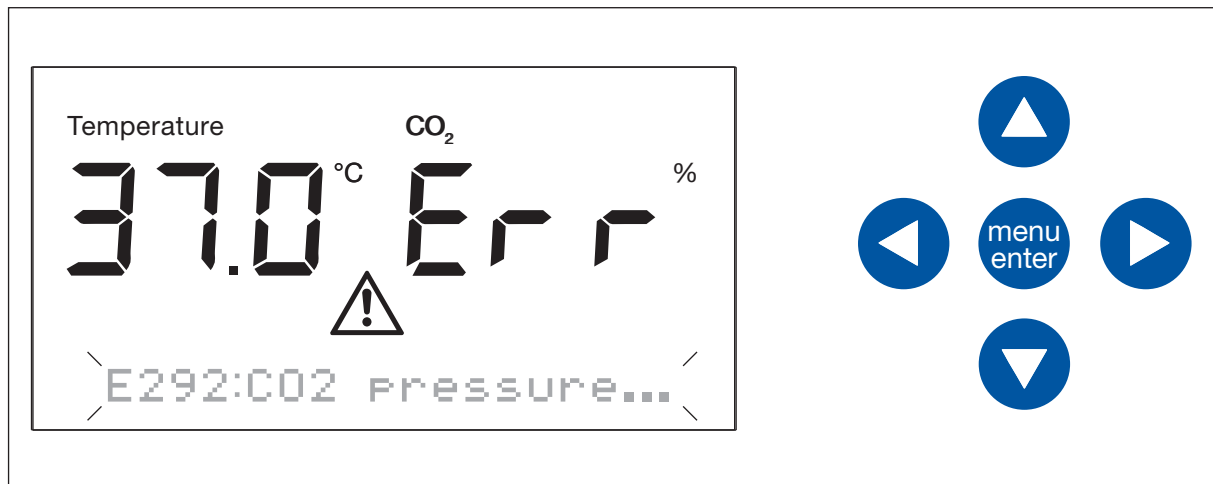

 If you confirm an error notification, but the error is not resolved, a general error hint is displayed:

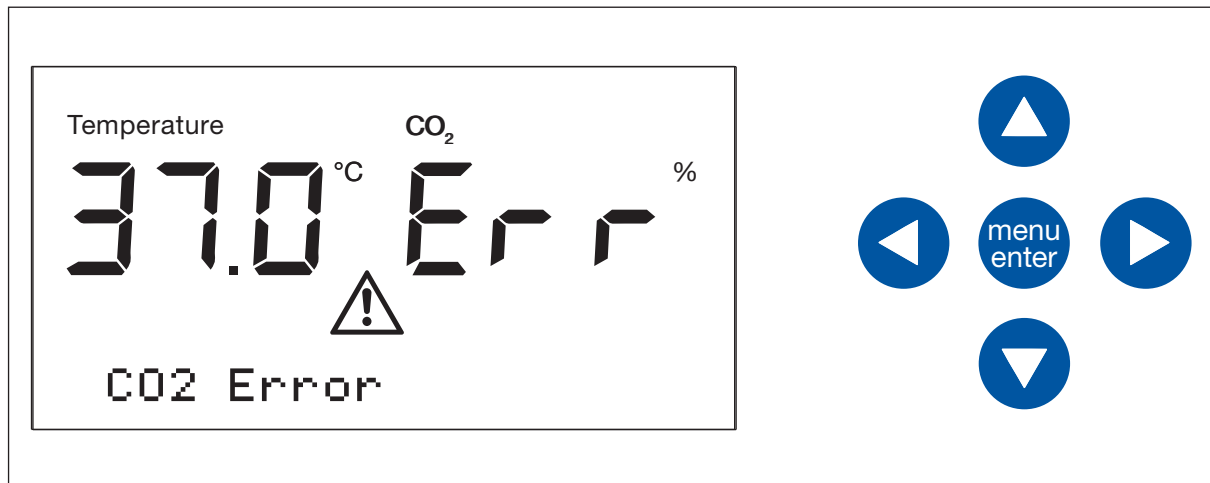

## 6.7 Settings

### 6.7.1 Switch off the pressure monitor

If applications have low or very low pressure, switch off the pressure monitor for low gas pressure to avoid warnings and errors to be generated.



Without the monitoring of the low pressure, other messages may occur. Since the gas system might work beyond the specified conditions (0.05–0.15 MPa), timeout warnings for the gas concentration may occur, followed by error messages.

1. To switch to the *Menu*, press the menu/enter softkey.
2. Press the down arrow key 4 times.  
*Settings* appears on the screen.
3. Press the menu/enter softkey.
4. The setting for the pressure monitor appears.  
*[X] Pressure mon.*
5. To quit the submenu without saving any changes, press the left arrow key.
6. To switch off the pressure monitor, press the menu/enter softkey.  
*[ ] Pressure mon.*
7. To confirm the status, press the menu/enter softkey when *Yes* is blinking.
8. To quit the menu, select the menu item *Back* and press the menu/enter softkey. Alternatively, you can quit with the left arrow key.  
The *Home* screen appears.

## 6.7.2 Switch on the pressure monitor

1. To switch to the *Menu*, press the menu/enter softkey.
2. Press the down arrow key 4 times.  
*Settings* appears on the screen.
3. Press the menu/enter softkey.
4. The setting for the pressure monitor appears.  
*[ ] Pressure mon.*
5. To quit the submenu without saving any changes, press the left arrow key.
6. To switch on the pressure monitor, press the menu/enter softkey.  
*[X] Pressure mon.*
7. To confirm the status, press the menu/enter softkey when *Yes* is blinking.
8. To quit the menu, select the menu item *Back* and press the menu/enter softkey. Alternatively, you can quit with the left arrow key.  
The *Home* screen appears.



## 7 Maintenance

### 7.1 Routine maintenance

#### 7.1.1 General

---



**WARNING! Risk of injury to personnel or damage to equipment!**

- ▶ Do not move 2 stacked incubators for maintenance or cleaning.



**WARNING! Risk of injury to personnel or damage to equipment!**

- ▶ While moving the incubator, ensure that the door is closed.
- ▶ Two trained persons are needed for moving an incubator.
- ▶ Risk of the device falling due to its high center of gravity.



**WARNING! Risk of injury to personnel or damage to equipment**

- ▶ While cleaning or disinfecting/decontaminating the chamber, take care not to break small sensors/other parts or destroy your protective gloves by wiping with too much force.
- 

To ensure that chamber conditions remain stable, minimize the length of time that the door is open. When you open the door, wipe off any condensation that may have formed at the inner seal to avoid condensation build-up.

#### 7.1.2 Daily checks

- Check if the temperature level and the CO<sub>2</sub> level are within the specification.
- Check the reserve pressure in the CO<sub>2</sub> cylinder (normally 725 psi (50 bar) when full). The design of the incubator ensures low consumption of CO<sub>2</sub>. If there is a significant drop at the cylinder pressure, it means that the cylinder is almost empty and should be replaced. Make sure that there are no leaks at any of the connections. This helps to increase the lifetime of the CO<sub>2</sub> supply and to avoid accidentally running out of CO<sub>2</sub>.
- Clean any spills in the chamber immediately.
- Routinely check the screen for any alarms or events that may have occurred.

#### 7.1.3 Weekly checks

Clean and refill the water tray with an appropriate amount of warm, distilled, sterile water. The use of warm water will ensure a rapid return to optimum chamber conditions.

#### 7.1.4 Monthly checks

Clean the exterior and interior of the device.

### 7.1.5 Yearly checks

- Let the sensors be maintained by a qualified service technician.
- Exchange the gas tubing with the in-line gas filter.

## 7.2 Exterior cleaning

---



### **DANGER! Risk of electric shock from spilled liquid**

- ▶ Switch off the device and disconnect it from the mains/power supply before starting cleaning or disinfecting work.
  - ▶ Do not allow any liquids to penetrate the inside of the housing.
  - ▶ Do not spray the housing.
  - ▶ Only connect the device to the mains/power supply, if it is completely dried.
- 



### **NOTICE! Damage due to aggressive cleaning agent or sharp objects**

Incorrect cleaning agents can damage the display, surfaces, and printing.

- ▶ Do not use corrosive cleaning agents, aggressive solvents, or abrasive polishes.
  - ▶ Do not incubate the accessories in aggressive cleaning agents or disinfectants for an extended period of time.
  - ▶ Do not use sharp objects to clean the device.
- 

1. Clean the exterior of the incubator by wiping it over with a soft cloth, moistened with soapy water.
2. Wipe the exterior surfaces again with a rinsed cloth.

## 7.3 Disinfection/Decontamination

---



**WARNING! Danger due to contact with decontamination agent.**

- ▶ Wear protective equipment, gloves, and protective goggles during the cleaning process.
- ▶ Wear respiratory protection when aerosolization is suspected.



**WARNING! Risk of personal injury or damage to equipment due to spilled infectious material**

- ▶ Immediately decontaminate the exterior and the interior of the device, if infectious material was spilled.



**WARNING! Risk of personal injury or damage to equipment**

- ▶ While cleaning or disinfecting/decontaminating the chamber, take care not to break small sensors/other parts or destroy your protective gloves by wiping with too much force.



**NOTICE! Corrosion due to aggressive cleaning agents and disinfectants.**

- ▶ Do not use any corrosive cleaning agents, aggressive solvents or abrasive polishes.
- ▶ Do not incubate the accessories in aggressive cleaning agents or disinfectants for longer periods.



**NOTICE! Risk of material damage**

- ▶ Never use any of the following substances to clean the stainless steel, it will result in damage: sodium azide, aqua regia, iodine, ferric chloride, or sulphuric acid.



**NOTICE! Risk of material damage**

- ▶ Do not spray disinfecting agent inside the chamber. Spraying will lead to sensor damage.
- 

### 7.3.1 Preparing the disinfection/decontamination

The recommended disinfecting agent for use with the incubator is a solution of 70 % Isopropanol or Ethanol with 30 % sterile distilled water.



If you have any further questions regarding the cleaning and disinfection or decontamination or regarding the cleaning fluid to be used, contact your local distributor. The contact details are provided on the back of this manual.

### 7.3.2 Disinfecting the exterior



It is not necessary to switch off and disconnect the device, when cleaning and disinfection are part of the software-guided process of high-temperature disinfection.

1. Switch off the incubator.
2. Unplug the incubator from the mains/power supply.
3. Dampen a clean cloth with the alcoholic solution and wipe down all external surfaces, taking care to keep the alcoholic solution from coming into contact with any mains/electrical outlets or assemblies.

### 7.3.3 Disassembling the interior equipment

1. Remove the water tray from the chamber.
2. Remove the shelves, bottom to top.
3. Remove the tie rod from the shelf racks.
4. Remove the shelf racks.

### 7.3.4 Disinfecting/Decontaminating the interior



It is not necessary to switch off and disconnect the device, when cleaning and disinfection are part of the software-guided process of high-temperature disinfection.

1. Switch off the incubator.
2. Unplug the incubator from the mains/power supply.
3. Clean the water tray by rinsing it in sterile water, wiping it down with the alcoholic solution, and then rinsing it again with sterile water.

 


To avoid liquid come into contact with the sensor or the sensor connection, wring out the cloth.


4. Wipe down the inside of the chamber with the alcoholic solution, and leave it to dry completely.
5. Wipe the internal components of the chamber twice with the alcoholic solution. Wipe off excess liquid and leave it to dry.
6. Wipe the inner door seal with the alcoholic solution, rinse, and leave it to dry.

### 7.3.5 Reassembling the interior equipment

1. Place the shelf racks inside the chamber. Ensure that the shelf rack spacers fit snugly to the side walls.

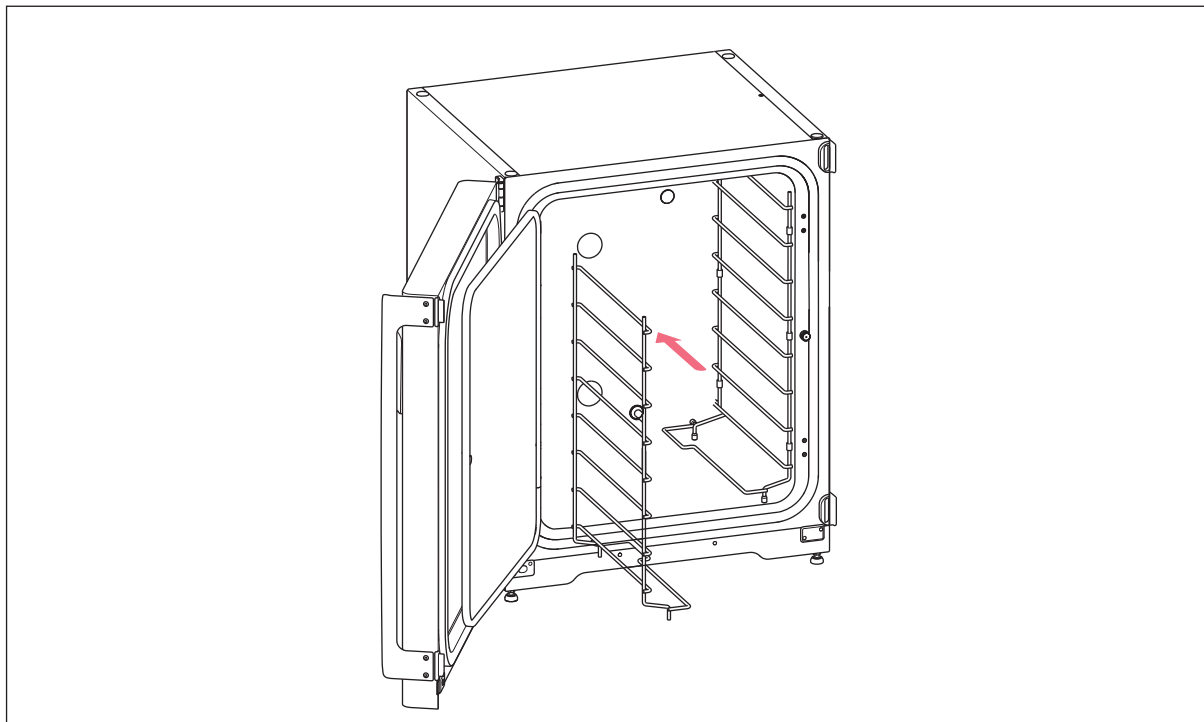

 
2. To stabilize the shelf rack, install the tie rod.

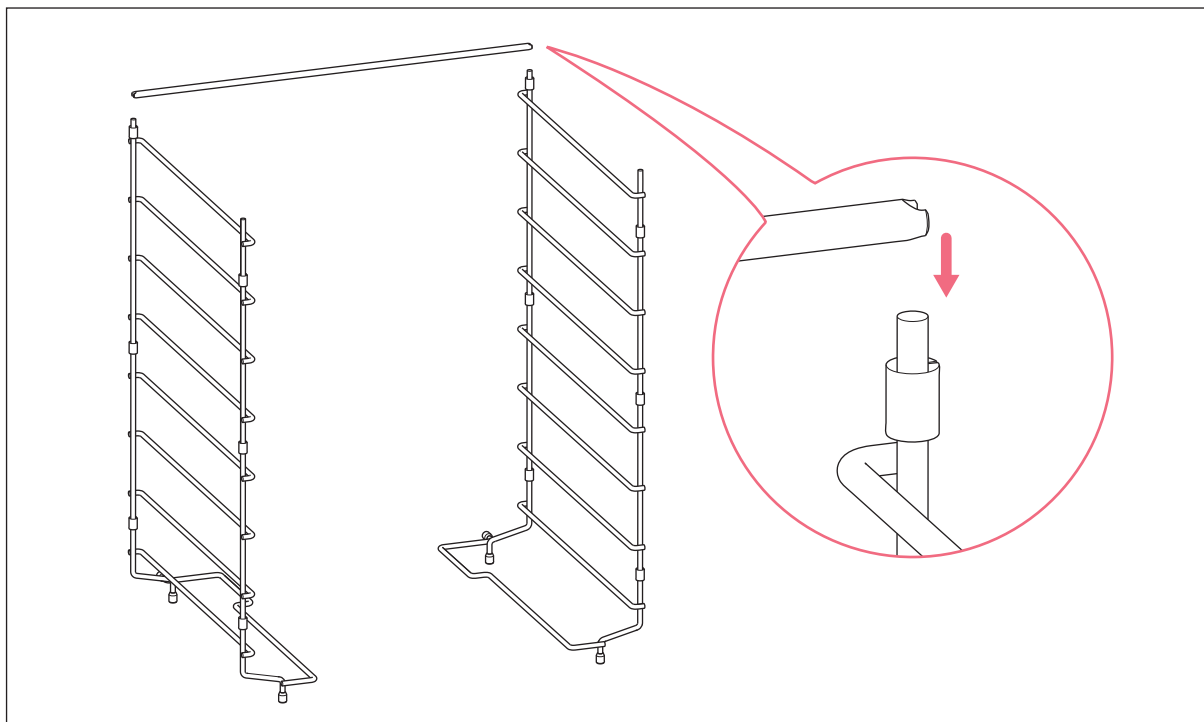



Do not forget to mount the tie rod. Shelves can wobble and samples can be lost, especially when using just one or two shelves.

 3. Install the shelves, top to bottom. Ensure that each shelf's anti-tip groove is properly inserted (faced downward and to the rear of the incubator) onto each of the shelf rack guides.
4. Refill the water tray. Slide the water tray onto the lowest shelf rack support. Ensure that the water tray is pushed fully back.

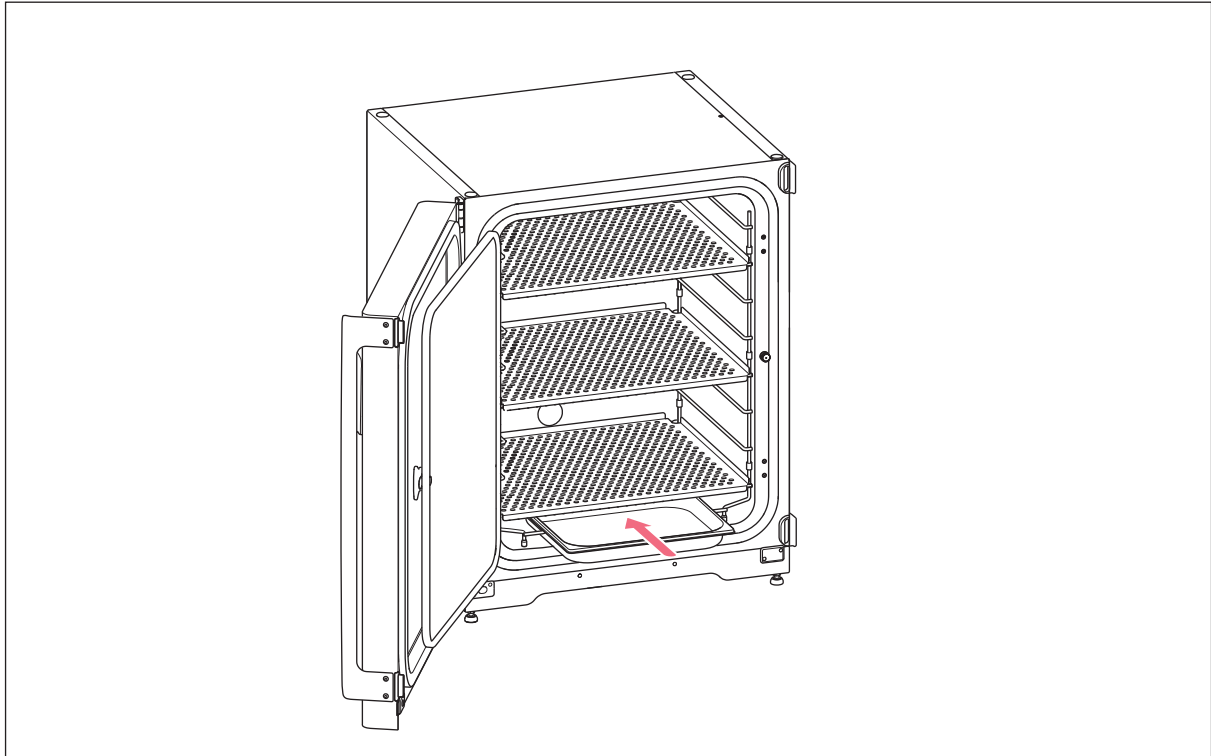

### 7.3.6 Putting into operation

1. Plug in the incubator and switch it on.
2. To allow conditions to stabilize, leave the incubator on for at least 2 hours (preferably overnight).

## 7.4 High-temperature disinfection (HTD)

---



**WARNING! Risk of personal injury**

Burns due to hot surface.

- ▶ Do not touch the equipment during the high-temperature disinfection cycle.
- ▶ Do not open the doors during the cycle.
- ▶ Do not open the doors after a system crash or a mains/power outage during the high temperature disinfection.



**WARNING! Risk of personal injury**

Scalding due to hot water.

- ▶ Remove water from the water tray before starting the high-temperature disinfection cycle.



**WARNING! Risk of injury to personnel or damage to equipment**

- ▶ While cleaning or disinfecting/decontaminating the chamber, take care not to break small sensors/other parts or destroy your protective gloves by wiping with too much force.



**NOTICE! Risk of material damage**

- ▶ Never let electrical equipment come into contact with the alcoholic solution.



**NOTICE! Risk of material damage**

- ▶ To avoid possible damage to the CO<sub>2</sub> sensor due to condensation, never leave water in the water tray while the incubator is switched off, or when a high-temperature disinfection cycle is initiated.



When using the high-temperature disinfection for the first time, it may cause a smell to develop. Make sure that the location is ventilated.

To work contamination-free, clean and decontaminate the CO<sub>2</sub> incubator regularly.

Prerequisites

The samples have been taken out of the device.

The device is ready to operate.

The *Home* screen is displayed.



In order to obtain a successful result, keep the incubator doors closed until the high-temperature disinfection process is completed. If doors are opened during a high-temperature disinfection, you are asked whether to continue or to cancel the process.



The estimated time remaining may vary depending on the target temperature and ambient conditions.

The incubator starts with heating up to 140 °C. The device holds the temperature for 2 hours. When exceeding 50 °C, the additionally warning symbol *Hot surfaces* is displayed. The display shows the estimated remaining run time. The high-temperature disinfection cycle takes approximately 13 hours.

1. Press the menu/enter softkey.
2. Press the down arrow key.  
The menu item *Disinfect* appears.
3. To select the menu item, press the menu/enter softkey.
4. To get to the next wizard screen, use the right arrow key. To get back to the *Home* screen, use the left arrow key.
5. Empty the water tray.
6. Clean the chamber and all inserted parts.
7. To get to the next wizard screen, use the right arrow key. To get back to the last wizard screen, use the left arrow key.
8. To start the disinfection cycle, press the menu/enter softkey.
9. To finish the disinfection cycle and to confirm the message, press the menu/enter softkey.  
The *Home* screen appears.
10. Make sure that the water tray is filled with 1.5–2.5 L handwarm, sterile, distilled water.
11. To stop the high-temperature disinfection, press the menu/enter softkey. Answer the question *Quit: Yes/No* by choosing *Yes*. Opening the door also stops or aborts the high-temperature disinfection.



## 8 Troubleshooting

### 8.1 General errors

Technical faults may be triggered by faults such as a power failure or power fluctuations. Therefore, it is sufficient to switch off the device briefly and switch it on after approximately 10 seconds. Check the cable connections if necessary.



If the suggested troubleshooting measures fail repeatedly, please contact your local Eppendorf partner. You can find the addresses on the website [www.eppendorf.com/worldwide](http://www.eppendorf.com/worldwide).

If there are several events, the most important event is displayed. After acknowledging the first event by pressing the menu/enter softkey, the next event is displayed. Up to 10 events can be held available.

Tab. 8-1: Door

Problem	Possible cause	Solution
<b>Door alarm</b> Door alarm is displayed with the alarm sign	Door is open longer than 30 seconds.	Close the door. Press the menu/enter softkey to switch off the sound.
<b>W50: Long door ope...</b>	Door is open longer than 5 minutes.	Close the door. Quit the warning note. The warning note for <i>Door open</i> will not be shown again.

Tab. 8-2: Temperature

Problem	Possible cause	Solution
Condensation	(Permanent) airflow due to open window or open door or air conditioning device.	Relocate the incubator to a more suitable place. Relocate the air conditioning device. Stop the airflow.
<b>Temp Low Alarm</b> is displayed with the alarm sign	Door is opened too long.	Check the door opening time.
	Door was opened too often.	Check how often the door was opened throughout a day.
	Due to high impact of cold samples, the temperature setpoint could not be reached in a specific time span.	Use a prewarmed medium. Use a smaller number of cold samples.
	(Permanent) airflow due to open window or open door or air conditioning device.	Relocate the incubator to a more suitable place. Relocate the air conditioning device. Stop the airflow.

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
<b>Temp High Alarm</b> is displayed with the alarm sign	Temperature setpoint was decreased without opening doors.	To let the incubator cool down, open the outer and the inner door.
	Due to high impact of hot samples, the temperature setpoint could not be reached in a specific time span.	Use a colder medium. Use a smaller number of hot samples.
	(Permanent) airflow due to open window or open door or air conditioning device.	Relocate the incubator to a more suitable place. Relocate the air conditioning device. Stop the airflow.
	Another hot device is too close to the incubator.	Relocate the incubator to a more suitable place. Relocate the heat emitting device. Check the distance between the devices. Increase the distance if necessary.
	A heat emitting device was inserted into the incubator and generates too much heat.	Take out the heat emitting device.
<b>Temp error</b>	The temperature control has recognized an error and is deactivated.	Wait or change the temperature setpoint. Restart the device. Contact your local Eppendorf partner.
<b>E102:Call service</b>	Temperature information error.	Restart the device. Contact your local Eppendorf partner.
<b>E107:Restart device</b>	The incubator is located in a cold room < 16 °C.	Let the incubator acclimate at least 12 h after shipment.
	Sensor defect.	Contact your local Eppendorf partner.
<b>W108:Setpoint not...</b>	Ambient temperature is close to the temperature setpoint (less than 4 °C difference). Ambient temperature is above the temperature setpoint.	Change the setpoint to a higher temperature ( $\geq 4$ °C above ambient temperature). Reduce the ambient temperature to $\geq 4$ °C to the temperature setpoint, e.g., by venting the room.
<b>W109:Temp not rea...</b>	Technical fault.	Restart the device.

Problem	Possible cause	Solution
<b>E110:Restart device</b>	The temperature setpoint for the HTD was not reached in time.	Check environment conditions. Switch off and restart the device.
	The water tray is not empty.	Empty the water tray. Restart the HTD.
	Technical fault.	Contact your local Eppendorf partner.
<b>E111:Restart device</b>	The incubator features a shutdown at 10 K above the setpoint of a heat circuit according to standard DIN 12880. (Temperature limiter class 1).	Restart the device. Increase the temperature setpoint to $\geq 4$ °C above ambient temperature. Reduce the ambient temperature to $\geq 4$ °C to the temperature setpoint, e.g., by venting the room. Contact your local Eppendorf partner.
<b>E112:Call service</b>	The incubator features a shutdown at 5 K under the setpoint of a heat circuit according to standard DIN 12880. (Temperature limiter class 1).	Restart the device. Contact your local Eppendorf partner.

Tab. 8-3: CO<sub>2</sub>

Problem	Possible cause	Solution
<b>" ini "</b> No CO <sub>2</sub> value displayed	<b>" ini "</b> is displayed after (re-)starting the incubator or after high-temperature disinfection.	Wait until the incubator is running in the normal mode.
<b>CO2 High Alarm</b> is displayed with the alarm sign	CO <sub>2</sub> set parameter decreased. CO <sub>2</sub> cannot pass off the incubator. Too many vessels next to the sensor.	Open the outer and the inner door to let CO <sub>2</sub> pass off the incubator. Increase the space around the sensor, e.g., by reducing the load.
<b>CO2 Low Alarm</b> is displayed with the alarm sign	CO <sub>2</sub> set parameter increased.	CO <sub>2</sub> concentration cannot recover in time: Check the pressure supply.
<b>W202:CO2 sensor h...</b>	CO <sub>2</sub> sensor has been switched off due to high temperature. The incubator was restarted with a too high residual temperature after the high-temperature disinfection has been interrupted.	Let the incubator cool down to $<50$ °C before restarting the high-temperature disinfection.
<b>E203:Call service</b>	The initialization of the CO <sub>2</sub> sensor failed after switching on the incubator.	Restart the device. Contact your local Eppendorf partner.

**Troubleshooting**

CellXpert® C170

English (EN)

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
<b>E204:Call service</b>	The measured CO <sub>2</sub> value is above the allowed range. or The measured CO <sub>2</sub> value is below the allowed range.	Restart the device. Contact your local Eppendorf partner.
<b>W205:CO2 sensor s...</b> or <b>W205:CO2 sensor s...</b> or <b>W205:CO2 sensor z...</b> or <b>W205:CO2 sensor r...</b>	CO <sub>2</sub> sensor settings not saved.	Restart the device. Contact your local Eppendorf partner.
<b>W212:Open inn.door</b>	CO <sub>2</sub> set parameter decreased. CO <sub>2</sub> cannot pass off the incubator.	Open the outer and the inner door to let CO <sub>2</sub> pass off the incubator.
<b>W213:CO2 control...</b> or <b>E213:Call service</b>	CO <sub>2</sub> control loop took too long. or CO <sub>2</sub> control loop aborted. or CO <sub>2</sub> sensor or software defect.	Check gas supply for leakage. Check if access port is closed. Restart the device. Contact your local Eppendorf partner.
<b>W291:CO2 Press low</b>	CO <sub>2</sub> cylinder is almost empty.	Check CO <sub>2</sub> supply. Exchange CO <sub>2</sub> cylinder and adjust gas supply to 0.1 MPa (or range of 0.05 MPa to 0.15 MPa). Check if the gas connection is disconnected or if there is a leakage, e.g., in-line gas filter. Check flow direction of the in-line gas filter: Gas supply must be connected to the INLET side of the in-line gas filter.
	The volumetric flow rate is too low.	Increase the volumetric flow rate, e. g., by opening the CO <sub>2</sub> gas stop valve.
<b>E214:Call service</b>	CO <sub>2</sub> value error. CO <sub>2</sub> setpoint not reached in time. Vessels located in front of the CO <sub>2</sub> sensor. Too many vessels in the chamber under extreme conditions.	Check gas supply for leakage. Check if access port is closed. Relocate the vessels. Restart the device. Contact your local Eppendorf partner.
<b>E215:Call service</b>	CO <sub>2</sub> recovery timeout.	Check gas supply for leakage. Check if access port is closed. Restart the device. Contact your local Eppendorf partner.

Problem	Possible cause	Solution
<b>E292:CO2 Press low</b>	CO <sub>2</sub> pressure below alarm level of 0.02 MPa. CO <sub>2</sub> cylinder is empty or disconnected.	Check CO <sub>2</sub> supply. Exchange CO <sub>2</sub> cylinder and adjust gas supply to 0.1 MPa (or range of 0.05 MPa to 0.15 MPa). Check gas connection on disconnection or leakage, e.g., in-line gas filter, gas connection. Ventilate the room, if necessary.
	The volumetric flow rate is too low.	Increase the volumetric flow rate, e.g. by opening the CO <sub>2</sub> gas stop valve.
<b>E293:CO2 &gt;0.18 MPa</b>	CO <sub>2</sub> pressure above alarm level of 0.18 MPa. The inlet valve is closed due to the high pressure.	Reduce the CO <sub>2</sub> pressure to 0.1 MPa (14.5 psi, 1 bar) or to the range of 0.05–0.15 MPa (7.2–21.8 psi, 0.5–1.5 bar). Release the pressure from the gas tubing leading to the incubator. To disconnect the gas tubing, switch off the gas pressure, press down the small ring of the tube connector, and pull out the gas tubing.
Different CO <sub>2</sub> errors occur, e.g., timeout.	Pressure monitor is switched off. Low CO <sub>2</sub> pressure is not monitored. Gas cylinder is empty.	Switch on the pressure monitor. Check for warnings or errors. Check CO <sub>2</sub> supply. Exchange CO <sub>2</sub> gas cylinder and adjust gas supply to 0.1 MPa (or range of 0.05 MPa to 0.15 MPa). Check gas connection on disconnection or leakage, e.g., in-line gas filter, gas connection. Ventilate the room, if necessary.

Tab. 8-4: High-temperature disinfection (HTD)

Problem	Possible cause	Solution
<b>E110:Restart device</b>	Temperature for HTD not reached in time.	Check environment conditions. Switch off and restart the incubator. Restart the HTD.
	The water tray is not empty.	Empty the water tray.
	Technical fault.	Contact your local Eppendorf partner.

**Troubleshooting**

CellXpert® C170

English (EN)

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
<b>W202:CO2 sensor h...</b>	CO <sub>2</sub> sensor has been switched off due to high temperature. The incubator was restarted with a too high residual temperature after the HTD has been interrupted.	Let the incubator cool down to <50 °C before restarting the HTD.
<b>E750:HTD error...</b>	Error occurred during the HTD.	Restart the device. Contact your local Eppendorf partner.
<b>E751:HTD interrup...</b>	HTD interrupted due to power loss.	Restart the device. Contact your local Eppendorf partner.
<b>W753:Door has bee...</b>	Door has been opened during HTD. HTD was interrupted or aborted.	Restart the HTD. Wait until temperature has decreased to normal value.

Tab. 8-5: Technical errors

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
<b>W600 – W699</b>	Technical fault	Contact your local Eppendorf partner.
<b>W700:Check power</b>	Voltage fluctuation	Check mains/power supply. Contact your local Eppendorf partner.
<b>E701:Wrong voltage</b>	Incorrect mains/power voltage range.	Check mains/power supply.
<b>E702:Wrong voltage</b>	Unknown mains/power voltage range.	Check mains/power supply.
<b>E703:Sensor error</b>	A sensor is out of order or a sensor is not connected correctly.	Contact your local Eppendorf partner.
<b>E704:Restart device</b>	Technical fault.	Contact your local Eppendorf partner.
<b>W921 – E999</b>	Technical fault.	Restart the device. Contact your local Eppendorf partner.

Tab. 8-6: General errors

Problem	Possible cause	Solution
Sample is partially dry	Shelves are not properly leveled.	Level the incubator by placing a spirit level on a shelf: <ul style="list-style-type: none"> <li>• aligned left to right</li> <li>• aligned front to rear</li> </ul> Add more medium to the cells.
	No water in the water tray.	Check the water tray weekly. Refill it or clean and refill it weekly.
Sample evaporation	Low humidity due to empty water tray.	Check the water tray weekly. Refill it or clean and refill it weekly.
Circular cell growth in cell-culture dish	Vibrations from other devices result in sample vibrations.	Check if vibration generating elevators or devices like freezers or centrifuges are too close to the incubator, see <i>Installation</i> .
Sample contaminated	Consistent contamination	Perform an HTD.
	Contamination of sample	Check your sample handling. Check for contamination during your application steps.
Condensation at the inner door after filling of the water tray	Water tray filled with too warm water.	Let the water cool down. Fill the water tray with water that is a little cooler than the set temperature.





## 9 Transport, storage and disposal

### 9.1 Transport

---



**CAUTION! Risk of injury from lifting and carrying heavy loads**

- ▶ At least 4 people are required to safely lift the incubator.
- ▶ Use a transport aid for transporting the incubator.



**CAUTION! Risk of tipping over**

Stacked incubators may topple during transport.

- ▶ Do not move 2 stacked incubators.
- 



**NOTICE! Damage due to incorrect packing.**

Eppendorf SE is not liable for any damage caused by improper packing.

- ▶ Only store and transport the device in its original packing.



**NOTICE! Damage to the incubator**

Lifting the incubator by the door will cause permanent damage to the incubator.

- ▶ Lift the incubator only by the lifting handles.
  - ▶ Never lift the incubator by its door.
- 

#### 9.1.1 Conditions of transport

- ▶ Temperature: -25–60 °C
- ▶ Relative humidity: 10–95 %
- ▶ Atmospheric pressure: 30–106 kPa

#### 9.2 Storage

- Temperature: -25–55 °C
- Relative humidity: 10–95 %
- Atmospheric pressure: 70–106 kPa

### 9.3 Decontamination before shipment

If you are going to ship the device to the authorized Technical Service for repairs or to your authorized dealer for disposal, note:



**WARNING! Risk to health from contaminated device.**

1. Observe the information on the decontamination certificate. It is available as a PDF document on our website ([www.eppendorf.com/decontamination](http://www.eppendorf.com/decontamination)).
  2. Decontaminate all the parts to be shipped.
  3. Include the fully completed decontamination certificate in the package.
- 

 
### 9.4 Disposal

Observe the relevant legal regulations when disposing of the product.

**Information on the disposal of electrical and electronic devices in the European Community:**

Within the European Community, the disposal of electrical devices is regulated by national regulations based on EU Directive 2012/19/EU pertaining to waste electrical and electronic equipment (WEEE).

According to these regulations, any devices supplied after August 13, 2005, in the business-to-business sphere, to which this product is assigned, may no longer be disposed of in municipal or domestic waste. They are marked with the following symbol to indicate this:

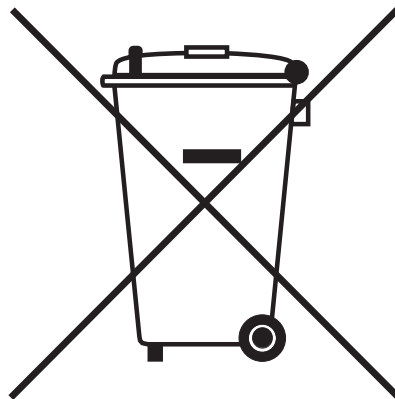

As the disposal regulations may differ from one country to another within the EU, please contact your supplier for more information.

**10 Technical data**  
**10.1 Weight/dimensions**  
**10.1.1 Equipment dimensions**

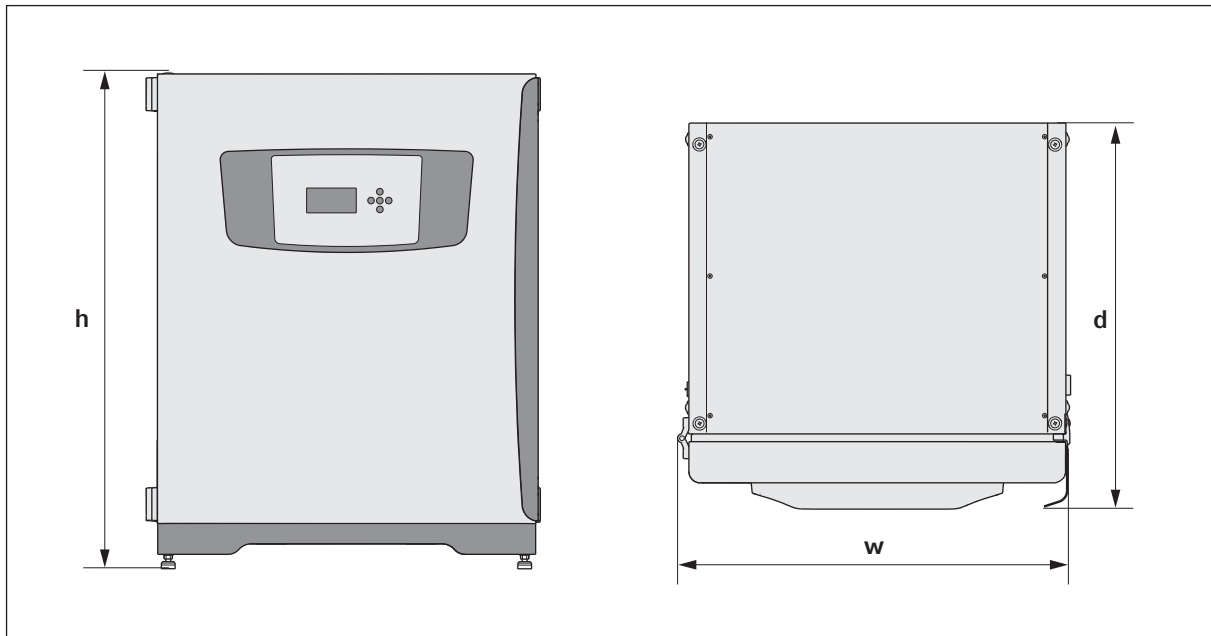 


Fig. 10-1: Dimensions of CellXpert C170 (without safety latch)

Width (w)	71.8 cm (28.3 in)
Height (h)	90.0 cm (35.4 in)
Depth with outer door handle (d)	70.0 cm (27,6 in)
Depth with control panel	70.5 cm (27.8 in)
Weight	105 kg (231 lb)

**10.1.2 Internal dimensions**

Width	53.9 cm (21.2 in)
Height	69.2 cm (27.2 in)
Depth	44.5 cm (17.5 in)
Volume (total)	167 L
Volume (useable, with 3 shelves)	127 L

### 10.1.3 Floor space required

Width	81 cm (31.9 in)
Depth	60 cm (23.6 in)
Height	95 cm (37.4 in)

### 10.1.4 Transporting dimensions

Width	120 cm (47.3 in), pallet included
Height	117.6 cm (46.3 in), pallet included
Depth	80 cm (31.5 in), pallet included
Weight	124 kg (273 lb)

### 10.1.5 Shelves

Polished stainless steel, perforated (standard)

Width	52.2 cm (20.6 in)
Depth	42.8 cm (16.9 in)
Number of shelves	3 standard; upgrade to 8 shelves
Flatness tolerance of shelf	1 mm
Thickness of shelf	1.5 mm
Max. load to the shelf (with 2 mm deflection)	8 kg
Max. load of the shelf rack	40 kg

### 10.1.6 Stacked CellXpert C170

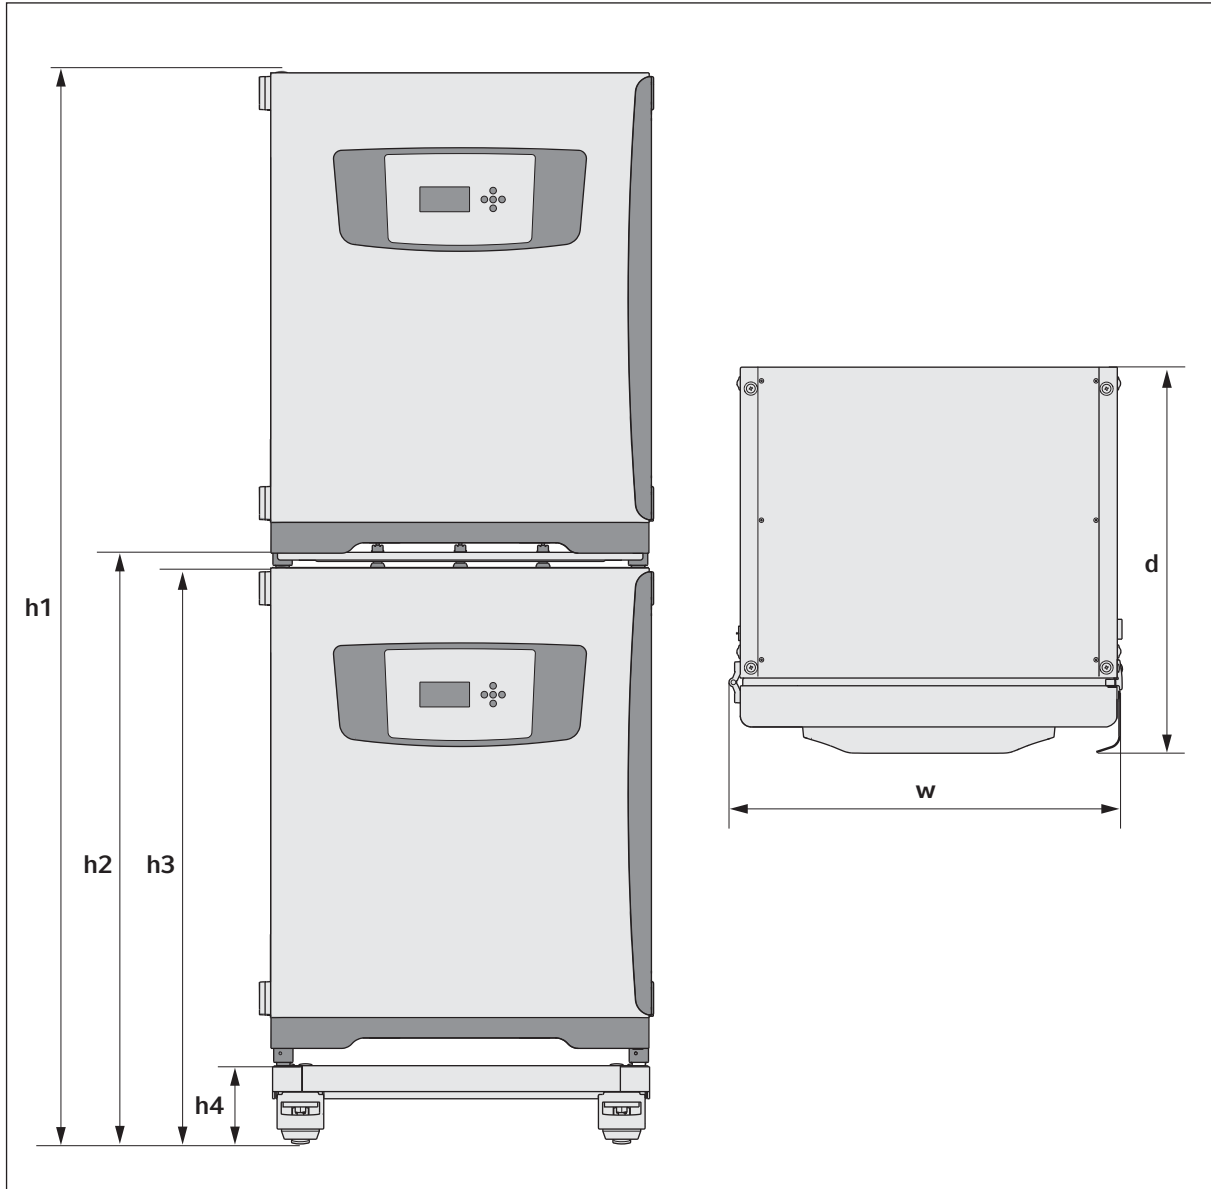 


Fig. 10-2: Dimensions of 2 stacked CellXpert C170 (without safety latch)

Height				Depth	Width
h1	h2	h3	h4	d	w
194.6 cm	107.3 cm	104.5 cm	14.2 cm	70.5 cm	71.8 cm
(76.7 in)	(42.3 in)	(41.2 in)	(5.6 in)	(27.8 in)	(28.3 in)

## 10.2 Power supply

Mains/power connection	100–127 V $\pm$ 10 %, 50–60 Hz 220–240 V $\pm$ 10 %, 50–60 Hz
Power consumption for 100–127 V	1150 W
Power consumption for 220–240 V	1150 W
Overvoltage category	II (IEC 61010-1)
Protection class	I
Specifications for mains/power cord	AC 250V / 16A 3G 1.5 mm <sup>2</sup> appliance coupler C19 according IEC 60320-1:2015

## 10.3 Interfaces

BMS relays	4
BMS max. current	2 A
BMS max. voltage	30 V DC/AC
USB	2 x USB 2.0
Ethernet	1 x user 1 x service

## 10.4 Ambient conditions

Environment	For indoor use only. No wet environment.
Ambient temperature	18–28 °C
Relative humidity	20–80 %
Pollution degree	2
Atmospheric pressure	79.5–106 kPa (use up to a height of 2000 m above sea level)

### 10.4.1 Temperature management

Range	4 °C above ambient temperature to 50 °C
Control increment	0.1 °C
Accuracy	$\pm$ 0.4 °C (DIN 12880) at 37 °C and ambient 22 °C
Stability	$\pm$ 0.1 °C at 37 °C and ambient 22 °C
Uniformity	$\pm$ 0.3 °C at 37 °C and ambient 22 °C

### 10.4.2 High-temperature disinfection

Max. temperature	140 °C / 2 h
Approx. duration	13 h

### 10.4.3 CO<sub>2</sub> control

Range	0.1–20 %
Control increment	0.1 %
Accuracy	±0.3 % at 5 % CO <sub>2</sub> at specified relative humidity and at 37 °C and ambient 22 °C
Stability	±0.1 % at 5 % CO <sub>2</sub> at specified relative humidity and at 37 °C and ambient 22 °C
Uniformity	±0.1 % at 5 % CO <sub>2</sub> at specified relative humidity and at 37 °C and ambient 22 °C
Gas tubing	Inner diameter of 6.5 mm and outer diameter of 10 mm
Sensor type	NDIR sensor
Required gas pressure	0.1 MPa (1 bar, 14.5 psi), range 0.05–0.15 MPa (0.5–1.5 bar; 7.2–21.8 psi)

### 10.4.4 Humidity

Water tray capacity	2.5 Liters
Humidity control	95 % at 37 °C

The relative humidity attained could vary in the range of 92.5 ±2.5 % depending on the ambient humidity level and other factors.

### 10.4.5 Calibration



The maximum operating ambient temperature is 28 °C. Factory calibration of the incubator is carried out at 37 °C, 5 % CO<sub>2</sub> and 90–95 % RH, in an ambient temperature of 20–25 °C with no heat-generating apparatus inside the chamber.

Software calibration adjustments are required to optimize performance if the incubator is being used outside the operating conditions. Performance specifications are also affected.

Contact Eppendorf Service for advice on calibration adjustments and relevant performance specifications. Be prepared with the model and serial number of your incubator and the complete details of your operating conditions.

Performance values represent the average of instruments checked in the factory under optimum conditions.





## 11 Ordering Information

### 11.1 Shelves and shelf rack

Order no. (International)	Description
6731 070.123	<b>Shelf</b> for 170 L incubators, 1 piece
6710 859.009	<b>Shelves</b> for 170 L incubators, 2 pieces
P0628-6390	<b>Shelf rack</b> for 170 L incubators
P0628-6140	<b>Water tray</b> for 170 L incubators
6710 859.106	<b>Copper shelves</b> for 170 L incubators, 2 pieces
P0628-6260	<b>Copper water tray</b> for 170 L incubators
6731 080.013	<b>Copper kit</b> copper water tray and 4 copper shelves

### 11.2 Gas system

Order no. (International)	Description
6731 070.107	<b>Gas tubing</b> 3 m, with in-line gas filter

### 11.3 Electrics

Order no. (International)	Description
6731 070.069	<b>BMS connector</b>

## 11.4 Connectivity

Order no. (International)	Description
1006 000.009	<b>VisioNize box</b> with mains/power adapter
1006 072.000	<b>Mains/power adapter</b> VisioNize box
1006 076.005	<b>VisioNize box adapter</b>
1006 073.006	<b>Cable</b> to connect devices with ethernet interface to VisioNize VisioNize box, Ethernet, length 5 m

## 11.5 Housing

Order no. (International)	Description
6731 070.034	<b>Plug for access port</b> 2 pieces
6731 070.093	<b>Stacking stand, lower frame</b> with castors
6731 070.085	<b>Stacking stand, upper frame</b> for CellXpert C170/C170i
6731 070.158	<b>Universal upper stacking stand</b> for 170 L incubators
6710 070.235	<b>Safety fastening kit</b>
6731 070.115	<b>Door damper kit</b>

## 11.6 Accessories

Order no. (International)	Description
P0628-5000	<b>Automatic gas cylinder change-over unit</b>
P0628-6150	<b>New Brunswick™ Galaxy® Gas Analyzer</b> CO <sub>2</sub>
P0628-6831	<b>New Brunswick™ Galaxy® Gas Analyzer</b> CO <sub>2</sub> , O <sub>2</sub>
P0628-7890	<b>New Brunswick™ Galaxy® Gas Analyzer</b> CO <sub>2</sub> , O <sub>2</sub> , RH
P0628-7880	<b>Temperature probe 100 mm tip</b>
P0628-7881	<b>Temperature probe 5 mm tip</b>

## **11.7 Upgrade options**

The following upgrade options are available:

- Inner door with 4 door segments
- Reversal of door opening

Contact your local Eppendorf partner for ordering upgrade options.

## **Index**

### **D**

Daily checks .....	49
Disinfecting agent .....	51
Disinfection/Decontamination .....	51
Disposal .....	66

### **E**

External sensor.....	39
----------------------	----

### **F**

Filling quantity .....	38
------------------------	----

### **G**

Gas pressure monitoring .....	48
-------------------------------	----

### **L**

Location.....	24
---------------	----

### **M**

Monthly checks .....	49
----------------------	----

### **S**

Safety latch .....	28
--------------------	----

### **U**

User requirement .....	9
Utilities requirements.....	23

### **W**

Water tray .....	38
Weekly checks .....	49

### **Y**

Yearly checks.....	50
--------------------	----

# Declaration of Conformity

The product named below fulfills the requirements of directives and standards listed. In the case of unauthorized modifications to the product or an unintended use this declaration becomes invalid. This declaration of conformity is issued under the sole responsibility of the manufacturer.

**Product name:**

CellXpert® C170i, CellXpert® C170

including components

**Product type:**

CO<sub>2</sub>-Incubator

**Relevant directives / standards:**

2014/35/EU: EN 61010-1 +A1 + A1/AC, EN IEC 61010-2-010, EN 62233, EN IEC 62311

2014/30/EU: EN 61326-1

 
2011/65/EU: EN IEC 63000  
(incl. (EU) 2015/863)

Further applied standards: IEC 61010-1 + AMD1, IEC 61010-2-010, IEC 62233, IEC 62311  
UL 61010-1, UL 61010-2-010  
CAN/CSA C22.2 No. 61010-1-12, CAN/CSA C22.2 No. 61010-2-010-19  
IEC 61326-1

Hamburg, June 08, 2022



Dr. Wilhelm Plüster  
Management Board

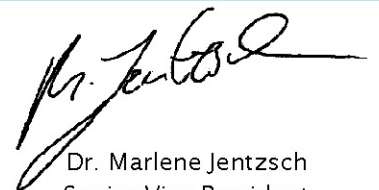

Dr. Marlene Jentzsch  
Senior Vice President  
Division Separation & Instrumentation

Your local distributor: [www.eppendorf.com/contact](http://www.eppendorf.com/contact)  
Eppendorf SE · Barkhausenweg 1 · 22339 Hamburg · Germany  
[eppendorf@eppendorf.com](mailto:eppendorf@eppendorf.com)

ISO  
9001  
Certified

ISO 13485  
Certified

ISO 14001  
Certified

Eppendorf®, the Eppendorf Brand Design and CellXpert® are registered trademarks of Eppendorf SE, Germany.  
All rights reserved, incl. graphics and pictures. Copyright ©2022 by Eppendorf SE.





# Evaluate Your Manual

Give us your feedback.

[www.eppendorf.com/manualfeedback](http://www.eppendorf.com/manualfeedback)

**Your local distributor: [www.eppendorf.com/contact](http://www.eppendorf.com/contact)**

Eppendorf SE · Barkhausenweg 1 · 22339 Hamburg · Germany  
[eppendorf@eppendorf.com](mailto:eppendorf@eppendorf.com) · [www.eppendorf.com](http://www.eppendorf.com)