
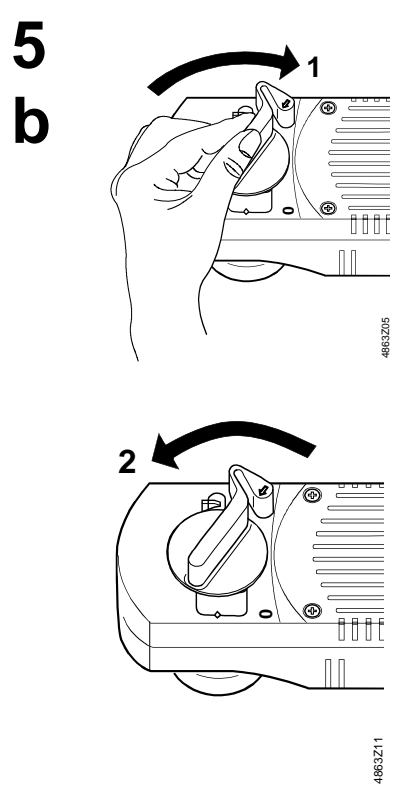
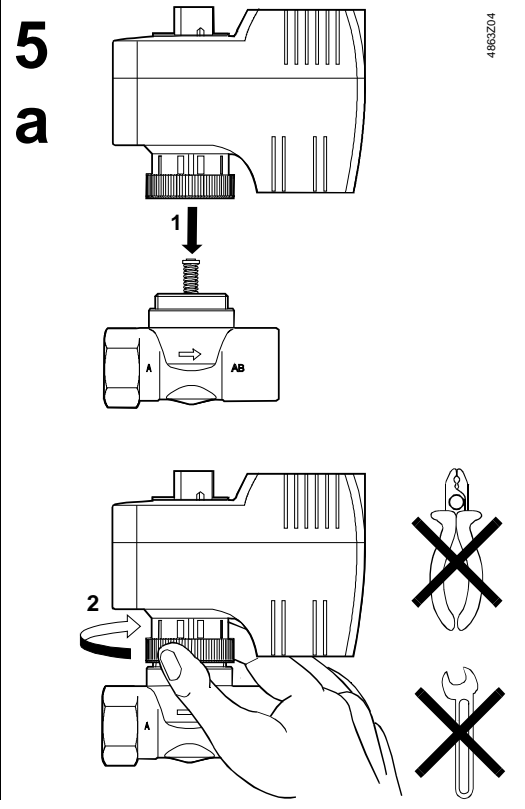
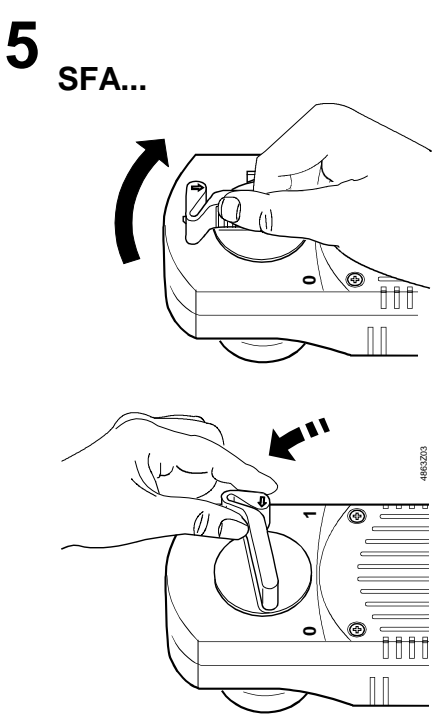
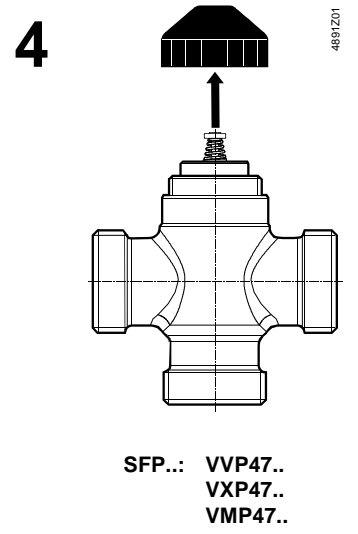
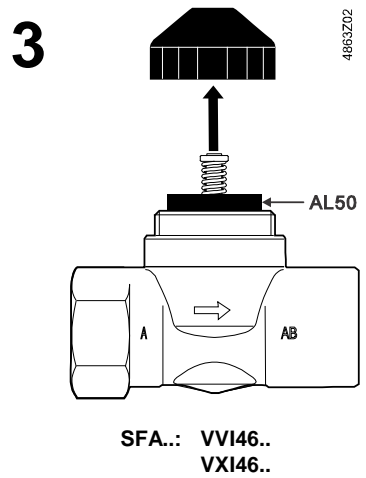



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
zh 安裝指導

Stellantriebe
 Actuators
 Servomoteur
 Ställdon
 Servomotoren
 Servocomandi
 Toimimoottorit
 Actuadores
 Motorer
 Silowniki
 Pohony
 Motorok
 Κινητήρες
 执行器

SFA21/18
 SFA71/18
 SFA11U
 SFP21/18
 SFP71/18

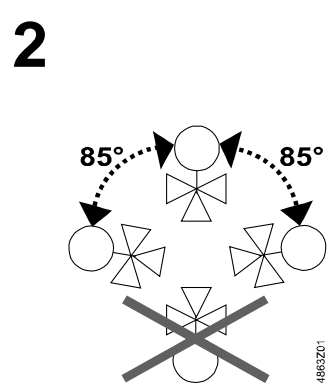


6 SFP...

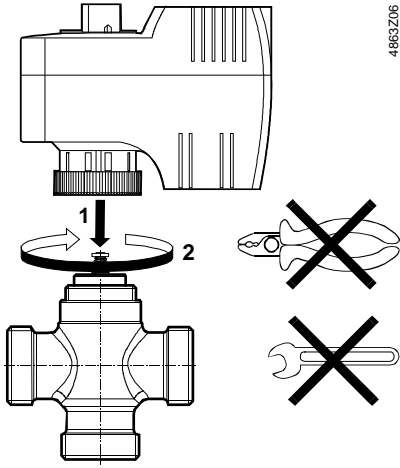


7

 
SFA21/18
SFP21/18
AC 230 V




SFA71/18
SFP71/18
AC 24 V

 


SFA11U
AC 120 V

 

ASC2.1/18


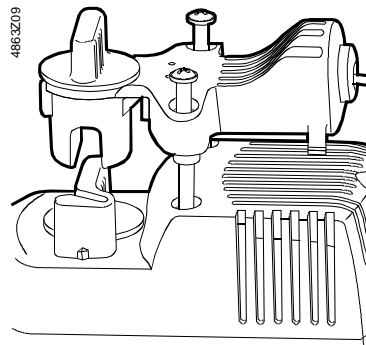


max. AC 250 V
max. 3 (2) A

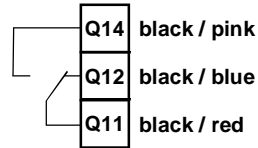



0 ... 50 % : Q11 → Q12
50 % ... 1 : Q11 → Q14

SFA.. SFP..

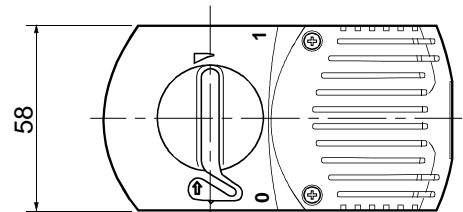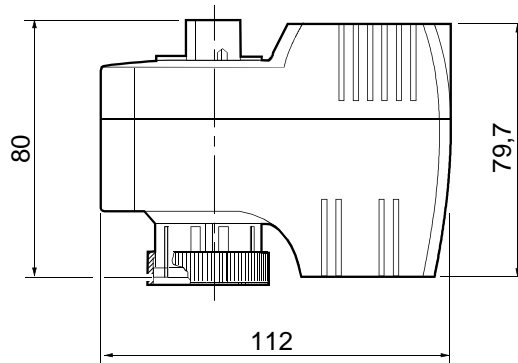

4863M01

SFA.. + ASC2.1/18 SFP.. + ASC2.1/18

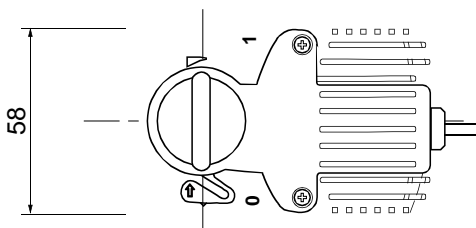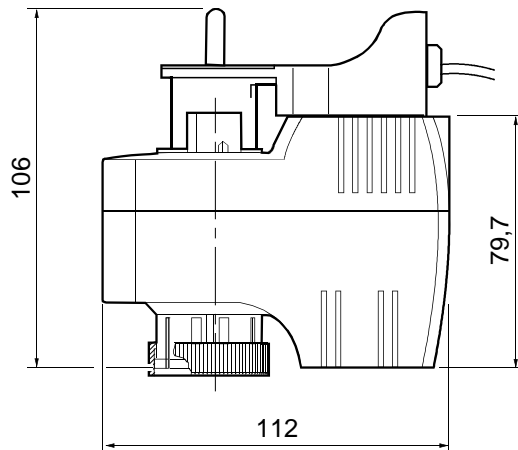

4863M17