

H5+

UHD ACTION CAM

MANUALE D'USO
USER MANUAL
BEDIENUNGSANLEITUNG
MANUAL DE USUARIO
MANUEL DE L'UTILISATEUR
MANUAL DO USUÁRIO
INSTRUKCJA OBSŁUGI
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ



2-inch
LCD



140°
Wide Angle
Lens



2160p@25fps



Waterproof
up to 30m



1.5 Hours

MIDLAND®

PUT YOURSELF IN ACTION

ENGLISH

THE BASICS



INCLUDED ACCESSORIES



1. Waterproof case 30m
2. Quick release mount (x2)
3. Standard photo mount
4. Curved mount
5. Flat mount
6. Frame
7. Adaptor clip
8. Tripod mount
9. Ventilated helmet bandages
10. 90° mounts
11. 180° mount
12. Tethers
13. Protective backdoor
14. USB Cable
15. Lens cloth

Attention: If you use the case in the water, wash it well and dry it after use. Do not use any type of cleaning product.

12

GETTING STARTED


Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments.







To power ON: Press the **Power/mode button**.

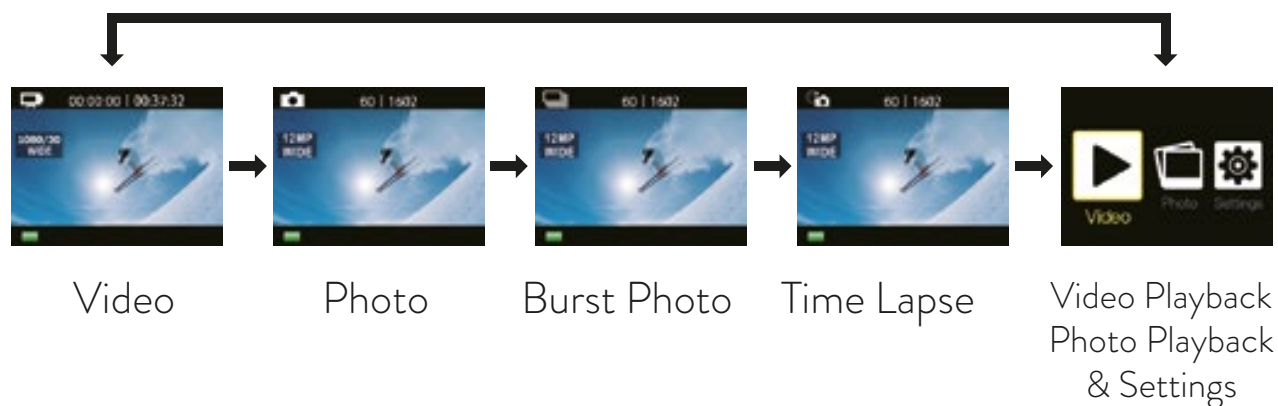To power OFF: Press and hold the **Power/mode button**.

OVERVIEW

Turn camera **ON** and repeatedly press the **Power/mode button** to cycle through camera modes and settings. The modes will appear in following order:



	Video	Record video
	Photo	Capture a single photo
	Burst Photo	Capture photo bursts
	Time Lapse	Shoot a series of photos at set time intervals
	Settings	Adjust camera settings, resolution and more
	Video & Photo playback	Video & Photo playback

SETTINGS



Press the **Shutter/Select button** to enter the settings menu. Repeatedly press the **Power/ Mode** to cycle through options and press the **Shutter/ Select button** to select the desired option.

Video resolution: 4K/25fps 1080p/60/30fps

MicroSD Card	4K 25fps	1080p 60fps	1080p 30fps
32 GB	60 min	180 min	300 min
16 GB	30 min	90 min	150 min

Looping Video: On/Off

Time Stamp: Off/Date/Date & Time

Exposure: ±2.0/±1.7/±1.3/±1.0/±0.7/±0.30/0

Photo resolution: 12M/8M/5M/4M

Burst Photo: 3 photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English /German /Italian /Spanish /Portuguese /Dutch / French /Czech /Polish /Turkish /Russian/ Japanese

Date and Time: time adjust and format selection MM/DD/YY, YY/MM/DD or DD/MM/YY

Sound Indicator: Shutter On/Off, StartUp On/Off, Beep On/Off, Volume 0/1/2/3

Upside Down: Yes/No

Screen saver: Off/1min/3min/5min

Power saver: Off/1min/3min/5min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

To record video verify the camera is in Video mode. If the Video icon on your camera's LCD screen is not showing, press the **Power/mode button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select button**. The camera will emit one beep and the Camera Status Light (Red Led) will flash while recording.

To stop recording:

Press the **Shutter/Select button**. The Camera Status Light will stop flashing and the camera will emit one beep to indicate recording has stopped. This camera automatically stops recording when the battery is out of power. Your video will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a Photo verify the camera is in Photo mode. If the Photo icon on your camera's LCD screen is not showing, press the **Power/mode button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a Burst Photo series, verify the camera is in Burst Photo mode. If the Burst Photo icon on your camera's LCD screen is not showing, press the **Power/mode button** repeatedly until it appears. In Burst Photo mode, your camera will take 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select button**. The camera will emit the camera shutter sound.

TIME LAPSE MODE

Time Lapse

To capture a Time Lapse photo series, verify the Continuous Lapse is ON and the camera is in Time Lapse mode. If the Time Lapse icon on your camera's LCD screen is not showing, press the **Power/mode button** repeatedly until it appears. In Time Lapse mode, your camera captures a series of photos at 2, 3, 5, 10, 20, 30 or 60 second intervals.

To take Time Lapse:

Press the **Shutter/Select button**. The camera initiates countdown and emits the camera shutter sound each time a Photo is taken.

PLAYBACK

Playing Videos and Photos

1. Press the **Power/mode button** to select Video or Photo.
2. Press the **Shutter/Select button** to enter the Playback menu.
3. Use the **Power/mode button** to select the file you want to play.
4. Press the **Shutter/Select button** to playback or pause.
5. To return to the **Playback menu**, press the **Shutter/Select button** to pause the video, then press the **Power/mode button**

STORAGE/MICRO SD CARDS

This camera is compatible with 16GB and 32GB capacity microSD, microSDHC, and microSDXC memory cards.

You must use a microSD card with a Class 10 speed rating.

We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

To charge the battery

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light (Blue Led) remains ON while the battery is charging.
3. The Charging Status Light (Blue Led) will turn OFF when the battery is fully charged.

* Charging Time: 3-5 hours.

CAMERA APP

The Ez iCam APP allows you to control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the Ez iCam APP to your smartphone or tablet at the Apple Store or Google Play.
2. Press the **Power/mode button** to power camera ON.
3. Make sure the camera is in Camera modes.
4. Press the **Wi-Fi button** to turn on **Wi-Fi**
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Midland H5+", followed by a series of numbers.
6. Enter the password:"1234567890"
7. Open the Ez iCam APP on your smartphone or tablet.
8. Press and hold the **Wi-Fi button** for three seconds **to turn OFF Wi-Fi.**

The Ez iCam App is compatible with smart-phones and tablets listed below:

For Apple iOS:

- iPhone 5,5S,6,6S,7(Plus) (iOS 10)
- iPad Air & Mini (iOS 10)

For Android:

- *Android 4x Quad-core devices




iOS / Android
App Download

COMPATIBILITY

Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

LIMITED WARRANTY

For information about the warranty, please visit www.midlandeuropa.com

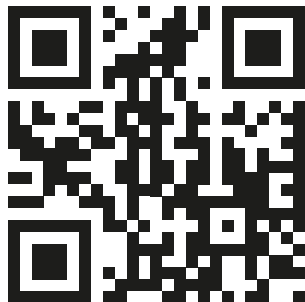

SPECIFICATIONS

Video: 4K@25fps, 2.7K@30fps, 1080p@60/30fps MOV format

Photo: 12/8/5/4MP JPEG format

View Angle: 140°

Sensor: 4MP

Wi-Fi: b/g/n

Water Resistance: up to 30m with Waterproof case

Display LCD: colour 2”

Battery life: up to 90’ (1080p@30fps) with Wi-Fi turned OFF

Speaker and Microphone built-in

Operational Mode: Video/Photo/Time Lapse/Player

Configurable functions: Video/photo resolution, date, exposure, photo burst, time lapse, language, date&time, screen rotation, auto power off,

Multilanguage Menu: EN/DE/IT/ES/PT/DU/FR/CZ/PL/TR/RU/JP

Connections: microUSB 2.0 & microHDMI

Memory: microSD card slot, class 10 up to 32GB

Battery: Li-ion 1050mAh

Dimensions: 59.3 x 30 x 41mm

Weight: 58g with battery

Specifications are subject to change without notice.

Prodotto o importato da:

CTE INTERNATIONAL srl

Via. R.Sevardi 7 42124 Mancasale, Reggio Emilia - Italia

www.midlandeurope.com

Prima dell'uso leggere attentamente le istruzioni.

Produced or imported by:

CTE INTERNATIONAL srl

Via. R.Sevardi 7 42124 Mancasale, Reggio Emilia - Italy

www.midlandeurope.com

Read the instructions carefully before installation and use.

Importado por:

MIDLAND IBERIA, SA

Cobalt, 48 08940 Cornellà de Llobregat - España

www.midland.es

Lea atentamente las instrucciones de uso antes de su instalación y uso.

Vertrieb durch:

ALAN ELECTRONICS GmbH

Daimlerstraße 1K - D-63303 Dreieich Deutschland

www.alan-electronics.de

Vor Benutzung Bedienungsanleitung beachten.



RoHS
Compliant