

The following symbols in the Operating Instructions indicate safety precautions which must be strictly observed:



The instruments must only be disposed of in the correct way!

## Operating Instructions

### Passive DC signal isolator SINEAX SI 815-5

CAMILLE BAUER

Camille Bauer Ltd.  
Aargauerstrasse 7  
CH-5610 Wohlen/Switzerland  
Phone +41 56 618 21 11  
Fax +41 56 618 35 35  
info@camillebauer.com  
www.camillebauer.com



SI 815-5 Be 974 180-02 10.10

## Contents

1. Read first and then ...	1
2. Scope of supply	1
3. Brief description	1
4. Specification and ordering information	1
5. Technical data	2
6. Mounting	2
7. Electrical connections	3
8. Commissioning and maintenance	4
9. Releasing the signal isolator	4
10. Dimensional drawings	4
11. Declaration of conformity	4

## 1. Read first and then ...



The proper and safe operation of the device assumes that the Operating Instructions are **read carefully** and the safety warnings given in the sections

### 6. Mounting

### 7. Electrical connections

are **observed**.

The device should only be handled by appropriately trained personnel who are familiar with it and authorised to work in electrical installations.

Unauthorized repair or alteration of the unit invalidates the warranty.

## 2. Scope of supply

**Signal isolator** (Fig. 1)

**1 Adapter** (Fig. 1) for wall mounting

**1 Operating Instructions** (Fig. 2) in English, French, German

**1 Ex approval** (Fig. 2), only for Ex version devices



Fig. 1

Fig. 2

## 3. Brief description

The signal isolator **SINEAX SI 815-5** serves to electrically insulate the 4...20 mA input circuit of a two-wire transmitter. It performs two tasks at the same time. Firstly it provides electrical insulation and secondly it conducts the power supply needed for measurement to the two-wire transmitter without injecting into the circuit itself. Thus the isolator does not require an power supply connection itself.

Some versions of the SINEAX SI 815-5 are **designed for FSK communication**. They are used in conjunction with "intelligent" two-wire transmitter which are capable of dialogue and operation according to the FSK principle and the HART or user-specific protocol.

The series also includes "intrinsically safe" versions [EEx ia] IIC with an intrinsically safe measurement/power supply circuit. These operate in conjunction with intrinsically safe two-wire transmitters located in explosion hazard areas.

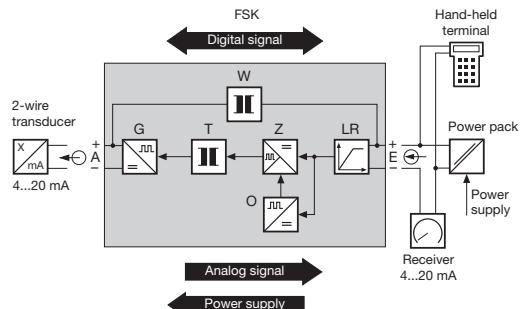


Fig. 3. Block diagram.

## 4. Specification and ordering information

Order Code	815 - 5 . 1 ..
<b>1. Mechanical design</b> Housing N17	5
<b>2. Version</b> Standard (non-Ex) Output signal <b>non-intrinsically safe</b>	1
[EEx ia] IIC, Output signal <b>intrinsically safe</b>	2
<b>3. Number of isolation and transmission channels</b> 1 channel (interface)	1
<b>4. Field communications protocol</b> Without FSK communication	0
With FSK communication	1
<b>5. Climatic rating</b> Standard climatic rating	0
Improved climatic rating	1

## 5. Technical data

### Input signal E<sup>1</sup>

(Input circuit between signal isolator and power pack)

DC current signal  $I_E$ : 4...20 mA

Voltage  $U_E$ : 12...30 V DC

Overload capacity:  $\leq 50$  mA continuous

### Output signal A<sup>1</sup>

(Input circuit between signal isolator and 2-wire transmitter)

DC current signal  $I_A$ : 4...20 mA

Voltage  $U_A$  (for  $I_E = 20$  mA and  $U_E = 22$  V):

> 19.3 V	with standard (non-Ex) version, not designed for communications protocol
> 18.5 V	with standard (non-Ex) version, designed for FSK communication
> 14.3 V	with Ex versions, not designed for communications protocol
> 13.3 V	with Ex versions, designed for FSK communication

Voltage drop  $U_V = U_E - U_A$  (at  $U_E$ ) 12...22 V:

< 2.7 V	with standard (non-Ex) version, not designed for communications protocol
< 3.5 V	with standard (non-Ex) version, designed for FSK communication
< 7.7 V	with Ex versions, not designed for communications protocol
< 8.7 V	with Ex versions, designed for FSK communication

Residual ripple: < 20 mV ss (120 kHz)

Time constant: Approx. 5 ms

### Accuracy data

Error:  $< \pm 0.2\%$

(Reference value 20 mA of output signal,  
including typical linearity error  $< \pm 0.1\%$ )

### Ambient conditions

Climatic rating: Climate class 3Z acc. to VDI/VDE 3540

Operating temperature: – 25 to +55 °C  
– 20 to +55 °C  
(for the Ex versions: output signals “intrinsically safe”)

Storage temperature: – 40 to +70 °C

Annual mean relative humidity:  $\leq 75\%$  standard climatic rating  
 $\leq 95\%$  improved climatic rating

Seismic test: 5 g, < 200 Hz, 2 h in each of 3 directions

Shock test: 50 g, 10 shocks in each of 3 directions

Altitude: 2000 m max.

Indoor use statement!

## 6. Mounting

The SINEAX SI 815-5 can be mounted either on a top-hat rail or directly onto a wall or mounting plate using the adapter (standard accessory).



Make sure that the ambient temperature stays within the permissible limits:

- 25 and + 55 °C for standard instruments
- 20 and + 55 °C for instruments in Ex version!

### 6.1 Top-hat rail mounting

Simply clip the device onto the top-hat rail (EN 50 022) (see Fig. 4).

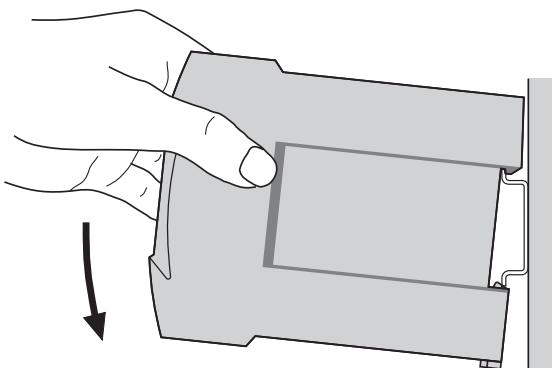


Fig. 4. Mounting on top-hat rails 35 x 15 or 35 x 7.5 mm.

### 6.2 Wall mounting

Drill 2 holes in the wall or panel as shown in the drilling pattern (Fig. 5). Now secure the adapter (standard accessory) to the wall or panel using two 5 mm diameter screws (Fig. 6). Clip the device onto the adapter (Fig. 7).

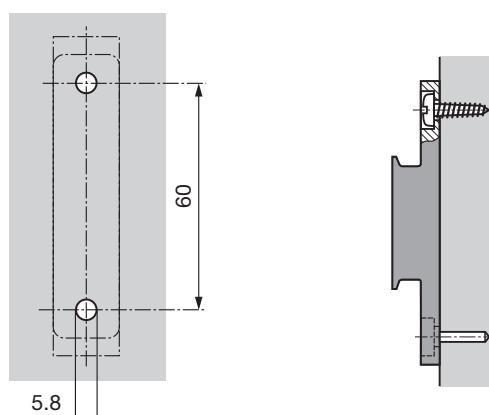


Fig. 5. Drilling pattern.

Fig. 6. Adapter mounted on wall.

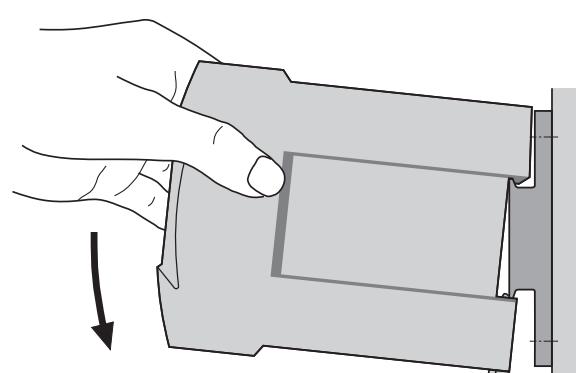


Fig. 7. Mounting on the adapter.

<sup>1</sup> “Input” and “output” in this case refer to the direction of power supply flow.

## 7. Electrical connections

The electrical connections are made to screw terminals which are easily accessible from the front of the signal isolator (see Fig. 9) and can accommodate wire gauges up to 2,5 mm<sup>2</sup>.



Make sure that the cables are not live when making the connections!



In the case of "Intrinsically safe" explosionproof version, the supplementary information given on the type examination certification, the EN 60 079-14 and also local regulations applicable to electrical installations in explosion hazard areas must be taken into account.



Note that, ...

... the required electrical insulation and transmission data agree with the data on the nameplate of the SINEAX SI 815-5 (-→ input signal and → output signal, see Fig. 8)!

... the input and output cables should be twisted pairs and run as far as possible away from heavy current cables!

Connect the input E and output A leads and according to Fig. 9.

### Signal isolator in housing N17 with one isolation and transmission channel

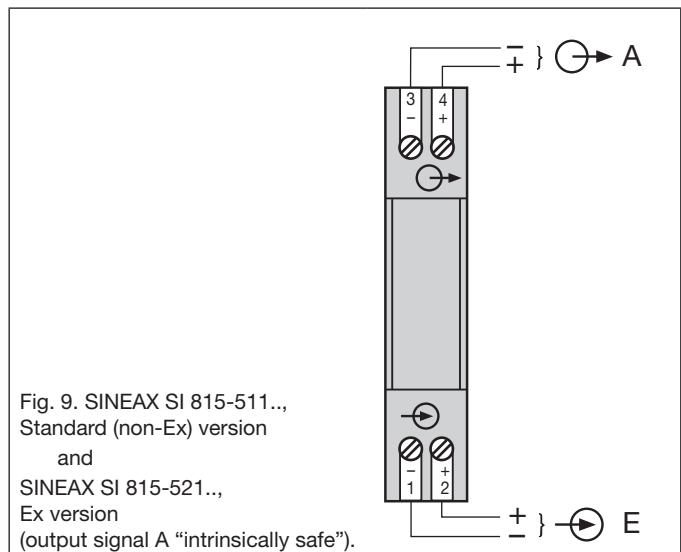


Fig. 9. SINEAX SI 815-511...,

Standard (non-Ex) version

and

SINEAX SI 815-521...,

Ex version


(output signal A "intrinsically safe").

### 7.1 Connection of the hand-held-terminals HHT

The FSK transmission versions of the isolation transformers SINEAX SI 815-5111. and SI 815-5.11. can relay a frequency modulated digital signal in both directions in addition to the analog signal and the auxiliary supply. Connect the hand-held terminal HHT as shown in Figures 10 and 11.



The burden of the signalling circuit must be as least 250 Ω. The burden is represented in Figures 10 and 11 by the resistor R<sub>B</sub>.

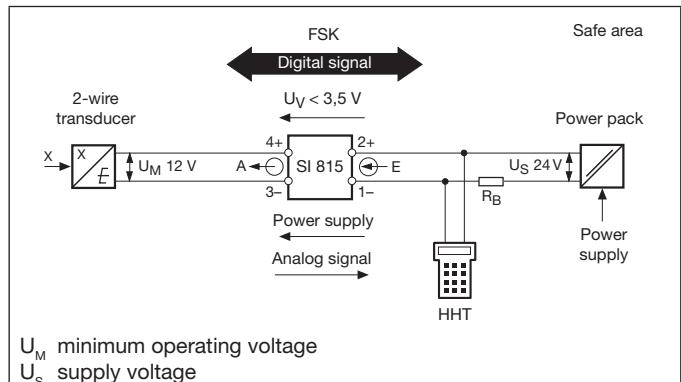

$U_M$  minimum operating voltage

$U_s$  supply voltage

FSK  
Digital signal

$U_V < 3,5$  V

Power supply

Analog signal

Safe area

Power pack

HHT

Power supply

## 8. Commissioning and maintenance

The device is in operation as soon as the input signal E is connected.

The signal isolator requires no maintenance.

## 9. Releasing the signal isolator

Release the signal isolator from a top-hat rail as shown in Fig. 12 or from the adapter as shown in Fig. 13.

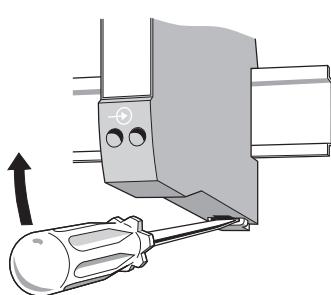


Fig. 12

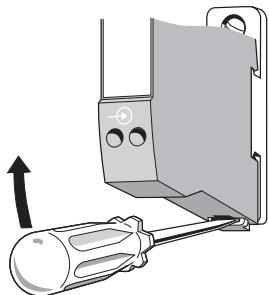


Fig. 13

## 10. Dimensional drawings

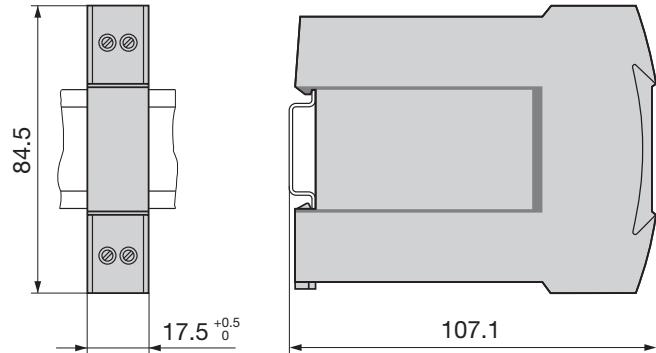


Fig. 14. SINEAX SI 815-5.... (housing N17) clipped onto a top-hat rail (35 x 7.5 or 35 x 15 mm, acc. to EN 50 022).

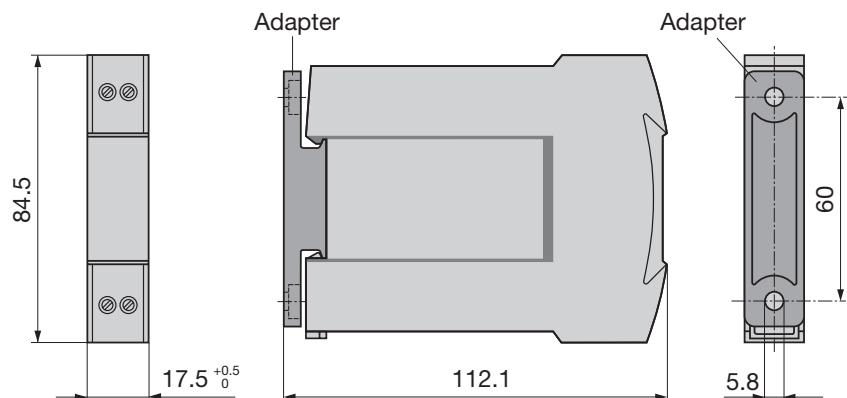


Fig. 15. SINEAX SI 815-5.... (housing N17) with adapter for wall mounting.

## 11. Declaration of conformity



### EG - KONFORMITÄTSERKLÄRUNG CAMILLE BAUER DECLARATION OF CONFORMITY

Dokument-Nr./  
Document No.:

SI 815\_CE-konf.DOC

Hersteller/  
Manufacturer:

Camille Bauer AG  
Switzerland

Anschrift /  
Address:

Aargauerstrasse 7  
CH-5610 Wohlen

Produkbezeichnung/

Passiver DC- Signal trenner  
Passive DC signal isolator

Typ / Type:

SINEAX SI 815

Das bezeichnete Produkt stimmt mit den Vorschriften folgender Europäischer Richtlinien überein, nachgewiesen durch die Einhaltung folgender Normen:  
The above mentioned product has been manufactured according to the regulations of the following European directives proven through compliance with the following standards:

Nr. / No.	Richtlinie / Directive
2004/108/EG 2004/108/EC	Elektromagnetische Verträglichkeit - EMV - Richtlinie Electromagnetic compatibility -EMC directive

EMV / EMC	Fachgrundnorm / Generic Standard	Messverfahren / Measurement methods
Störabstimmung / Emission	EN 61000-6-4 : 2007	EN 55011 : 2007+A2:2007
Störfestigkeit / Immunity	EN 61000-6-2 : 2005	IEC 61000-4-2: 1995+A1:1998+A2:2001 IEC 61000-4-3: 2006+A1:2007 IEC 61000-4-4: 2004 IEC 61000-4-6: 2008

Nr. / No.	Richtlinie / Directive
2006/95/EG 2006/95/EC	Elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungs-grenzen – Niederspannungsrichtlinie – CE-Kennzeichnung ; 95 Electrical equipment for use within certain voltage limits – Low Voltage Direc-tive – Attachment of CE mark : 95
EN 61 010-1 : 2001	IEC 1010-1 : 2001

Ort, Datum /  
Place, date:

Wohlen, 2.Okttober.2009

Unterschrift / signature:

M. Ulrich  
Leiter Technik / Head of engineering

J. Brem  
Qualitätsmanager / Quality manager