Operating Instructions Condumax CLS15/16/21

Analog sensors

For conductive measurement of conductivity in liquids



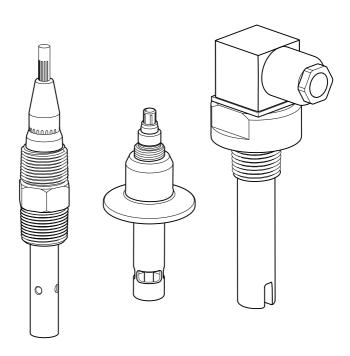




Table of contents

1 1.1 1.2	Document information3Warnings3Symbols3
2.1 2.2 2.3 2.4 2.5	Basic safety instructions4Requirements for personnel4Designated use4Occupational safety4Operational safety5Product safety5
3.1 3.2 3.3 3.4	Incoming acceptance and product identification
4 4.1 4.2	Installation10Mounting the sensor10Post-installation check14
5 5.1 5.2 5.3 5.4	Electrical connection14Connection conditions15Connecting the sensor16Ensuring the degree of protection17Post-connection check17
6	Commissioning 17
7	Maintenance 18
8 8.1 8.2 8.3	Repair19Sealing ring replacement and recalibration (CLS16 only)19Return19Disposal20
9	Technical data 21
10	EU Declaration of conformity 27

Condumax CLS15/16/21 Document information

1 Document information

1.1 Warnings

Structure of information	Meaning		
▲ DANGER Causes (/consequences) Consequences of non-compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation will result in a fatal or serious injury.		
▲ WARNING Causes (/consequences) Consequences of non-compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid the dangerous situation can result in a fatal or serious injury.		
Causes (/consequences) Consequences of non-compliance (if applicable) Corrective action	This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or more serious injuries.		
NOTICE Cause/situation Consequences of non-compliance (if applicable) Action/note	This symbol alerts you to situations which may result in damage to property.		

1.2 Symbols

Symbol	Meaning
•	Additional information, tips
✓	Permitted or recommended
×	Not permitted or not recommended
II.	Reference to device documentation
	Reference to page
	Reference to graphic
L	Result of a step

Basic safety instructions Condumax CLS15/16/21

2 Basic safety instructions

2.1 Requirements for personnel

- Installation, commissioning, operation and maintenance of the measuring system may be carried out only by specially trained technical personnel.
- The technical personnel must be authorized by the plant operator to carry out the specified activities.
- The electrical connection may be performed only by an electrical technician.
- The technical personnel must have read and understood these Operating Instructions and must follow the instructions contained therein.
- Measuring point faults may be repaired only by authorized and specially trained personnel.
- Repairs not described in the Operating Instructions provided may only be carried out directly by the manufacturer or by the service organization.

2.2 Designated use

The conductivity sensors are designed for the conductive measurement of the conductivity of liquids.

They are used in the following fields:

Sensor	Applications	Hazardous areas
Condumax CLS15	Measurements in pure and ultrapure water	Approved for Ex zone 0
Condumax CLS16	Measurements in pure and ultrapure water with hygienic requirements	Approved for Ex zone 0
Condumax CLS21	Measurements in media with medium or high conductivity	Approved for Ex zone 0

Use of the device for any purpose other than that described, poses a threat to the safety of people and of the entire measuring system and is therefore not permitted.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Occupational safety

As the user, you are responsible for complying with the following safety conditions:

- Installation guidelines
- Local standards and regulations
- Regulations for explosion protection

Electromagnetic compatibility

- The product has been tested for electromagnetic compatibility in accordance with the applicable European standards for industrial applications.
- The electromagnetic compatibility indicated applies only to a product that has been connected in accordance with these Operating Instructions.

Condumax CLS15/16/21 Basic safety instructions

2.4 Operational safety

1. Before commissioning the entire measuring point, verify that all connections are correct. Ensure that electrical cables and hose connections are undamaged.

- 2. Do not operate damaged products, and safeguard them to ensure that they are not operated inadvertently. Label the damaged product as defective.
- If faults cannot be rectified:
 Take the products out of operation and safeguard them to ensure that they are not operated inadvertently.

2.5 Product safety

2.5.1 State of the art

The product is designed to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate. The relevant regulations and European standards have been observed.

2.5.2 Electrical equipment in hazardous areas

ATEX/NEPSI II 1G Ex ia IIC T3/T4/T6 Ga

- The sensors CLS15 / CLS16 / CLS21 have been developed and manufactured in compliance with applicable European standards and guidelines and are suitable for use in hazardous areas. The EC type examination certificate confirms compliance with the harmonized European standards for using the sensors in hazardous areas. The corresponding EU declaration of conformity is part of this document.
- The sensors may only be operated on suitable intrinsically safe circuits. Make sure that the maximal permissible sensor input characteristic values, the maximum permissible inductance L_i and capacitance values C_i in these circuits and the ambient temperature ranges indicated are not exceeded.
- The electrical connection must be made according to the wiring diagram of the transmitter.
- Metallic process connection parts must be mounted at the mounting location electrostatically conductive (< 1 $M\Omega$).
- The CLS15-type sensors with non-metal process connections and the CLS21-type sensors may only be employed for measurement in liquids with a minimum conductivity of 10 nS/cm.
- The CLS15-type sensors with non-metal process connections may not be operated under process conditions in which electrostatic charging of the sensor, and particularly of the electrically insulated outer electrode, is likely to occur.
- The maximum permissible cable length is limited by the maximum permissible characteristic values of the transmitter: the total of the maximum permissible inductance L_i and capacitance values C_i for the sensor and measuring cable may not exceed the maximum permissible inductance L_o and capacitance values C_o for the transmitter.
- When connected to the Mycom S CLM153 transmitter, the maximum permissible length of measuring cables CYK71/CYK71-Ex or CPK9 is 16 m. When connected to the Liquiline M CM42 transmitter, the maximum length is 50 m.
- Full compliance with regulations for electrical systems in hazardous areas (e.g. EN/IEC 60079-14) is mandatory when using the devices and sensors.

Temperature classes

Name	Туре						Medium temp. T _a for temperature class (Tn)	Cat.
			x1	x2	х3	х4		
Condumax	CLS15	-	*	**	*	A	-20 °C ≤ Ta ≤ +140 °C (T3) -20 °C ≤ Ta ≤ +115 °C (T4) -20 °C ≤ Ta ≤ +65 °C (T6)	II 1G
Condumax	CLS16	-	Х	**	*	A/B	-5 °C ≤ Ta ≤ +150 °C (T3) -5 °C ≤ Ta ≤ +115 °C (T4) -5 °C ≤ Ta ≤ +65 °C (T6)	II 1G
Condumax	CLS21	-	*	**	*	D	-20 °C ≤ Ta ≤ +135 °C (T3) -20 °C ≤ Ta ≤ +130 °C (T4) -20 °C ≤ Ta ≤ +80 °C (T6)	II 1G
	CLS21	-	*	**	*	A	-20 °C ≤ Ta ≤ +135 °C (T3) -20 °C ≤ Ta ≤ +115 °C (T4) -20 °C ≤ Ta ≤ +65 °C (T6)	II 1G

X ... Variant not applicable

- x1 ... Measuring range and cell constant (no Ex relevance)
- x2 ... Process connection / material (no Ex relevance)
- x3 ... Measuring cable connection
- x4 ... Temperature sensor: A = Pt 100, B = Pt 1000, D = without temperature sensor
- If the specified medium temperatures are complied with, temperatures that are not permitted for the respective temperature class will not occur on the equipment.
- With the exception of sensor version CLS15-*1M**, for functional reasons the CLS15 sensors may only be operated up to 120 °C (248 °F) during continuous operation / and up to 140 °C (284 °F) for short periods. The CLS15-*1M** version may only be operated up to 100 °C (212 °F) during continuous operation.
- For functional reasons, the CLS16 sensors may only be operated up to 120 $^{\circ}$ C (248 $^{\circ}$ F) during continuous operation / and up to 150 $^{\circ}$ C (302 $^{\circ}$ F) for short periods.

The following connection values are safety limits which may not be exceeded when connecting to the transmitter:

Parameters	Connection data
Supply circuit	Intrinsically safe
Maximum input voltage U _i	15 V
Maximum input current I _i	30 mA
Maximum input power P _i	130 mW
Maximum internal capacitance C _i	Negligible
Maximum internal inductance L _i	Negligible

Parameters	Connection data
Measuring cable CPK9 / CYK71	
Maximum internal capacitance C _i	1 nF/m
Maximum internal inductance L _i	6 μH/m

FM/CSA IS/NI Cl.1 Div.1&2 Gr. A-D

Observe the documentation and the control drawings of the transmitter.

3 Incoming acceptance and product identification

3.1 Incoming acceptance

- 1. Verify that the packaging is undamaged.
 - Notify your supplier of any damage to the packaging.

 Keep the damaged packaging until the matter has been settled.

 The packaging are the packaging of the packaging are the packaging.

 The packaging are the packaging are the packaging are the packaging.

 The packaging are the packagi
- 2. Verify that the contents are undamaged.
 - Notify your supplier of any damage to the delivery contents. Keep the damaged products until the matter has been settled.
- 3. Check the delivery for completeness.
 - └─ Check it against the delivery papers and your order.
- **4.** Pack the product for storage and transportation in such a way that it is protected against impact and moisture.
 - The original packaging offers the best protection.

 The permitted ambient conditions must be observed (see "Technical data").

If you have any questions, please contact your supplier or your local sales center.

3.2 Product identification

3.2.1 Nameplate

The nameplate provides you with the following information on your device:

- Manufacturer identification
- Extended order code
- Serial number
- Safety information and warnings
- Cell constant (nominal value)
- Protection class
- Ex labeling on hazardous area versions
- ► Compare the data on the nameplate with your order.

3.2.2 Product identification

Product page

www.endress.com/cls15

www.endress.com/cls16

www.endress.com/cls21

Interpreting the order code

The order code and serial number of your product can be found in the following locations:

- On the nameplate
- In the delivery papers

Obtaining information on the product

- 1. Go to the product page for your product on the Internet.
- 2. At the bottom of the page, select the "Online Tools" link followed by "Check your device features".
 - ► An additional window opens.
- 3. Enter the order code from the nameplate into the search field, and then select "Show details".
 - You will receive information on each feature (selected option) of the order code.

Manufacturer's address

Endress+Hauser Conducta GmbH+Co. KG Dieselstraße 24 D-70839 Gerlingen

3.3 Scope of delivery

The scope of delivery includes:

- Sensor in the version ordered
- Cable connector, for connecting to CYK71 measuring cable (only for plug-in head versions CLS15 CLS21)
- Operating Instructions

3.4 Certificates and approvals

3.4.1 (£ mark

Declaration of conformity

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EU directives. The manufacturer confirms successful testing of the product by affixing to it the CE mark.

3.4.2 Hazardous area approvals

ATEX II 1G Ex ia IIC T3/T4/T6 Ga

FM/CSA IS/NI Cl. I Div.1&2 Gr. A-D in conjunction with Liquiline M CM42 transmitter

3.4.3 **EHEDG** (CLS16 only)

Validated as follows:

- Cleanability in accordance with EHEDG. Document 2
- Sterilizability in accordance with EHEDG, Document 5
- Bacteria-tightness in accordance with EHEDG, Document 7

3.4.4 FDA (CLS16 only)

All materials in contact with the product are listed by the FDA.

3.4.5 Manufacturer inspection certificate

Stating the individual cell constant

3.4.6 Biological reactivity test (USP class VI, CLS16 only)

Biological reactivity test certificate according to USP (United States Pharmacopeia) part <87> and part <88> class VI with batch traceability of materials in contact with the medium

3.4.7 Inspection certificate in accordance with EN 10204 3.1

A test certificate 3.1 in accordance with EN10204 is supplied depending on the version (\rightarrow Product Configurator on the product page).

3.4.8 ASME (CLS16 only)

Manufactured in accordance with ASME criteria (American Society of Mechanical Engineers)

3.4.9 Ex-certification body

TÜV Rheinland Industrie Service GmbH

Cologne


Installation Condumax CLS15/16/21

4 Installation

4.1 Mounting the sensor

4.1.1 CLS15

The sensors are installed directly via the process connection thread NPT $\frac{1}{2}$ " or $\frac{3}{4}$ " or clamp 1 $\frac{1}{2}$ ". As an option, the sensor can also be installed using a commercially available T-piece or cross fitting or using a flow assembly.

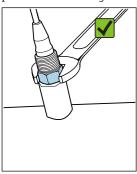




NOTICE

Incorrect mounting or disassembly

The sensor head could become loose and fall off, resulting in total sensor failure

- ▶ Only mount the sensor via the process connection.
- ► To do so, use a suitable tool, such as an open-ended wrench.

Condumax CLS15/16/21 Installation

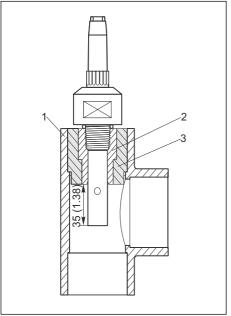

- Ø 6 (0.24) Ø 29 (1.14) A0024199 A0024200 With NPT 1/2" thread in T-piece or cross **₽** 2 With NPT ½" thread in flow assembly

38.5 (1.52)

3

fitting

№ 1


- *T-piece or cross fitting (DN 32, 40 or 50)*
- Glue-in VC threaded coupling (NPT 1/2" for DN 20)
- 3 Glue-in adapter coupling (for DN 32, 40, 50)
- 71042405, dimensions in mm (inch)
- 1 Sensor holder NPT 1/2"
- 2 Inlet
- 3 Outlet


Ensure that the electrodes are fully immersed in the medium during measurement. The immersion depth must be at least 35 mm (1.38"). If the sensor is being used in the ultrapure water range, you must work under air-evacuated conditions. Otherwise the CO₂ in the air can dissolve in the water and its (weak) dissociation can increase the conductivity by up to 3 μ S/cm.

Installation Condumax CLS15/16/21

4.1.2 CLS16

The sensors are installed directly via the process connection. Take the flow direction into consideration when installing in pipes.

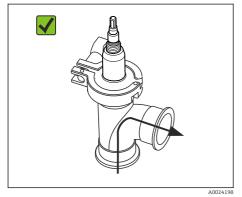

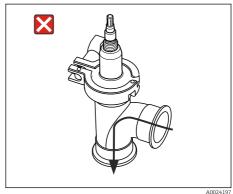

■ 3 Permitted flow direction

■ 4 Inadmissible flow direction

Ensure that the electrodes are fully immersed in the medium during measurement. If the sensor is being used in the ultrapure water range, you must work under air-evacuated conditions. Otherwise the CO_2 in the air can dissolve in the water and its (weak) dissociation can increase the conductivity by up to 3 μ S/cm.


4.1.3 CLS21

Clamp connection

Both sheet-metal brackets and solid brackets can be used to secure the sensor. Sheet-metal brackets have a lower dimensional stability, uneven bearing surfaces causing point loads, and sometimes sharp edges that can damage the clamp. We recommend you only use solid brackets due to their higher dimensional stability. Solid brackets can be used over the entire pressure/temperature range (see pressure-temperature ratings).

Condumax CLS15/16/21 Installation

The sensors are installed directly via the process connection. As an option, the sensor can also be installed via a flow assembly.

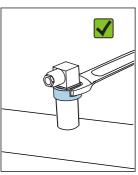





NOTICE


Incorrect mounting or disassembly

The sensor head could become loose and fall off, resulting in total sensor failure

- ▶ Only mount the sensor via the process connection.
- ► To do so, use a suitable tool, such as an open-ended wrench.

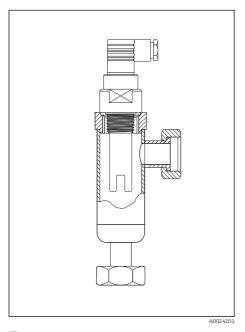




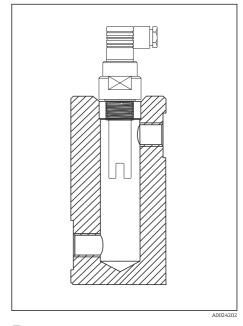

■ 6 Installation in flow assembly CLA752

Electrical connection Condumax CLS15/16/21

The Dipfit CLA111 immersion assembly is available to install sensors with a G1 thread in vessels.

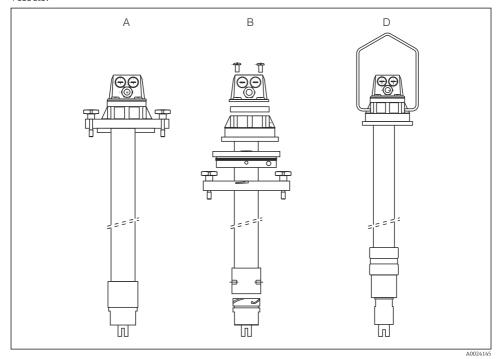

 \blacksquare 7 Installation in Dipfit CLA111 immersion assembly, fastening versions A, B and D

Ensure that the electrodes are fully immersed in the medium during measurement.

4.2 Post-installation check

- Are the sensor and cable undamaged?
- Is the sensor installed in the process connection and is not suspended from the cable?

5 Electrical connection

▲ WARNING

Device is live


Incorrect connection may result in injury or death

- ▶ The electrical connection may be performed only by an electrical technician.
- ► The electrical technician must have read and understood these Operating Instructions and must follow the instructions contained therein.
- ▶ **Prior** to commencing connection work, ensure that no voltage is present on any cable.

Condumax CLS15/16/21 Electrical connection

5.1 Connection conditions

5.1.1 Connection at a glance

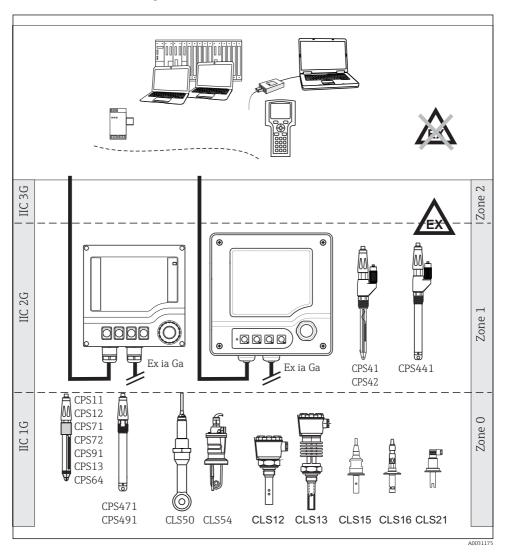


■ 8 Electrical connection in hazardous areas

Electrical connection Condumax CLS15/16/21

5.2 Connecting the sensor

5.2.1 CLS15 and CLS21

The sensor is connected via the fixed cable or via the CYK71 measuring cable with a shield. The wiring diagram is provided in the Operating Instructions of the transmitter used.

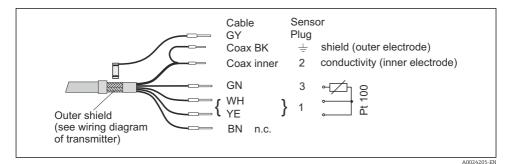


■ 9 Measuring cable CYK71

A compatible cable connector is included in the delivery for the plug-in head versions. You must terminate the CYK71 cable (not included in the delivery) with the cable connector at the sensor end according to the connection diagram above.

A VMB junction box and another CYK71 cable are required for the cable extension.

5.2.2 CLS16

The sensor is electrically connected via the CPK9 measuring cable (plug-in head versions) or the sensor's fixed cable. The wiring diagram is provided in the Operating Instructions of the transmitter used.

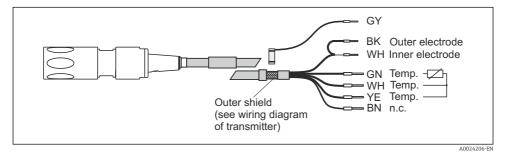

■ 10 Measuring cable CPK9

A VMB junction box and a CYK71 cable are required for the cable extension.

Condumax CLS15/16/21 Commissioning

5.3 Ensuring the degree of protection

Only the mechanical and electrical connections which are described in these instructions and which are necessary for the required, designated use, may be carried out on the device delivered.

► Exercise care when carrying out the work.

Otherwise, the individual types of protection (Ingress Protection (IP), electrical safety, EMC interference immunity) agreed for this product can no longer be guaranteed due, for example, to covers being left off or cable (ends) which are loose or insufficiently secured.

5.4 Post-connection check

Device condition and specifications	Notes	
Are the outside of the sensor, assembly, cable undamaged?	Visual inspection	
Electrical connection	Notes	
Are the installed cables strain-relieved and not twisted?		
Is a sufficient length of the cable cores stripped, and is it positioned in the terminal correctly?	Check the fit (by pulling gently)	
Are all the screws terminals properly tightened?	Tighten	
Are all cable entries mounted, tightened and leak-tight?	For lateral cable entries, make sure the cables	
Are all cable entries installed downwards or mounted laterally?	loop downwards to allow water to drip off	

6 Commissioning

Before first commissioning, check if:

- the sensor is correctly installed
- the electrical connection is correct.

If using an assembly with automatic cleaning, check that the cleaning medium (e.g. water or air) is connected correctly.

A WARNING

Escaping process medium

Risk of injury from high pressure, high temperatures or chemical hazards

- Before applying compressed air to an assembly with cleaning facility, make sure the connections are correctly fitted.
- Do not install the assembly in the process if you cannot make the correct connection reliably.

Maintenance Condumax CLS15/16/21

7 Maintenance

A CAUTION

Corrosive chemicals

Danger of chemical burns to the eyes and skin. Danger of damage to clothing and equipment

- ► It is absolutely essential to protect the eyes and hands properly when working with acids, bases and organic solvents!
- ► Wear protective goggles and safety gloves.
- ► Clean away splashes on clothes and other objects to prevent any damage.
- Pay particular attention to the information provided in the safety data sheets for the chemicals used.

▲ WARNING

Hydrofluoric acid and mineral acids

Risk of serious or fatal injury from caustic burns

- ► Wear protective goggles to protect your eyes.
- ▶ Wear protective gloves and appropriate protective clothing.
- ► Avoid all contact with the eyes, mouth and skin.
- ► If using hydrofluoric acid, only use plastic vessels.

▲ WARNING

Thiocarbamide

Harmful if swallowed. Limited evidence of carcinogenicity. Possible risk of harm to the unborn child. Dangerous for the environment with long-term effects.

- ▶ Wear protective goggles, protective gloves and appropriate protective clothing.
- $\,\blacktriangleright\,$ Avoid all contact with the eyes, mouth and skin.
- ► Avoid releases into the environment.

Clean away fouling on the sensor as follows depending on the type of fouling:

- 1. Oily and greasy films:
 - Clean with grease remover, e.g. alcohol, as well as hot water and (alkaline) agents containing surfactants (e.g. dishwashing detergent).
- 2. Lime, cyanide and metal hydroxide buildup and low solubility organic buildup: Dissolve buildup with diluted hydrochloric acid (3 %) and then rinse thoroughly with plenty of clear water.
- 3. Sulfidic buildup (from flue gas desulfurization or sewage treatment plants):

 Use a mixture of hydrochloric acid (3 %) and thiocarbamide (commercially available) and then rinse thoroughly with plenty of clear water.
- 4. Buildup containing proteins (e.g. food industry):
 Use a mixture of hydrochloric acid (0.5 %) and pepsin (commercially available) and then rinse thoroughly with plenty of clear water.

Condumax CLS15/16/21 Repair

5. Readily soluble biological buildup: Rinse with pressurized water.

After cleaning or regeneration, you must rinse the sensor thoroughly with water and then recalibrate it.

8 Repair

8.1 Sealing ring replacement and recalibration (CLS16 only)

Intact seals are a prerequisite for safe and reliable measurements. The seal should be replaced at regular intervals to guarantee maximum sensor operational safety and hygiene.

Practical repair intervals can only be determined by the user as they depend greatly on the operating conditions, such as:

- Type and temperature of the product
- Type and temperature of the cleaning agent
- Number of cleanings
- Number of sterilizations
- Operating environment

Recommended intervals for seal replacement (reference values)

Application	Window
Media with temperatures from 50 to 100 °C (122 to 212 °F)	Approx. 18 months
Media with temperatures < 50 °C (122 °F)	Approx. 36 months
Sterilization cycles, max. 150 °C (302 °F), 45 min.	Approx. 400 cycles

To ensure your sensor is operational again after being exposed to very high loads, you can have it regenerated in the factory. In the factory, the sensor is fitted with new seals and recalibrated.

Please contact your sales office for information on replacing the seal and recalibration in the factory.

8.2 Return

The product must be returned if repairs or a factory calibration are required, or if the wrong product was ordered or delivered. As an ISO-certified company and also due to legal regulations, Endress+Hauser is obliged to follow certain procedures when handling any returned products that have been in contact with medium.

To ensure swift, safe and professional device returns, please read the return procedures and conditions at www.endress.com/support/return-material.

Repair Condumax CLS15/16/21

8.3 Disposal

The device contains electronic components and must therefore be disposed of in accordance with regulations on the disposal of electronic waste.

Observe the local regulations.

Condumax CLS15/16/21 Technical data

9 Technical data

9.1 Input

9.1.1 Measured values

- Conductivity
- Temperature

9.1.2 Measuring ranges

Conductivity (in relation to water at 25 $^{\circ}$ C (77 $^{\circ}$ F))

CLS15-A 0.04 to 20 μ S/cm CLS15-B/L 0.10 to 200 μ S/cm CLS16 0.04 to 500 μ S/cm CLS21 10 μ S/cm to 20 mS/cm

Temperature

9.1.3 Cell constant

CLS15-A $k = 0.01 \text{ cm}^{-1}$ CLS15-B/L $k = 0.1 \text{ cm}^{-1}$ CLS16 $k = 0.1 \text{ cm}^{-1}$

CLS21 $k = 1.0 \text{ cm}^{-1}$, nominal

9.1.4 Temperature compensation

Pt 100 (class A as per IEC 60751) (CLS15) (CLS16) (CLS21) Pt 1000 (class A as per IEC 60751) (CLS16, optional)

Technical data Condumax CLS15/16/21

9.2 Performance characteristics

9.2.1 Uncertainty of measurement

CLS15

Each individual sensor is factory-measured in a solution of approx. 5 μ S/cm for cell constant 0.01 cm $^{-1}$ or approx. 50 μ S/cm for cell constant 0.1 cm $^{-1}$ using a reference measuring system traceable to NIST or PTB. The exact cell constant is entered into the quality certificate supplied. The uncertainty of measurement in determining the cell constant is 1.0 %.

CLS16

Each individual sensor is factory-measured in a solution of approx. $5~\mu\text{S/cm}$ using a reference measuring system traceable to NIST or PTB. The exact cell constant is entered into the quality certificate supplied. The uncertainty of measurement in determining the cell constant is 1.0~%.

CLS21

Each individual sensor is factory-measured in a solution of approx. $500 \,\mu\text{S/cmusing}$ a reference measuring system traceable to NIST or PTB. The exact cell constant is entered into the quality certificate supplied. The uncertainty of measurement in determining the cell constant is $1.0 \,\%$.

Condumax CLS15/16/21 Technical data

9.3 Environment

9.3.1 Ambient temperature range

-20 to +60 °C (-4 to 140 °F)

9.3.2 Storage temperature

-25 to +80 °C (-10 to +180 °F)

9.3.3 Degree of protection

CLS16

Fixed cable version IP 67 / NEMA 6
TOP68 plug-in system IP 68 / NEMA 6

CLS21

Fixed cable version IP 67 / NEMA 6
Plug-in head version IP 65 / NEMA 4X

9.4 Process

9.4.1 Process temperature

CLS15

Threaded version with fixed cable $-20 \text{ to } 100 \,^{\circ}\text{C} (-4 \text{ to } 212 \,^{\circ}\text{F})$

Threaded version with plug-in head, Clamp version

Normal operation $-20 \text{ to } 120 \,^{\circ}\text{C} \, (-4 \text{ to } 248 \,^{\circ}\text{F})$ Sterilization (max. 1 h) $^{1)}$ Max. $140 \,^{\circ}\text{C} \, (284 \,^{\circ}\text{F})$

CLS16

Normal operation -5 to 120 °C (23 to 248 °F)

Sterilization (max. 45 min) Max. 150 °C (302 °F) at 6 bar (87 psi) absolute

CLS21

Threaded version with fixed cable $-20 \text{ to } 100 \,^{\circ}\text{C} (-4 \text{ to } 212 \,^{\circ}\text{F})$

Version with plug-in head, Clamp version-20 to +135 $^{\circ}$ C (-4 to 275 $^{\circ}$ F) at 3.5 bar (50 psi)

absolute

1) Threaded versions: max. 30 minutes


Technical data Condumax CLS15/16/21

9.4.2 Process pressure

CLS15	13 bar (188 psi) absolute, at 20 $^{\circ}$ C (68 $^{\circ}$ F)
	2 bar (29 psi) absolute, at 120 $^{\circ}$ C (248 $^{\circ}$ F)
CLS16	13 bar (188 psi) absolute, at 20 $^{\circ}$ C (68 $^{\circ}$ F)
	9 bar (130 psi) absolute, at 120 °C (248 °F)
	0.1 bar (1.5 psi) absolute (negative pressure), at
	20 °C (68 °F)
CLS21	17 bar (246 psi) absolute, at 20 $^{\circ}$ C (68 $^{\circ}$ F)

9.4.3 Temperature/pressure ratings

CLS15

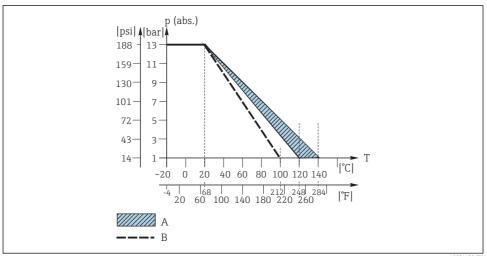


A0031429-EN

■ 11 Mechanical pressure-temperature resistance

- A Can be sterilized for a short time (1 hour)
- B Threaded version with fixed cable

Condumax CLS15/16/21 Technical data


CLS16

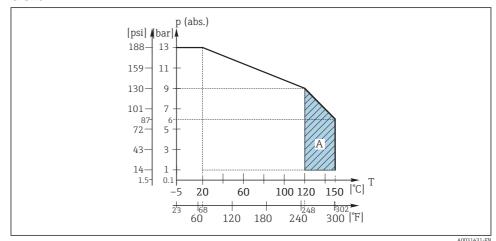

■ 12 Mechanical pressure-temperature resistance

A Can be sterilized for a short time (45 min.)

CLS21

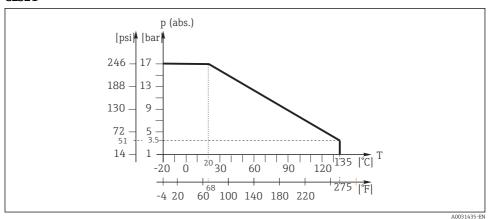

■ 13 Mechanical pressure-temperature resistance

9.5 Mechanical construction

9.5.1 Weight

CLS15 and CLS21

Approx. 0.3 kg (0.66 lbs) depending on version

Technical data Condumax CLS15/16/21

CLS16

Approx. 0.13 to 0.75 kg (0.29 to 1.65 lbs) depending on version

9.5.2 Materials

CLS15

Electrodes Polished, stainless steel 1.4435 (AISI 316L)

Sensor shaft Polyethersulfone (PES-GF20)

O-ring, in contact with medium

(only Clamp version)

EPDM

CLS16

Electrodes Electropolished, stainless steel 1.4435 (AISI 316L)
Seal Gasket seal ISOLAST (FFKM), FDA-compliant

CLS21

Electrodes Graphite

Sensor shaft Polyethersulfone (PES-GF20)

Thermal conductivity socket for Tita

temperature probe

Titanium 3.7035

9.5.3 Process connection

CLS15

Thread NPT $\frac{1}{2}$ " and $\frac{3}{4}$ " Clamp $\frac{1}{2}$ " as per ISO 2852

CLS16

Clamp 1", 1½", 2" as per ISO 2852 (also suitable for TRI-CLAMP, DIN 32676)

Tuchenhagen VARIVENT N DN 50 to 125

NEUMO BioControl D50

CLS21

Thread G1

NPT 1" thread

Clamp 2" as per ISO 2852

Sanitary connection DN 25 as per DIN 11851

9.5.4 Surface roughness (CLS15, CLS16 only)

CLS15

 $R_a \le 0.8 \, \mu m$

CLS16

 $R_a \le 0.8 \mu m$, electropolished

 $R_a \le 0.38 \, \mu m$, electropolished, optional

10 **EU** Declaration of conformity

EG/EU-Konformitätserklärung **EC/EU-Declaration of Conformity** Déclaration CE/UE de Conformité Endress+Hauser [3]

Endress+Hauser Conducta GmbH+Co. KG Dieselstraße 24, 70839 Gerlingen, Germany

erklärt als Hersteller in alleiniger Verantwortung, dass das Produkt declares as manufacturer under sole responsibility, that the product déclare sous sa seule responsabilité en qualité de fabricant que le produit

Condumax CLS12, CLS13, CLS15, CLS16, CLS21

Regulations den folgenden Europäischen Richtlinien entspricht:

conforms to following European Directives:

est conforme aux prescription des Directives Européennes suivantes :

gültig bis/valid until/date d'expiration 19.04.2016 gültig ab/valid from/valide à partir du 20.04.2016

ATEX 94/9/EC 2014/34/EU

Standards angewandte harmonisierte Normen oder normative Dokumente:

applied harmonized standards or normative documents: normes harmonisées ou documents normatifs appliqués :

EN 60079-0 (2012) + A11 (2013)

EN 60079-11 (2012)

Certification EG-Baumusterprüfbescheinigung Nr.

TÜV 15 ATEX 7778 X EC-Type Examination Certificate No.

Numéro de l'attestation d'examen CE de type

Ausgestellt von/issued by/délivré par TÜV Rheinland Industrie Service GmbH (0035)

Technology Certifications and Approvals

1/1

Qualitätssicherung/Quality assurance/Système d'assurance DEKRA Exam GmbH (0158)

qualité

EC_00317_01.16

Gerlingen, 04.04.2016

Endress+Hauser Conducta GmbH+Co. KG

Technology



www.addresses.endress.com