



ESD TESTING WITH PRECISION AND CONVENIENCE

NSG 435, NSG 437, NSG 438 AND NSG 439 ESD SIMULATORS

BENEFIT

HIGH FUNCTIONALITY

- Ergonomic design
- Perfect weight distribution
- Battery powered
- User friendly touch panel display
- Interchangeable discharge networks



WHY ELECTROSTATIC DISCHARGE TESTING?



ESD – high frequency pulse components help diagnose immunity failures. The simulation of electrostatic discharges is an important part of electromagnetic compatibility testing for any type of electronic equipment and is a particularly critical component of EMC test strategies. ESD tests are used to verify complete systems and duplicate disturbances in installations. These tests contribute to identify immunity failures caused by bad cabling or system composition, as well as grounding problems.

Teseq®'s ESD simulators fulfill the requirements of all major ESD standards. Special care has been taken to satisfy the discharge holding time of at least five seconds demanded by the standard. Thanks to stabilized HV output all Teseq® simulators exceed this need by far and guarantee optimized reproducibility of tests. The basic models are type-approved and calibrated to IEC/EN 61000-4-2. A comprehensive range of additional network modules is available for testing to other standards including ISO 10605 and various product standards.


Teseq® provides a traceable calibration certificate with each simulator. Accredited calibration services are also available from Teseq® calibration labs upon request.

An innovative ESD operating concept that provides conformity to both today's and tomorrow's standards. Combining easy operation and ergonomic design with highly sophisticated functionality, Teseq®'s ESD simulators combine all the features of a comprehensive ESD test system in a compact hand-held instrument.

Ergonomic design and advanced functionality. The pistol-shaped NSG 435, NSG 437 and NSG 438 simulators are designed to sit comfortably in the operator's hand, with current operating conditions constantly displayed and clearly visible. All ESD simulators have been ergonomically designed to be held easily for long duration test procedures.

The NSG 435's LCD panel is clearly visible at all times in the operating position and all controls are placed conveniently at the user's fingertips.

Even more convenient is the touch panel display of the NSG 437 and NSG 438 with keypad functions for setting test parameters.

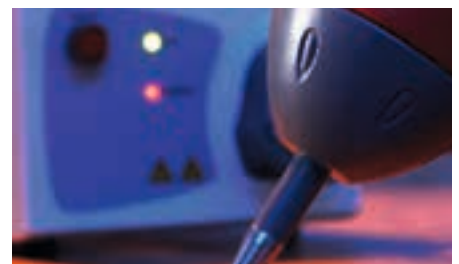


NSG 435 – COMPACT AND COST-EFFECTIVE


The **NSG 435's microprocessor-based controller** and multifunction keypad provide the operator with instant access to its comprehensive range of built-in functions. The LCD panel continuously displays the operating status and all user-selected test parameters. The simulator also includes a discharge pulse counter as well as a counter for long duration tests and remote use.

The **NSG 435 has its own internal, battery operated high voltage generator** producing pulses up to 16.5 kV. In addition to the pre-programmed, standard IEC pulses, the user can create custom tests using single or repetitive discharges with selectable rates and manual or automatic polarity switching. An optional mains supply is available for extended test operation or for use when the battery is being charged.

Both measure and display true air breakdown voltages. It also detects real or valid air discharges, thereby avoiding misleading discharge counts. This is especially important during long term tests and remote test setups.

The simulator is powered by a rechargeable battery supply, so there is no separate high voltage generator or connecting cable to hinder access to the EUT. The battery, which lasts for several days under normal test usage, can be interchanged in seconds, and recharged in just a few hours.

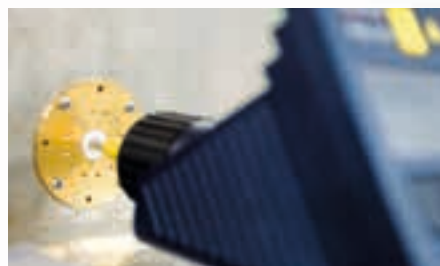

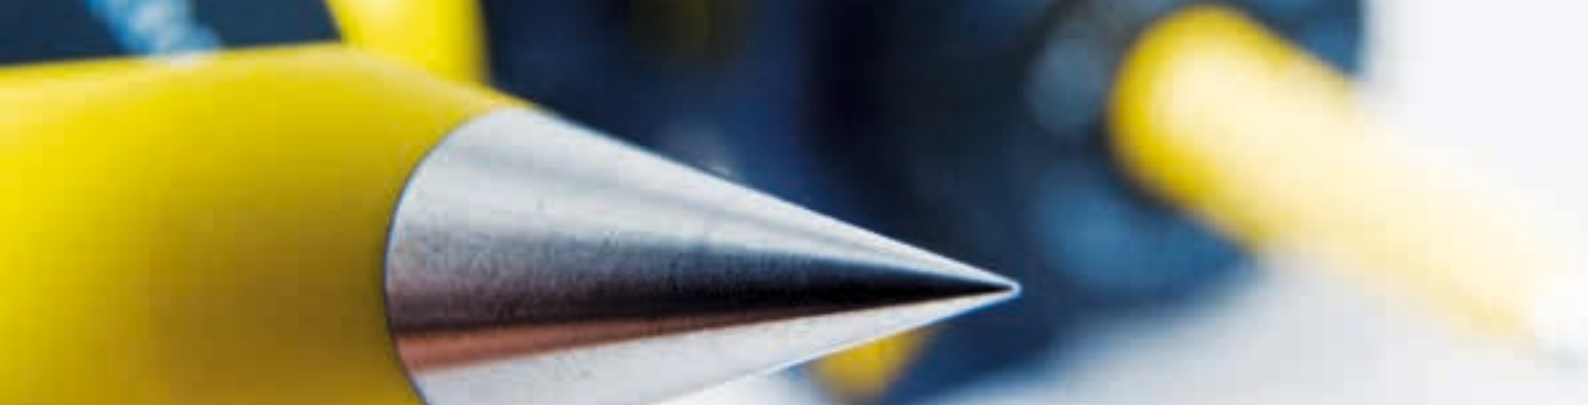

A range of interchangeable discharge networks is available, including EN, ANSI-IEEE, and ISO. The unit comes with a standard 150 pF/330 Ω discharge network for tests to IEC/EN 61000-4-2. The discharge voltage of up to 16.5 kV for air-discharges and up to 9 kV for contact-discharges ensures a comfortable margin over the generally required test levels.

The NSG 435 is supplied with standard accessories, including interchangeable test tips, a grounding cable and battery charger – all in a durable carrying case. There is an optional fiber optic remote control trigger for operation inside a screened room or enclosure.

The LCD panel gives the operator a clear, continuous indication of all the test parameters, the operational status of the instrument and the current function of each of the five soft keys. The display shows the programmed voltage and actual discharge voltage after triggering with polarity indicator, number of discharges and battery status.



- Programmable discharge voltage
200 V to 16.5 kV
- Stabilized charging voltage
- Pre-programmed IEC/EN 61000-4-2
test settings
- True air-discharge breakdown voltage
- Battery powered
- Compact and light-weight design
- Comfortable use and convenient operation

NSG 437 – HIGH PERFORMANCE WITH BASIC FEATURES

NSG 437 ESD simulator comprehensively fulfills virtually all international standard requirements. Based on over 20 optional discharge networks, the NSG 437 can also meet any of today's automotive manufacturers' standards. Furthermore, with pulse voltages of up to 30 kV, the NSG 437 supports demanding manufacturers' R&D test procedures to determine immunity limits.

NSG 437 already meets the proposed new requirements. Revisions of the ESD standards refer to a more precise definition of calibration methods and tighter specifications for pulse parameters, as discussed by ANSI and by IEC.

NSG 437 generates pulses from 200 V to 30 kV, both in air- and contact-discharge operation. The simulator is simple, convenient and safe to use. The whole range of parameter setting possibilities, including polarity selection, counter functions and breakdown detection, remains fully available up to the maximum discharge voltage.

The touch panel display with its keypad for parameter settings shows the precise functional and test data at any moment, perfectly arranged in a logical manner. All essential functions and actual status are displayed, with user-selectable language for convenient and safe operation worldwide.





The simulator contains a threshold detector to eliminate faulty discharge counts over its wide operating voltage range and applications. Only valid HV discharges are indicated. When discharges are detected, the counter or preset counter is incremented or decremented respectively – a particularly useful feature for long test runs. The detection feature can be switched off when testing EUT's with non-conductive surfaces, such as plastic housings.

A wide range of discharge networks and tips fulfills the high demand for different test applications and can be exchanged. Completed by a wide selection of rigid and flexible discharge tips, any application is possible.

Molded HV discharge networks in solid cases eliminate ionization and leakage current effects. Selected combinations of RC components guarantee wave shape parameters to be within tolerances. Discharge network modules with resistance values from zero ohms combined with capacitances up to the nF-range can be simply pushed into place.

Pre-programmed settings for IEC/EN 61000-4-2 and ISO 10605 ensure that the simulator is automatically set up correctly. The menu with last settings automatically comes up again after shut-down of a test sequence.

Automatic self-calibration of the NSG 437 simulator is performed at every start-up. This procedure runs up to max. voltage in either polarity, thus giving confidence, that test levels are maintained within tolerances.



- Air- and contact-discharge up to 30 kV
- Light version featuring uncompromised test performance
- Compliant with a wide range of standards (IEC, ANSI, SAE, ISO)
- Touch panel display controls
- Easily and quickly interchangeable network modules
- Wide range of accessories (HV networks, tips, adapters)

NSG 438 – OPTIMIZED FOR AUTOMOTIVE TESTING

NSG 438 ESD simulator comprehensively fulfills virtually all international standard requirements. Based on over 20 optional discharge networks, the NSG 438 can also meet any of today's automotive manufacturers' standards. Furthermore, with pulse voltages of up to 30 kV, the NSG 438 supports demanding manufacturers' R&D test procedures to determine immunity limits.

NSG 438 already meets the proposed new requirements. Revisions of the ESD standards refer to a more precise definition of calibration methods and tighter specifications for pulse parameters, as discussed by ANSI and by IEC.

NSG 438 generates pulses from 200 V to 30 kV, both in air- and contact-discharge operation. The simulator is simple, convenient and safe to use. The whole range of parameter setting possibilities, including polarity selection, freely adjustable pulse repetition, counter functions and breakdown detection, remains fully available up to the maximum discharge voltage.

The touch panel display with its virtual thumb wheel or keypad for parameter settings shows the precise functional and test data at any moment, perfectly arranged in a logical manner. All essential functions and actual status are displayed, with user-selectable language for convenient and safe operation worldwide.

The simulator contains variable threshold selection to enable accurate discharge detection and to eliminate faulty discharge counts over its wide operating voltage range and applications. Only valid HV discharges are indicated. When a discharge is detected, the counter or preset counter is incremented or decremented respectively – a particularly useful feature for long test runs. The detection feature can be switched off when testing EUT's with non-conductive surfaces, such as plastic housings.





A wide range of discharge networks and tips fulfills the high demand for different test applications and can be exchanged. Completed by a wide selection of rigid and flexible discharge tips, any application is possible.

Molded HV discharge networks in solid cases eliminate ionization and leakage current effects. Selected combinations of RC components guarantee wave shape parameters to be within tolerances. Discharge network modules with resistance values from zero ohms combined with capacitances up to the nF-range can be simply pushed into place.

Pre-programmed settings for IEC/EN 61000-4-2 and ISO 10605 ensure that the simulator is automatically set up correctly and the appropriate discharge network is installed. The actual R/C value is displayed at all times.

Users can create and store test conditions in the instrument's memory for subsequent reuse. The menu with last settings does automatically come up again after shut-down of a test sequence. A list of saved test conditions can be called up at any time. A built in optical interface enables external control of the simulator.

Safety interlock. The high-voltage simulator can only be activated as a result of a deliberate actions by the user. In all other cases, the instrument switches itself off automatically. An integral interlock system allows setting up accessibility and safety configurations even in combination with other test instruments. For extra safety an emergency stop switch is built in.



- Air- and contact-discharge up to 30 kV
- Compliant with a wide range of standards (IEC, ANSI, SAE, ISO)
- Built-in ISO self-calibration procedure
- Powered by high-energy battery pack
- Touch panel display controls
- Easily and quickly interchangeable network modules
- Adjustable discharge detector



With the built-in ISO calibration self-test feature considerable time can be saved by eliminating extra calibration and functional measurements before starting a test procedure as required by the ISO standard. The calibration routine is configured for all required voltage levels in either polarity and summarized in a convenient, easy to read table form including relevant tolerances.

The freely adjustable pulse repetition rate ranges from 0.04 s to 300 s. This allows greatest flexibility for R&D purpose and some specific product standards, where the prestored pulse repetition rates may not match all requirements.

A special random generator function is provided for non-standard interference immunity tests. The controlled statistical repetition rate of pulse triggering can be programmed in either pulse or time mode. Thereby major benefits are experienced primarily for multi-clock systems by cutting down overall test time considerably.

In conjunction with an optional charge remover, it is possible to program the time to complete discharge of the charged EUT via bleed-off resistor, and the delay time until the next pulse takes place. This option enables the EUT to be reset to a defined status (ground potential) before the next discharge occurs.

NSG 438 is packed in a convenient and stable carrying case with space for accessories.



NSG 439 – FULLY AUTOMATED ROBOTIC ESD TESTING

- Complete system solution with 30 kV ESD simulator for robotic applications
- Compact and specially designed housing
- Unique robotic air-discharge adapter
- Fully compliant with IEC/EN 61000-4-2 and ISO 10605
- Robot attachment points on multiple enclosure faces
- Easily and quickly interchangeable networks

Today's growing trend towards miniaturizing and more comprehensive product standards means that ESD testing is now required not only for operating controls, but also for any associated peripheral devices such as sensors, actuators and controllers. Many of these devices have multi-pin connectors with high pin counts. In order to meet space restrictions, these pins are often arranged close together.

With an innovative robotic air-discharge adapter accessory, Teseq® provides a tool which will prevent unintentional discharge paths. However, conventional air-discharge testing of these closely spaced pins is problematic because the air-discharge arc may jump to an adjacent pin instead of the pin intended for test. Furthermore, the approach speed, which is crucial for reliable air-discharge testing, can be programmed as a constant.

ESD testing of connectors often requires that each individual pin is tested for an extensive range of conditions including multiple discharges, polarities, voltage settings, and even R/C networks. Connector testing can take many hours or even days of monotonous, precise effort to complete. As a result, when this testing is done manually it is prone to errors. The advantage of robotic testing is that these procedures can be automated and precisely executed, ensuring a level of repeatability that cannot be achieved with manual testing.

NSG 439 has been designed to withstand the large acceleration forces found in harsh robotic environments. The ESD simulator includes all NSG 438 functions, and supports the complete set of discharge networks and optional discharge probes. In order to guarantee the greatest possible functionality, Teseq® offers the NSG 439 only as a complete test station including the robotic mechanism, ESD simulator, control software, test bench and interlocked enclosure.



TECHNICAL SPECIFICATIONS



Information	NSG 435	NSG 437	NSG 438/NSG 438A/NSG 439
Description	Compact ESD simulator with microprocessor-based, large LCD panel, built-in HV relay for contact-discharge, battery and mains operation	Compact ESD simulator with microprocessor-based, large touch-sensitive LCD panel, built-in HV relay for contact-discharge, mains operation	Compact ESD simulator with microprocessor-based, large touch-sensitive LCD panel, built-in HV relay for contact-discharge, battery and mains operation
Basic set	Carrying case with: <ul style="list-style-type: none"> ■ Electrostatic discharge simulator ■ Battery pack ■ Battery charger 100 to 240 VAC ■ Discharge network 150 pF/330 Ω ■ Air- and contact-discharge tips ■ Grounding cable ■ Tripod adapter ■ User Manual 	Package with: <ul style="list-style-type: none"> ■ Discharge pistol ■ High voltage base unit ■ Mains power supply adapter (100 to 250 VAC) ■ Discharge network 150 pF/330 Ω ■ Air- and contact-discharge tips ■ Grounding cable ■ User Manual 	Carrying case with: <ul style="list-style-type: none"> ■ Discharge pistol ■ Cradle for discharge pistol ■ High voltage base unit with built-in battery pack ■ Mains adapter and battery charging unit (100 to 250 VAC) ■ Discharge network 150 pF/330 Ω ■ Air- and contact-discharge tips ■ Grounding cable ■ User Manual ■ 25 mm discharge sphere
Pulse data	Standard: Conforms to IEC/EN 61000-4-2 (2001) Special: Interchangeable networks for other standards	Standard: Conforms to IEC/EN 61000-4-2 (2001) Special: Interchangeable networks for other standards	Standard: Conforms to IEC/EN 61000-4-2 (2001) Special: Interchangeable networks for other standards
Pulse networks	Network 150 pF/330 Ω as per IEC/EN 61000-4-2 ed 2.0 Range of R/C-networks for other standards: R = 0 Ω to 10 kΩ C = 60 pF to 500 pF	Network 150 pF/330 Ω as per IEC/EN 61000-4-2 ed 2.0 Optional ISO 10605 networks 150 pF/2 kΩ and 330 pF/2 kΩ. Range of R/C-networks for other standards: R = 0 Ω to 20 kΩ C = 50 pF to 2000 pF	Network 150 pF/330 Ω as per IEC/EN 61000-4-2 ed 2.0 Optional ISO 10605 networks 150 pF/2 kΩ and 330 pF/2 kΩ Range of R/C-networks for other standards: R = 0 Ω to 20 kΩ C = 50 pF to 2000 pF
Discharge voltage	Air-discharge 200 V to 16.5 kV (in 100 V steps) Contact-discharge 200 V to 9 kV (in 100 V steps)	Air-discharge 200 V to 30 kV (in 100 V steps) Contact-discharge 200 V to 30 kV (in 100 V steps)	Air-discharge 200 V to 30 kV (in 100 V steps) Contact-discharge 200 V to 30 kV (in 100 V steps)
Discharge tips	Ball and point as per IEC, fast risetime; exchangeable by threaded cap	Ball and point as per IEC and specials; exchangeable by threaded cap	Ball and point as per IEC and specials; exchangeable by threaded cap

Information	NSG 435	NSG 437	NSG 438/NSG 438A/NSG 439
Charging voltage measurement	kV, accuracy better than $\pm 5\%$ (stabilized); measurement and display of true air flashover voltage	kV, accuracy better than $\pm 5\%$ (stabilized)	kV, accuracy better than $\pm 5\%$ (stabilized)
Discharge detection (air-discharge only)	Indicated by an oval around the kV symbol, also acoustically in the ‚Single‘ operating mode	Indicated by the kV symbol being displayed in inverse, also acoustically in the ‚Single‘ operating mode. Threshold level on/off	Indicated by the kV symbol being displayed in inverse, also acoustically in the ‚Single‘ operating mode. Adjustable threshold level
Holding time	> 5 s (charging voltage $\pm 5\%$)	> 5 s (charging voltage $\pm 5\%$)	> 5 s (charging voltage $\pm 5\%$)
Charge resistor	50 M Ω	50 M Ω	50 M Ω
Triggering	Trigger button in hand-grip or via remote control input	Trigger button in hand-grip	Trigger button in hand-grip or via remote control input
Operation	Via push-buttons and microprocessor	Via touch screen and microprocessor	Via touch screen and microprocessor
Discharge modes	Air-discharge/Contact-discharge	Air-discharge/Contact-discharge	Air-discharge/Contact-discharge
Polarity	Positive/negative/automatic change	Positive/negative/automatic change	Positive/negative/automatic change
Operating modes	Single/repetitive Pulse counter 0 to 9999 Pre-select counter 0 to 9999 Repetition: ■ 0.5/1/5/10/20 or 25 Hz (air) ■ 0.5/1/5 or 10 Hz (contact) ■ continuous operation	Single/repetitive Pulse counter 0 to 9999 Pre-select counter 0 to 9999 Repetition: ■ 0.5/1/5/10/20 or 25 Hz (air) ■ 0.5/1/5/10 or 20 Hz (contact) ■ continuous operation	Single/repetitive/random (time/pulse) Pulse counter 0 to 9999 Pre-select counter 0 to 9999 Repetition: ■ 0.5/1/5/10/20 or 25 Hz (air) ■ 0.5/1/5/10 or 20 Hz (contact) ■ freely selectable from 0.04 s to 300 s ■ continuous operation ■ Built in charge removing (NSG 438A only)
Auto-shut-off	After 30 minutes idle time (without loss of the test parameters)	No auto-shut-off	After 15 minutes idle time (without loss of the test parameters)
Display	LCD panel showing: ■ Charging voltage ■ Discharge voltage ■ Polarity ■ Air-/contact-discharge ■ Counter/preselect counter content ■ Soft-key functions ■ Battery monitor	LCD panel showing: ■ Charging voltage ■ Breakdown event ■ Polarity ■ Air-/contact-discharge ■ Counter/preselect counter content	LCD panel showing: ■ Charging voltage ■ Breakdown event ■ Polarity ■ Air-/contact-discharge ■ Counter/preselect counter content ■ Network parameters ■ Battery monitor
Weight	Pistol with battery: 1.2 kg (2.6 lbs) approx.	Discharge pistol (w/o cable): 1.2 kg (2.6 lbs) approx. Base unit: 5.7 kg (12.6 lbs) approx.	Discharge pistol (w/o cable): 1.2 kg (2.6 lbs) approx. Base unit: 6.5 kg (14.3 lbs) approx.
Ambient conditions	Operation: +5 to +40°C 20 to 80% r.h. (non-condensing) 68 to 106 kPa	Operation: +5 to +40°C 20 to 80% r.h. (non-condensing) 68 to 106 kPa	Operation: +5 to +40°C 20 to 80% r.h. (non-condensing) 68 to 106 kPa












ACCESSORIES



Accessories NSG 435

Basic set (see technical specifications)








Part Number

	Mains power supply (80 to 240 V, 50/60 Hz)	INA 402 01-05
	Spare battery pack. Make sure the right charger gets used, as older chargers are not suited for new batteries.	INA 405
	Remote triggering unit incl. 5 m opto-cable	INA 415
	Opto-link to a PC with 10 m opto-cable	INA 417B
	Special test tip for fast rise time. Where the rise time of 0,8 ns specified in most standards represents more than 80% of real cases, in extreme cases an ESD event may be faster. This can be simulated using this fast rise time test finger which generates rise times around 0,4 ns.	INA 420
	Tripod support for NSG 435	INA 423
	Air discharge tip for NSG 434 and NSG 435	INA 424
	Contact discharge tip for NSG 434 and NSG 435	INA 425
	Special discharge networks (specify R and C)	INA xxx



















Accessories NSG 437 / 438 / 439

Basic set (see technical specifications)

Part Number

	Opto-link set to a PC with 10 m opto-cable (INA 417B is not suitable with NSG 437)	INA 417B
	Discharge network, 150 pF/330 Ω, per: IEC 61000-4-2 (2008), ISO 10605 (2001), (2008)	INA 4380
	Discharge network, 150 pF/2 kΩ, per: ISO 10605 (2001), (2008), SAEJ1113-13, GMW3091, GMW3094, GMW3097, GMW3100	INA 4381
	Discharge network, 330 pF/2 kΩ, per: ISO 10605 (2001), (2008), SAE J1113-13	INA 4382
	Discharge network, 150 pF/330 Ω, per: ANSI C63.16 - Hand/metal model	INA 4383
	Discharge network, 150 pF/75 Ω, per: ANSI C63.16 - Air discharge furniture model	INA 4384
	Discharge network, 150 pF/15 Ω, per: ANSI C63.16 - Contact discharge furniture model	INA 4385

ACCESSORIES

	Fast risetime test tip. Where the rise time of 0,8ns specified in most standards represents more than 80% of real cases, in extreme cases an ESD event may be faster. This can be simulated using this fast rise time test finger which generates rise times around 0,4ns.	INA 4411
	Remote discharge tip with extension (specify R value xx). For applications where ESD pistol needs to stay away from EUT. Consists in banana tip, HV extension cord of 1,5m, ended with resistor unit and set of air and contact test finger.	INA 4413-xx
	Air discharge ball (Discharge sphere). 25 mm diameter test tip adapter to be fixed on 8mm air discharge test finger. To minimize corona discharge when testing in air discharge mode for higher voltages.	INA 4414
	Flexible tip set. Where the application makes access of EUT discharge point difficult. Approx. 30cm flexible extension adapter tips. Set of 2 tips, for air discharge and contact discharge mode.	INA 4415
	Soft touch contact tip. Very convenient adapter tip to test connector pins.	INA 4416
	Banana contact tip. To adapt to 4 mm banana plugs.	INA 4417
	Banana fast risetime tip. To adapt to 4 mm banana plugs.	INA 4418
	E-field adapter	INA 4419
	H-field adapter	INA 4420
	Tripod support for NSG 437, 438. To adapt NSG 437 or 438 pistols to classic tripods as generally used for cameras.	INA 4421
	Carry case for NSG 437/438. Includes foam with professional cut outs for NSG 437, 438 and accessories.	INA 4423
	Charge remover (for NSG 438 and NSG 439 series only)	INA 4430
	Discharge network, 100 pF/100 Ω	INA 4545
	Discharge network, 300 pF/30 Ω	INA 4546
	Discharge network, 150 pF/1500 Ω	INA 4547
	Discharge network, 100 pF/1000 Ω	INA 4548
	Discharge network, 2000 pF/150 Ω	INA 4549
	Discharge network, 1000 pF/2 kΩ, per: ES-X 44017 HMC (Hyundai Motor Company)	INA 4550























ACCESSORIES



	Discharge network, 150 pF/500 Ω , per: JASO D001-87 and 94	INA 4551
	Discharge network, 500 pF/330 Ω	INA 4552
	Discharge network, 330 pF/330 Ω , per: ISO 10605 (2001), (2008), TL 824 66 (Volkswagen)	INA 4553
	Discharge network, 150 pF/150 Ω , per: SAE J1455 A94	INA 4554
	Discharge network, 500 pF/500 Ω , per: MIL-STD-464, Stanag 4239	INA 4555
	Discharge network, 500 pF/100 Ω	INA 4556
	Discharge network, 2000 pF/0 Ω	INA 4557
	Discharge network, 200 pF/150 Ω	INA 4558
	Discharge network, 500 pF/5 k Ω , per: Stanag 4239	INA 4559
	Discharge network, 200 pF/100 Ω	INA 4560
	Discharge network, 100 pF/1500 Ω , per: MIL 883	INA 4561
	Discharge network, 330 pF/0 Ω	INA 4562
	Discharge network, 50 pF/0 Ω	INA 4563
	Discharge network, 100 pF/500 Ω , per: Chrysler PF9326-D-May 00, Chrysler LP388-C-42	INA 4564
	Discharge network, 1500 pF/2200 Ω , per: VW 80972:2001-10	INA 4565
	Discharge network, 150 pF/1000 Ω	INA 4566
	Discharge network, 150 pF/0 Ω	INA 4567
	Discharge network, 1000 pF/0 Ω	INA 4568
	Discharge network, 200 pF/0 Ω	INA 4569
	Discharge network, 500 pF/2000 Ω	INA 4570




ACCESSORIES

	Discharge network, 500 pF/0 Ω	INA 4571
	Discharge network, 330 pF/27 Ω	INA 4572
	Discharge network, 1000 pF/1000 Ω , per: IEC 60065	INA 4573
	Discharge network, 50 pF/100 Ω	INA 4574
	Discharge network, 100 pF/50 Ω	INA 4575
	Discharge network, 350 pF/200 Ω	INA 4576
	Discharge network, 100 pF/0 Ω	INA 4577
	Discharge network, 50 pF/200 Ω	INA 4578
	Discharge network, 650 pF/350 Ω	INA 4579
	Discharge network, 500 pF/500 Ω	INA 4580
	Discharge network, 400 pF/250 Ω	INA 4581
	Discharge network, 50 pF/10 Ω	INA 4582
	Discharge network, 50 pF/3500 Ω	INA 4583
	Discharge network, 250 pF/1500 Ω , per: UL 1023	INA 4584
	Discharge network, 150 pF/300 Ω	INA 4585
	Discharge network, 200 pF/500 Ω	INA 4586
	Discharge network, 330 pF/500 Ω	INA 4587
	Discharge network, 60 pF/100 Ω	INA 4588
	Discharge network, 50 pF/10k Ω	INA 4589
	Discharge network, 250 pF/100 Ω	INA 4590



ACCESSORIES








	Discharge network, 250 pF/500 Ω	INA 4591
	Discharge network, 1000 pF/1 Ω	INA 4592
	Discharge network, 500 pF/1000 Ω	INA 4593
	Discharge network, 20 pF/0 Ω	INA 4594
	Discharge network, 1000 pF/10 Ω	INA 4595
	Discharge network, 270 pF/100 Ω	INA 4596
	Discharge network, 100 pF/47 Ω	INA 4597
	Discharge network, 1600 pF/1500 Ω	INA 4598
	Discharge network, 200 pF/1500 Ω	INA 4599
	Special discharge networks to specification: specify standard, C and R value. Possible values: 50 pF < C < 2000 pF, 0 Ω < R < 20 k Ω	INA xxxx

Measurement Accessoires for all ESD Simulators

Basic set (see technical specifications)

Part Number

	Calibration adapter set to MD 103. To calibrate MD 103 per specifications of IEC 61000-4-2 (2008) and ISO 10605 (2008).	INA 103
	Bleeder resistor cable (2 x 470 k Ω) - lenght 80 cm	INA 414
	Bleeder resistor cable (2 x 470 k Ω) - lenght 2 m	INA 414-2M
	Measuring target conforming to IEC 61000-4-2 (1995)	MD 101
	Target-attenuator-cable chain for ESD pulse calibration conforming to IEC 61000-4-2 (2008) and ISO 10605 (2008).	MD 103



EMC INSTRUMENTATION AND SYSTEMS FOR ANY BUDGET



Teseq® offers the world's most comprehensive range of EMC systems for immunity and emissions testing. We take great pride in our world-class research and development program, backed by state-of-the-art global manufacturing. Our membership in the relevant international committees demonstrates our commitment to the industry. Our network of direct sales offices, representatives and distributors offers market leading EMC expertise tailored to local needs in more than 30 different countries.

Our unique "modular" approach to EMC is focused on our customers' business needs. By breaking down the barriers between traditionally separate test functions we can optimize the test process to help you bring products to market more quickly.

