



ISOMETER® isoRW425

Insulation monitoring device for unearthed
IT AC-, AC/DC and DC systems (IT systems)
for railway applications up to 3(N)AC, AC/DC 440 V
Software version: D0418 V2.xx



Service and support for Bender products

First-level support

Technical support

Carl-Benz-Strasse 8 • 35305 Grünberg • Germany

Telephone: +49 6401 807-760

0700BenderHelp *

Fax: +49 6401 807-629

E-mail: support@bender.de

Available on 365 days from 7.00 a.m. to 8.00 p.m. (MEZ/UTC +1)

* Landline German Telekom: Mon-Fri from 9.00 a.m. to 6 p.m.: 6.3 cents/30 sec.; remaining time: 6.3 cents/min.

Mobile phone: higher, depending on mobile phone tariff

Repair service

Repair, calibration and replacement service

Londorfer Strasse 65 • 35305 Grünberg • Germany

Telephone: +49 6401 807-780 (technical issues) or

+49 6401 807-784, -785 (commercial issues)

Fax: +49 6401 807-789

E-mail: repair@bender.de

Field service

On-site service

Telephone: +49 6401 807-752, -762 (technical issues) or

+49 6401 807-753 (commercial issues)

Fax: +49 6401 807-759

E-mail: fieldservice@bender.de

Mon-Thu 7.00 a.m. to 4.00 p.m., Fri 7.00 a.m. to 1 p.m. (MEZ/UTC +1)

Table of Contents

| | | |
|----------|---|-----------|
| 1 | General instructions | 5 |
| 1.1 | How to use this manual | 5 |
| 1.2 | Indication of important instructions and information | 5 |
| 1.2.1 | Signs and symbols | 5 |
| 1.3 | Training courses and seminars..... | 5 |
| 1.4 | Delivery conditions..... | 6 |
| 1.5 | Inspection, transport and storage | 6 |
| 1.6 | Warranty and liability..... | 6 |
| 1.7 | Disposal of Bender devices..... | 6 |
| 1.8 | Safety | 7 |
| 1.9 | Intended use | 7 |
| 2 | Function | 8 |
| 2.1 | Device features | 8 |
| 2.2 | Functional description | 9 |
| 2.2.1 | Monitoring of the insulation resistance (R mode) | 10 |
| 2.2.2 | Monitoring of the insulation impedance (Z mode)..... | 10 |
| 2.2.3 | Undervoltage/overvoltage monitoring | 10 |
| 2.2.4 | Self test/error codes | 11 |
| 2.2.5 | Malfunction | 12 |
| 2.2.6 | Assignment of the alarm relays K1/K2 | 13 |
| 2.2.7 | Measuring and response times..... | 13 |
| 2.2.8 | Password protection (on, OFF)..... | 14 |
| 2.2.9 | Factory setting FAC | 14 |
| 2.2.10 | External, combined test or reset button T/R..... | 14 |
| 2.2.11 | Fault memory | 15 |
| 2.2.12 | History memory HiS | 15 |
| 2.2.13 | Interface/protocols | 15 |
| 3 | Installation, connection and commissioning | 16 |
| 3.1 | Installation | 16 |
| 3.2 | Wiring diagram | 17 |
| 3.3 | Commissioning..... | 18 |
| 4 | Device operation | 19 |
| 4.1 | Display elements | 20 |
| 4.2 | Menu structure..... | 21 |
| 4.3 | Menu „AL“ | 22 |
| 4.3.1 | Response value setting | 22 |
| 4.4 | Menu „out“ | 22 |
| 4.4.1 | Configuration of the relay operating mode..... | 22 |
| 4.4.2 | Relay alarm assignment „r1“ and „r2“ and LED assignment | 23 |

| | | |
|----------|---|-----------|
| 4.4.3 | Fault memory configuration | 24 |
| 4.4.4 | Interface configuration | 24 |
| 4.5 | Menu „t“ | 24 |
| 4.5.1 | Time configuration | 24 |
| 4.6 | Menu „SEt“ | 25 |
| 4.6.1 | Function configuration | 25 |
| 4.7 | Measuring value display and history memory | 26 |
| 5 | Data access using the BMS protocol | 27 |
| 6 | Data access using the Modbus RTU protocol | 28 |
| 6.1 | Reading out the Modbus register from the ISOMETER® | 28 |
| 6.1.1 | Command of the master to the ISOMETER® | 28 |
| 6.1.2 | Answer of the ISOMETER® to the Master | 28 |
| 6.2 | Write Modbus register (parameter setting) | 29 |
| 6.2.1 | Command of the Master to the ISOMETER® | 29 |
| 6.2.2 | ISOMETER® answer to the Master | 29 |
| 6.3 | Exception code | 30 |
| 6.3.1 | Structure of the exception code | 30 |
| 7 | Modbus register assignment of the ISOMETER® | 31 |
| 7.1 | Device-specific data types of the ISOMETER® | 34 |
| 7.1.1 | Device name | 34 |
| 7.1.2 | Measuring values | 34 |
| 7.1.2.1 | Float = Floating point value of the channels | 34 |
| 7.1.2.2 | AT&T = Alarm type and test type (internal/external) | 35 |
| 7.1.2.3 | R&U = Range and unit | 36 |
| 7.1.3 | Alarm assignment of the relays | 37 |
| 7.2 | Channel descriptions | 38 |
| 8 | IsoData data string | 40 |
| 9 | Technical data | 41 |
| 9.1 | Tabular presentation | 41 |
| 9.2 | Standards, approvals and certifications | 44 |
| 9.3 | Ordering information | 44 |
| 9.4 | Revision history | 45 |

1 General instructions

1.1 How to use this manual



This manual is intended for qualified personnel working in electrical engineering and electronics! Part of the device documentation, in addition to this manual, is the enclosed "Safety instructions for Bender products".



Read the manual before installing, connecting and commissioning the device. Always keep the manual within easy reach for future reference.

1.2 Indication of important instructions and information



DANGER! Indicates a high risk of danger that will result in death or serious injury if not avoided.



WARNING! Indicates a medium risk of danger that can lead to death or serious injury, if not avoided.



CAUTION! Indicates a low-level risk that can result in minor or moderate injury or damage to property if not avoided.



Information can help to optimise the use of the product.

1.2.1 Signs and symbols

| | | | | | |
|--|----------------------|--|-------------------|--|-------------------|
| | Disposal | | Temperature range | | protect from dust |
| | protect from wetness | | Recycling | | RoHS guidelines |

1.3 Training courses and seminars

www.bender.de > Know-how-> Seminars.

1.4 Delivery conditions

The conditions of sale and delivery set out by Bender apply. These can be obtained from Bender in printed or electronic format.

The following applies to software products:



"Software clause in respect of the licensing of standard software as part of deliveries, modifications and changes to general delivery conditions for products and services in the electrical industry."

1.5 Inspection, transport and storage

Check the shipping and device packaging for transport damage and scope of delivery. The following must be observed when storing the devices:



1.6 Warranty and liability

Warranty and liability claims in the event of injury to persons or damage to property are excluded in case of:

- Improper use of the device.
- Incorrect mounting, commissioning, operation and maintenance of the device.
- Failure to observe the instructions in this operating manual regarding transport, commissioning, operation and maintenance of the device.
- Unauthorised changes to the device made by parties other than the manufacturer.
- Non-observance of technical data.
- Repairs carried out incorrectly.
- Use of accessories and spare parts not recommended by Bender.
- Catastrophes caused by external influences and force majeure.
- Mounting and installation with device combinations not recommended by the manufacturer.

This operating manual and the enclosed safety instructions must be observed by all persons working with the device. Furthermore, the rules and regulations that apply for accident prevention at the place of use must be observed.

1.7 Disposal of Bender devices

Abide by the national regulations and laws governing the disposal of this device.



For more information on the disposal of Bender devices, refer to

www.bender.de -> [Service & support](#).

1.8 Safety

If the device is used outside the Federal Republic of Germany, the applicable local standards and regulations must be complied with. In Europe, the European standard EN 50110 applies.



DANGER! Risk of electrocution due to electric shock!

Touching live parts of the system carries the risk of:

- A fatal electric shock
- Damage to the electrical installation
- Destruction of the device

Before installing and connecting the device, make sure that the installation has been de-energised. The rules for working on electrical systems must be observed.

2 Function

2.1 Intended use

The ISOMETER® monitors the insulation resistance R_F (R mode) or the insulation impedance Z_F (Z mode) of unearthed AC/DC main circuits (IT systems) with nominal system voltages of 3(N)AC, AC, AC/DC or DC 0 ... 440 V. DC components existing in 3(N)AC, AC/DC systems do not influence the operating characteristics, when a minimum load current of DC 10 mA flows.

A separate supply voltage U_s allows deenergised systems to be monitored as well. The maximum permissible system leakage capacitance C_e is 300 μF in R mode and 1 μF in Z mode.

Any use other than that described in this manual is regarded as improper.

i *To ensure that the ISOMETER® functions correctly, an internal resistance of $\leq 1 \text{ k}\Omega$ must exist between L1/+ and L2/- via the source (e.g. the transformer) or the load.*

2.2 Device features

- Monitoring of the insulation resistance R_F (R mode) or the insulation impedance Z_F (Z mode) of unearthed 3(N)AC, AC and DC systems (IT systems) with galvanically connected rectifiers or inverters
- Insulation impedance Z_F (Z mode) for 50 Hz or 60 Hz
- Measurement of the nominal system voltage U_n (True RMS) with undervoltage and overvoltage detection
- Measurement of residual voltages system to earth (L+/PE and L-/PE)
- Automatic adaptation to the system leakage capacitance C_e up to 300 μF in R mode and 1 μF in Z mode
- Automatic device self test with connection monitoring
- Selectable start-up delay, response delay and delay on release
- Two separately adjustable response ranges of 1 ... 990 $\text{k}\Omega$ (alarm 1, alarm 2)
- Alarm signalling via LEDs („AL1“, „AL2“), a display and alarm relays („K1“, „K2“)
- N/C operation or N/O operation can be selected for the relays
- Measured value indication via multi-functional LCD
- Fault memory can be activated
- RS-485 (galvanically isolated) including the following protocols:
 - BMS interface (Bender measuring device interface) for data exchange with other Bender components
 - Modbus RTU
 - IsoData (for continuous data output)
- Password protection to prevent unauthorised parameter changes

2.3 Functional description

The ISOMETER® measures the insulation resistance R_F and the system leakage capacitance C_e between the system to be monitored (L1/+, L2/-) and earth (PE). Z mode (selectable in the „SEt“ menu) calculates the insulation impedance Z_F from R_F and C_e with a system frequency parameter $f_n = 50 \text{ Hz}$ or $f_n = 60 \text{ Hz}$. The RMS value of the nominal system voltage U_n between L1/+ and L2/-, as well as the residual voltages U_{L1e} (between L1/+ and earth) and U_{L2e} (between L2/- and earth) are also measured.

From a minimum value of the nominal system voltage, the ISOMETER® determines the faulty conductor in % (represented by „R %“), which shows the distribution of the insulation resistance between conductors L1/+ and L2/-. The distribution is indicated by a positive or negative sign preceding the insulation resistance measurement. The value range of the faulty conductor is $\pm 100 \%$:

| Display | Meaning |
|---------|-----------------------------------|
| -100 % | one-sided fault at conductor L2/- |
| 0 % | symmetrical fault |
| +100 % | one-sided fault at conductor L1/+ |

The partial resistances can be calculated from the total insulation resistance R_F and the faulty conductor (R %) using the following formula:

$$\text{Fault at conductor L1/+ } R_{L1F} = (200 \% * R_F) / (100 \% + R \%)$$

$$\text{Fault at conductor L2/- } R_{L2F} = (200 \% * R_F) / (100 \% - R \%)$$

Also from a minimum value of the nominal system voltage, the ISOMETER® determines the insulation resistance R_{UGF} from the residual voltages U_{L1e} and U_{L2e} . It is an approximate value for one-sided insulation faults and can be used as a trend indicator in cases where the ISOMETER® has to adapt to an R_F and C_e relation that varies considerably.

It is possible to assign the detected fault or the faulty conductor to an alarm relay via the menu. If the values R_F , Z_F or U_n exceed the response values activated in the „AL“ menu, this will be indicated by the LEDs and relays „K1“ and „K2“ according to the alarm assignment set in the „out“ menu. In addition, the operation of the relay (n.o./n.c.) can be set and the fault memory „M“ activated.

If the values R_F , Z_F or U_n do not exceed their release value (response value plus hysteresis) for the period t_{off} without interruption, the alarm relays will switch back to their initial position and the alarm LEDs „AL1“/„AL2“ stop lighting. If the fault memory is activated, the alarm relays remain in alarm condition and the LEDs light until the reset button „R“ is pressed or the supply voltage U_s is interrupted.

The device function can be tested using the test button „T“. Parameters are assigned to the device via the LCD and the control buttons on the front panel; this function can be password-protected. Parameterisation is also possible via the BMS bus, for example by using the BMS Ethernet gateway (COM465IP) or the Modbus RTU.

2.3.1 Monitoring of the insulation resistance (R mode)

The two parameters that monitor the insulation resistance, „R1“ and „R2“, can be found in the menu „AL“ (see table on [page 22](#)). The value R1 can only be set higher than the value R2. Each time the mode is switched from R mode to Z mode, parameters „R1“ and „R2“, and hence the monitoring of the insulation resistance will be deactivated.

In Z mode the insulation impedance Z_F is the main measured value and the measured insulation resistance R_F can have tolerances depending on the system condition. If required, the parameters R1 and R2 can also be activated in Z mode.

If the insulation resistance R_F reaches or falls below the activated values R1 or R2, an alarm message will be signalled. If R_F exceeds the values R1 or R2 plus the hysteresis value (see table on [page 22](#)), the alarm will be cleared.

2.3.2 Monitoring of the insulation impedance (Z mode)

The parameters „Z1“ and „Z2“ for monitoring the insulation impedance Z_F are available in the „AL“ menu only when Z mode is activated. The value Z1 must be set higher than value Z2. The insulation impedance Z_F for the selected system frequency f_n (50 Hz or 60 Hz in the „SET“ menu) can be calculated from the measured values R_F and C_e using the formula below:

$$X_{ce} = \frac{1}{(2 \times \pi \times f_n \times C_e)}$$

The lower resistance component of R_F or X_{ce} determines the amount of Z_F . The higher resistance component of R_F or X_{ce} can have a higher tolerance due to the measuring signal resolution.

If the insulation impedance Z_F reaches or falls below the activated values Z1 or Z2, an alarm message will be signalled. If Z_F exceeds the values Z1 or Z2 plus the hysteresis value (see table on [page 22](#)), the alarm will be cleared.

2.3.3 Undervoltage/overvoltage monitoring

In the menu „AL“ (see [page 22](#)), the parameters („U <“ and „U >“) for monitoring the nominal system voltage U_n can be activated or deactivated. The maximum undervoltage value is limited by the overvoltage value.

The RMS value of the nominal system voltage U_n is monitored. If the nominal system voltage U_n reaches, falls below or exceeds the limit values („U <“ or „U >“), an alarm will be signalled. If the maximum permissible system leakage capacitance C_e set for the ISOMETER® is exceeded, an alarm message will be initiated even when the overvoltage limit value has been deactivated. The alarm will be deleted when the limit values plus the hysteresis (see [page 22](#)) are no longer violated.

2.3.4 Self test/error codes

The integrated self-test function checks the function of the insulation monitoring device and the connection monitoring checks the connections to the system to be monitored. The alarm relays are not switched during the self test. This can be changed using the parameter „test“ in the alarm assignment (see Chapter 5.4 Menu „out“). During the test, the display indicates „tES“.

When malfunctions are detected or connections are missing, the LEDs „ON“/“AL1“/“AL2“ flash. The respective error codes („E.xx“) will be indicated on the display and the relay „K2“ switches.

The relays can be assigned to a device error with the parameter“Err“ in the „out“ menu in the alarm assignment.

Error codes

If, contrary to expectations, a device error should occur, error codes will appear on the display. Some of these are described below:

| Error code | Meaning |
|------------|---|
| E.01 | <p>PE connection error The connections „E“ or „KE“ to earth are interrupted.</p> <p>Action: Check connection, eliminate error. The error code will be erased automatically once the error has been eliminated.</p> |
| E.02 | <p>Connection error system (L1/+ , L2/-) The mains internal resistance is too high, the connection between terminals „L1/+“ or „L2/-“ and the mains supply is poor or has been interrupted, or L1/+ and L2/- are connected in reverse polarity to the DC system to be monitored ($U_n < -50\text{ V}$).</p> <p>Action: Check connection, eliminate error. The error code will be erased automatically once the error has been eliminated.</p> |
| E.05 | <p>Measurement technique error/calibration invalid For the current software version</p> |
| E.07 | <p>The maximum permissible system leakage capacitance C_s is exceeded Action: Device not suitable for the existing leakage capacitance: Uninstall device.</p> |
| E.08 | <p>Calibration error during the device test Action: If the error continues to exist after checking the device connections, there is an error inside the device.</p> |

Internal device errors „E.xx“ can be caused by external disturbances or internal hardware errors. If the error message occurs again after restarting the device or after a reset to factory settings (menu item „FAC“), the device must be repaired.

After eliminating the fault, the alarm relays switch back automatically or they return to the initial position by pressing the reset button.

The self test can take a few minutes. It can be suppressed for the duration of the device start by setting the parameter in the menu „SEt“ to „S.Ct = off“. This allows the ISOMETER® to enter measurement mode quickly after connecting the supply voltage U_s .

Automatic self test

After switching on the supply voltage U_s , the device runs a self test and repeats it every 24 h (selectable: off, 1h, 24 h).

Manual self test

A self test is initiated by pressing the test button for a period greater than 1.5 s. While pressing the internal test button „T“, all display elements available for this device are shown.

Connection monitoring

The connection monitoring, activated by the self test, checks the connections of the terminals „E“ and „KE“ to the protective earth conductor (PE). When an error is detected, the message device error (Err) will be signalled and the error code „E.01“ appears on the display.

The system connection monitoring is used to check the terminal connections „L1/+“ and „L2/-“ to the system to be monitored. When an interruption or a high-resistance connection between L1/+ and L2/- is detected via the internal resistance of the system, the device error („Err“) will be signalled and the error code „E.02“ appears on the display. Since a test of the system connection may take considerable time due to system disturbances or may even provide incorrect results, the system connection monitoring can be disconnected using the parameter „nEt“ in the „SEt“ menu.

2.3.5 Malfunction

In addition to the self test described above, several functions in the insulation monitoring device are continuously checked during operation. If a fault is detected, the device error („Err“) will be signalled, the error code „E.xx“ appears on the display as an identifier for the error type xx and the LEDs „ON“/„AL1“/„AL2“ will flash.

If the error occurs again after restarting the device or after a reset to factory settings, then contact Bender Service.

2.3.6 Assignment of the alarm relays K1/K2

The messages „device error“, „insulation fault“, „insulation impedance fault“, „undervoltage/over-voltage fault“, „device test“ or „device start with alarm“ can be assigned to the alarm relays via the „out“ menu. An insulation fault is indicated by the messages „+R1“, „-R1“, „+R2“ and „-R2“.

Messages „+R1“ and „+R2“ can be assigned to indicate an insulation fault on conductor L1/+ and the messages „-R1“ and „-R2“ could indicate an insulation fault on conductor L2/-. If an assignment is not possible, for example in the event of a symmetrical insulation fault, the message corresponding to „+“ and „-“ are shown together.

The message „test“ indicates a self test.

The message „S.AL“ indicates a so-called „device start with alarm“. After connecting to the supply voltage U_s and setting the parameter value to „S.AL = on“, the ISOMETER® starts with the insulation measurement value $R_f = 0 \Omega$ and $Z_f = 0 \Omega$ in Z mode and displays all activated alarms. The alarms will be cleared only when the measured values are up-to-date and no thresholds are exceeded.

In the factory setting „S.AL = off“, the ISOMETER® starts without an alarm. It is recommended that the value set for the „S.AL“ parameter is identical for both relays.

2.3.7 Measuring and response times

The measuring time is the period essential for the detection of the measuring value.

The measuring time is reflected in the operating time t_{ae} .

In R mode, the measuring time for the insulation resistance value is mainly determined by the required measuring pulse duration, which depends on the insulation resistance R_f and system leakage capacitance C_e of the system to be monitored. The measuring pulse is produced by the measuring pulse generator integrated in the ISOMETER®. The measuring times for C_{er} , U_{L1er} , U_{L2e} and R % are synchronous. System disturbances may lead to extended measuring times.

In contrast, the time for the nominal system voltage measurement U_n is independent and considerably shorter. In Z mode a fixed and short measuring pulse time is applied, leading to a short measuring time for all measured values.

Total response time t_{an}

The total response time t_{an} is the sum of the operating time t_{ae} and the on-delay time t_{on} .

Operating time t_{ae}

The operating time t_{ae} is the time required by the ISOMETER® to determine the measuring value. The insulation resistance measuring value depends on the the insulation resistance R_f and the system leakage capacitance C_e . For example, a maximum permissible system leakage capacitance of $C_e = 300 \mu F$ and an insulation fault of $R_f = 2.5 k\Omega$ ($R_{an} = 5 k\Omega$) in a 400 V DC system results in an operating time of $t_{ae} < 40$ s. High system leakage capacitances and system interferences lead to longer operating times.

Response delay t_{on}

The response delay t_{on} is set uniformly for all messages in the menu „t“ using the parameter „ton“. This delay time can be used for interference suppression in the case of short measuring times.

An alarm will only be signalled when a threshold value of the respective measuring value is violated for the period of t_{on} without interruption. Every time the threshold value is violated within the time t_{on} , the response time „ton“ restarts once again.

Every alarm message listed in the alarm assignment has its own timer for t_{on} .

Delay-on release t_{off}

The delay-on release t_{off} can be set uniformly for all messages in the menu „t“ using the parameter „toff“.

An alarm will continuously be signalled until the threshold value of the respective measuring value is not violated (including hysteresis) for the period of t_{off} without interruption. Each time the threshold value is not violated for the period of t_{off} , the delay-on release t_{off} restarts once again.

Every alarm message listed in the alarm assignment has its own timer for t_{off} .

Start-up delay t

After connection to the supply voltage U_s the alarm indication for the preset time (0...10 s) in the parameter „t“ is suppressed.

2.3.8 Password protection (on, OFF)

If password protection has been activated (on), settings can only be made subject to the correct password being entered (0...999).

2.3.9 Factory setting FAC

Activating the factory setting will reset all modified settings, with the exception of the interface parameters, to the default upon delivery.

2.3.10 External, combined test or reset button T/R

Reset = Press the external button < 1.5 s

Reset with subsequent test = Press the external button > 1.5 s

Stop measuring function = Press and hold the external button

i When the measuring function is stopped, the display shows „STP“.

The stop function can also be triggered by an interface command and in this case it can only be reset via the interface.

Only one ISOMETER® may be controlled via a test/reset button. A galvanic parallel connection of several test or reset inputs for testing multiple insulation monitoring devices is not allowed.

2.3.11 Fault memory

The fault memory can be activated or deactivated with the parameter „M“ in the menu „out“. When the fault memory is activated, all pending alarm messages of the LEDs and relays remain available until they are deleted by using the reset button (internal/external) or the supply voltage U_s is turned off.

2.3.12 History memory HiS

When the first error occurs after clearing the history memory, all measured values (that are marked in the table on [page 26](#)) are stored in the history memory. This data can be read out using the „HiS“ menu item. In order to be able to record a new data record, the history memory must first be cleared via the imenu using „Clr“.

2.3.13 Interface/protocols

The ISOMETER® uses the serial hardware interface RS-485 with the following protocols:

- **BMS**

The BMS protocol is an essential component of the Bender measuring device interface (BMS bus protocol). ASCII characters are used for the data transfer.

- **Modbus RTU**

Modbus RTU is an application layer messaging protocol and it provides Master/Slave communication between devices that are connected altogether via bus systems and networks. Modbus RTU messages have a 16-bit-CRC (Cyclic-Redundant Checksum), which guarantees the reliability.

- **IsoData**

The ISOMETER® continuously sends an ASCII data string with a cycle time of approximately 1 second. A communication with the ISOMETER® within this mode is not possible and no additional transmitter may be connected via the RS-485 bus cable. The ASCII data string for the ISOMETER® is described on [page 41](#).

The parameter address, baud rate and parity for the interface protocols are configured in the menu „out“.

i *With „Adr = 0“, the menu entries baud rate and parity are not shown in the menu and the IsoData protocol is activated. With a valid bus address (i.e. not equal to 0), the menu item „baud rate“ is displayed in the menu. The parameter value „---“ for the baud rate indicates the activated BMS protocol. In this event, the baud rate for the BMS protocol is set to 9,600 baud. If the baud rate is set unequal to „---“, the Modbus protocol with configurable baud rate is activated.*

3 Installation, connection and commissioning

i Application in railway vehicles/DIN EN 45545-2:2016

If the horizontal or vertical distance to adjacent components which do not meet the requirements in table 2 of DIN EN 45545-2 is less than 20 mm or less than 200 mm respectively, they are to be regarded as grouped. Refer to DIN EN 45545-2 chapter 4.3 Grouping rules.

3.1 Dimensions


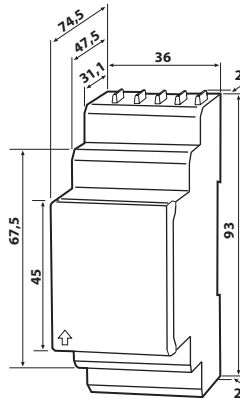


Fig. 3-1 All dimensions in mm

3.2 Mounting

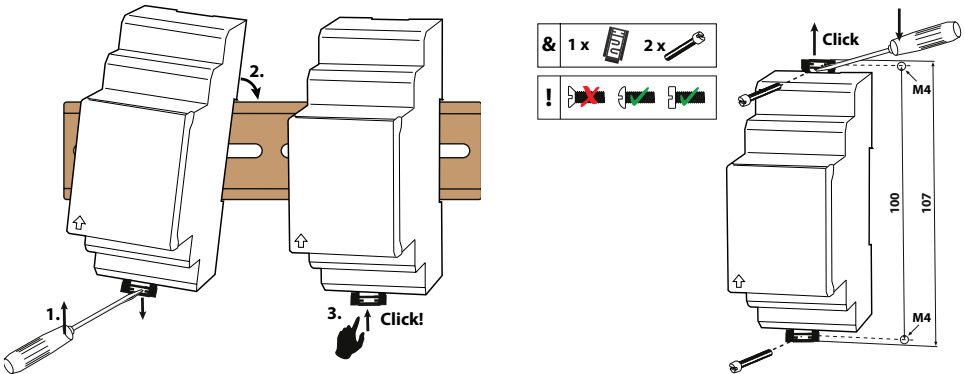


Variant A: DIN rail mounting

Variant B: Screw mounting

The front plate cover can be opened at the lower part marked with an arrow.

3.3 Wiring diagram

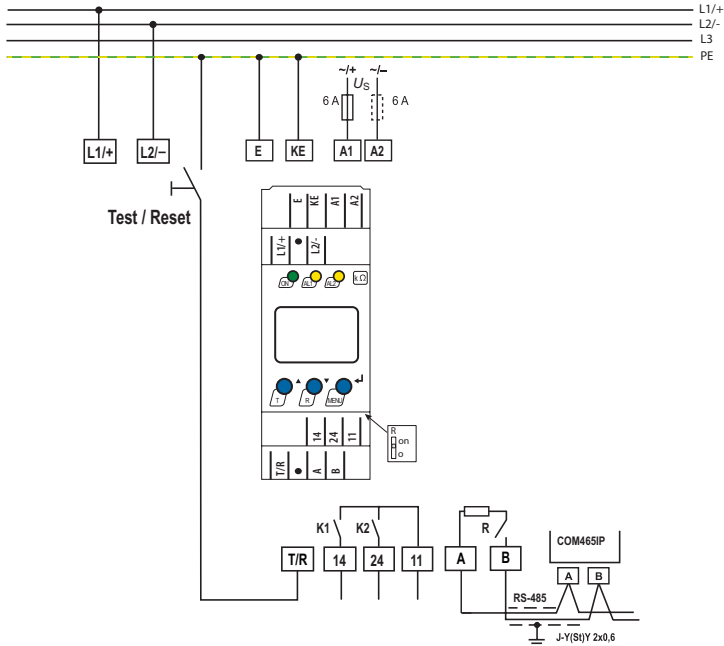

For details about the conductor cross sections required for wiring, refer to the technical data on [page 42](#).

Legend


| Terminal | Connections |
|------------|--|
| A1, A2 | Connection to the supply voltage U_s via fuse (line protection): If supplied from an IT system, both lines have to be protected by a fuse.* |
| E, KE | Connect each terminal separately to PE: The same wire cross section as for „A1“, „A2“ is to be used. |
| L1/+, L2/- | Connection to the 3(N)AC, AC or DC system to be monitored |
| T/R | Connection for the external combined test and reset button |
| 11, 14 | Connection to alarm relay „K1“ |
| 11, 24 | Connection to alarm relay „K2“ |
| A, B | RS-485 communication interface with connectable terminating resistance Example: Connection of a BMS-Ethernet-Gateway COM465IP |

i * For UL applications:
Only use 60/75°C copper lines!
For UL and CSA applications, it is mandatory to use 5 A fuses for the protection of the supply voltage U_s .

3.4 Commissioning


1. Check that the ISOMETER® is properly connected to the system to be monitored.
2. Connect the supply voltage U_s to the ISOMETER®.

The device carries out a calibration, a self test and adjusts itself to the IT system to be monitored. When high system leakage capacitances are involved, this procedure may take up to 4 min. The standard display then appears showing the present insulation resistance, e.g.:



The pulse symbol signals an error-free update of the resistance and capacitance measuring values. If the measuring value cannot be updated due to disturbances, the pulse symbol will be blanked.

3. **Starting a manual self test** by pressing the test button „T“. Whilst the test button is pressed and held down, all display elements available for this device are shown. During the test, the „tES“ symbol flashes. Any internal malfunctions detected are shown on the display as error codes (see [page 11](#)). The alarm relays are not checked during the test (factory setting). The setting can be changed in the „out“ menu, so that the relays switch into the alarm state during the manual self test.



4. **Check factory setting for suitability.**

Are the settings suitable for the monitored installation?

For the list of factory settings, refer to the tables on [page 22](#) to [page 25](#).



5. **Check the function using a genuine insulation fault.**

Check the ISOMETER® in the system being monitored against earth, e.g. via a suitable resistance.

4 Device operation



The menu structure is illustrated schematically on the following pages.

After pressing the „MENU“ button for > 1.5 s, the first menu item „AL“ appears. Use ▲▼ and ◀ (Enter) buttons for navigation and settings.

| | |
|---|---|
|  | Up and down button: <ul style="list-style-type: none"> • to navigate up or down the menu settings • increasing or decreasing values |
| MENU  | Pressing the MENU/Enter button for more than 1.5 s: <ul style="list-style-type: none"> • Starts menu mode or <ul style="list-style-type: none"> • when the device already is in menu mode: Exit menu item (Esc). Any recent changes will not be stored. Pressing the MENU/Enter button for less than 1.5 s: <ul style="list-style-type: none"> • Confirms menu selection or <ul style="list-style-type: none"> • confirms modified value. |

i *The areas of the display that can be configured flash!*

4.1 Display elements

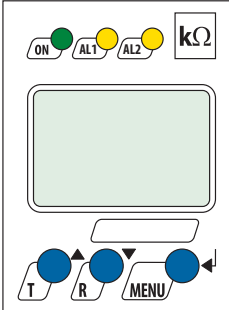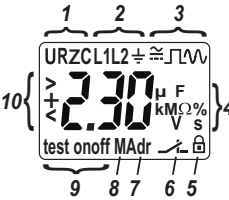
| Device front/display | Function | |
|--|---|--|
|  | <p>ON AL1 AL2</p> | <p>green - On yellow - Alarm yellow - Alarm Assignment according to table on page 23</p> |
| | <p>▲ T</p> | <p>Up button Test button (press > 1.5 s)</p> |
| | <p>▼ R</p> | <p>Down button Reset button (press > 1.5 s)</p> |
| | <p>↵ MENU</p> | <p>ENTER MENU button (press > 1.5 s)</p> |
| |  | <p>1</p> |
| <p>2</p> | | <p>Monitored conductor</p> |
| <p>3</p> | | <p>= : Voltage type DC □ : Error-free measuring value update ~ : Voltage type AC</p> |
| <p>4</p> | | <p>Measured values and units</p> |
| <p>5</p> | | <p>Password protection is activated.</p> |
| <p>6</p> | | <p>In the menu mode, the operating mode of the respective alarm relay is displayed.</p> |
| <p>7</p> | | <p>Communication interface With measured value: isoData operation</p> |
| <p>8</p> | | <p>The fault memory is activated.</p> |
| <p>9</p> | | <p>Status indicators</p> |
| <p>10</p> | | <p>Identification for response values and response value violation</p> |

4.2 Menu structure

Measurement display

Menu selection

Parameter selection

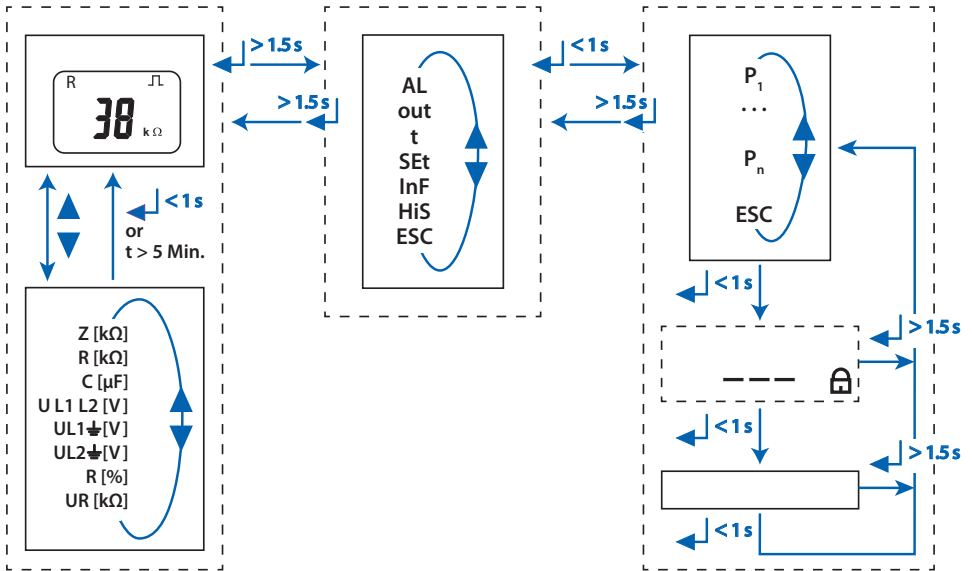

| Menu item | Parameters |
|-----------|--|
| AL | Query and set response values |
| out | Configuring fault memory, alarm relays and interface |
| t | Setting delay times and self test cycles |
| SEt | Setting device control parameters |
| InF | Querying software version |
| HiS | Querying and clearing the history memory |
| ESC | Go to the next higher menu level |

4.3 Menu „AL“

4.3.1 Response value setting



Only after activating Z mode in the „SEt“ menu, the response values „Z1“ as well as „Z2“ appear on the display and are activated. Simultaneously, the response values „R1“ and „R2“ are set to position **off**, but can then be set to **on** again.

| Display | Activation | | Setting value | | | Description |
|---------|------------|----|---------------|-----|----|--|
| | FAC | Cs | Range | FAC | Cs | |
| R1 < | on | | R2...990 | 40 | kΩ | Pre-alarm value R_{an1} Hys. = 25 %/min. 1 kΩ |
| R2 < | on | | 1...R1 | 10 | kΩ | Alarm value R_{an2} Hys. = 25 %/min. 1 kΩ |
| Z1 < | off | | Z2...500 | 60 | kΩ | Pre-alarm value Z_{an1} Hys. = 25 %/min. 1 kΩ |
| Z2 < | off | | 10...Z1 | 50 | kΩ | Alarm value Z_{an2} Hys. = 25 %/min. 1 kΩ |
| U < | off | | 10...U> | 30 | V | Alarm value undervoltage Hys. = 5 %/min. 5 V |
| U > | off | | U<...500 | 500 | V | Alarm value overvoltage Hys. = 5 %/min. 5 V |

FAC = Factory setting; Cs = Customer settings

4.4 Menu „out“

4.4.1 Configuration of the relay operating mode



| Relay K1 | | | Relay K2 | | | Description |
|--|------|----|---|------|----|---------------------------------------|
| Display | FAC | Cs | Display | FAC | Cs | |
|  1 | n.c. | |  2 | n.c. | | Operating mode of the relay n.c./n.o. |

FAC = Factory setting; Cs = Customer settings

4.4.2 Relay alarm assignment „r1“ and „r2“ and LED assignment

In the alarm assignment, each alarm is assigned to the corresponding relay with the setting „on“. The LED indication is directly assigned to the alarms and is not related to the relays.

If the device can assign an asymmetrical insulation fault to the corresponding conductor (L1/+ or L2/-), it will only signal the respective alarm. Otherwise, the alarms L1/+ und L2/- will be signalled together.

| K1 „r1“ | | | K2 „r2“ | | | LEDs | | | Alarm description |
|--|-----|----|---|-----|----|------|-----|-----|--|
| Display | FAC | Cs | Display | FAC | Cs | ON | AL1 | AL2 | |
|  1 Err | off | |  2 Err | on | | ⊙ | ⊙ | ⊙ | Device error E.xx |
| r1 +R1 < Ω | on | | r2 +R1 < Ω | off | | ● | ● | ○ | Pre-alarm R1 Fault R _f at L1/+ |
| r1 -R1 < Ω | on | | r2 -R1 < Ω | off | | ● | ● | ○ | Pre-alarm R1 Fault R _f at L2/- |
| r1 +R2 < Ω | off | | r2 +R2 < Ω | on | | ● | ○ | ● | Alarm R2 Fault R _f at L1/+ |
| r1 -R2 < Ω | off | | r2 -R2 < Ω | on | | ● | ○ | ● | Alarm R2 Fault R _f at L2/- |
| r1 Z1 < Ω | on | | r2 Z1 < Ω | off | | ● | ● | ○ | Pre-alarm Z1 |
| r1 Z2 < Ω | off | | r2 Z2 < Ω | on | | ● | ○ | ● | Alarm Z2 |
| r1 U < V | off | | r2 U < V | on | | ● | ○ | ⊙ | Alarm U _n Undervoltage |
| r1 U > V | off | | r2 U > V | on | | ● | ⊙ | ○ | Alarm U _n Overvoltage |
| r1 test | off | | r2 test | off | | ● | ● | ● | Manually started device test |
| r1 S.AL | off | | r2 S.AL | off | | ● | ● | ● | Device start with alarm |

FAC = Factory setting; Cs = Customer settings

○: LED off ⊙: LED flashes ●: LED on

4.4.3 Fault memory configuration

| Display | FAC | Cs | Description |
|---------|-----|----|---|
| M | off | | Memory function for alarm messages (fault memory) |

FAC = Factory setting; Cs = Customer settings

4.4.4 Interface configuration

| Display | Setting value | | | | Description |
|---------|--------------------------|-------|-----|-----------|---|
| | Range | FAC | Cs | | |
| Adr | 0/3...90 | 3 | () | Bus-Adr. | Adr = 0 deactivates BMS as well as Modbus and activates isoData with continuous data output (115k2, 8E1) |
| Adr 1 | ---/ 1,2k...115k | "---" | () | Baud rate | "---": BMS bus (9k6, 7E1) "1,2k" ... "115k" --> Modbus (variable, var.) |
| Adr 2 | 8E1 8o1 8n1 8n2 | 8E1 | | Modbus | 8E1 - 8 data bits, even parity, 1 stop bit 8o1 - 8 data bits, odd parity, 1 stop bit 8n1 - 8 data bits, no parity, 1 stop bit 8n2 - 8 data bits, no parity, 2 stop bit |

FAC = Factory setting; Cs = Customer settings

() = User setting that is not modified by FAC.

4.5 Menu „t“


4.5.1 Time configuration

| Display | Setting value | | | | Description |
|---------|---------------|-----|----|--|---|
| | Range | FAC | Cs | | |
| t | 0...10 | 0 | s | | Start-up delay when starting the device |
| ton | 0...99 | 0 | s | | Response delay K1 and K2 |
| toff | 0...99 | 0 | s | | Delay on release K1 and K2 |
| test | OFF/1/24 | 24 | h | | Repetition time device test |

FAC = Factory setting; Cs = Customer settings

4.6 Menu „SEt“

4.6.1 Function configuration

| Display | Activation | | Setting value | | | Description |
|---|------------|----|---------------|------|----|---|
| | FAC | Cs | Value range | FAC | Cs | |
|  | off | | 0...999 | 0 | | Password for parameter setting |
| Z | off | | 50.0/60.0 | 50,0 | Hz | Z mode Activate impedance calculation Z_f and select associated system frequency f_n |
| nEt | on | | | | | Test the system connection during device test |
| S.Ct | on | | | | | Device test during device start |
| FAC | | | | | | Restore factory settings |
| SYS | | | | | | For Bender Service only |

FAC = Factory setting; *Cs* = Customer settings

4.7 Measuring value display and history memory

In R mode only R_F and in Z mode only Z_F is permanently shown on the display (standard display). All other measuring value displays switch to the standard display after a maximum of 5 min. The fault location will only be stored in the history memory („HiS“) in R mode. In Z mode only will Z_F be stored in the history memory. The symbol \square indicates a current measured value. If this symbol does not appear, the measurement is still running and the latest valid measured value will be displayed. The symbols „<“ or „>“ will be displayed additionally to the measured value when a response value has been reached or violated, or the measured value is below or above the measuring range.

| HiS | Display | Description |
|-----|--------------------|--|
| ✓ | Z kΩ \square | Insulation impedance Z_F 1 kΩ ... 1 MΩ Resolution 1 kΩ The impedance is calculated for the system frequency f_n from R C. Only available in Z mode |
| ✓ | ± R kΩ \square | Insulation resistance R_F 1 kΩ ... 4 MΩ Resolution 1 kΩ/10 kΩ The „+“ or „-“ sign appears when the fault is mainly detected at L1/+ or L2/- and the DC voltage is $U_n \geq 20$ V as well as $R_e < 100$ kΩ. |
| ✓ | C μF \square | System leakage capacitance C_e Z mode = off: 1 μF ... 400 μF Resolution 1 μF Z mode = on: 1 μF ... 5 μF Resolution 1 nF |
| ✓ | ~ ± U L1 L2 V | Nominal system voltage L1 - L2 U_n 0 V _{RMS} ... 500 V _{RMS} Resolution 1 V _{RMS} In case of a DC system, the „+“ or „-“ sign indicates at $U_{RMS} > 10$ V the polarity at the terminals „L1/+“ and „L2/-“. The sign „~“ indicates an AC system. |
| ✓ | ± U L1 ≙ = V | Residual voltage L1/+ - PE U_{L1e} 0 V _{DC} ... ±500 V _{DC} Resolution 1 V _{DC} |
| ✓ | ± U L2 ≙ = V | Residual voltage L2/- - PE U_{L2e} 0 V _{DC} ... ±500 V _{DC} Resolution 1 V _{DC} |
| ✓ | ± R % | Fault location in % -100 % ... +100 % Indication only from $U_n \geq 20$ V _{DC} $R_{e+} = (200 \% * R_e) / (100 \% + x\%)$ $R_{e-} = (200 \% * R_e) / (100 \% - x\%)$ |
| - | U R = kΩ \square | Insulation resistance R_{UGF} 1 kΩ ... 4 MΩ Resolution 1 kΩ/10 kΩ Indication only from $U_n \geq 20$ V _{DC} R_{UGF} is an approximate value for asymmetrical insulation faults and can be used as a trend indicator with short measuring times. Not available in Z mode. |

✓: The measuring value can be displayed in the history memory.

5 Data access using the BMS protocol

The BMS protocol is an essential component of the Bender measuring device interface (BMS bus protocol). ASCII characters are used for the data transfer.

| BMS channel no. | Operation value | Alarm |
|-----------------|--------------------|--------------------------------|
| 1 | R_f | Pre-alarm R1 |
| 2 | R_f | Alarm R2 |
| 3 | Z_f | Alarm Z2 |
| 4 | U_n | Undervoltage |
| 5 | U_n | Overvoltage |
| 6 | --- | Connection fault earth (E.01) |
| 7 | --- | Connection fault system (E.02) |
| 8 | --- | All other device faults (E.xx) |
| 9 | Fault location [%] | --- |
| 10 | C_e | --- |
| 11 | Z_f | Pre-alarm Z1 |
| 12 | Update counter | --- |
| 13 | U_{L1e} | --- |
| 14 | U_{L2e} | --- |
| 15 | R_{UGf} | --- |

6 Data access using the Modbus RTU protocol

Requests to the ISOMETER® can be made using the function code 0x03 (read multiple registers) or the command 0x10 (write multiple registers). The ISOMETER® generates a function-related answer and sends it back.

6.1 Reading out the Modbus register from the ISOMETER®

The required Words of the process image can be read out from the ISOMETER® „holding registers“ using the function code 0x03. For this purpose, the start address and the number of the registers to be read out have to be entered. Up to 125 Words (0x7D) can be read out by one single request.

6.1.1 Command of the master to the ISOMETER®

In the following example, the ISOMETER® master requests the content of the register 1003 with the address 3. The register contains the channel description of measuring channel 1.

| Byte | Name | Example |
|-----------|--------------------------|---------|
| Byte 0 | ISOMETER® Modbus address | 0x03 |
| Byte 1 | Function code | 0x03 |
| Byte 2, 3 | Start address | 0x03EB |
| Byte 4, 5 | Number of registers | 0x0001 |
| Byte 6, 7 | CRC16 Checksum | 0xF598 |

6.1.2 Answer of the ISOMETER® to the Master

| Byte | Name | Example |
|-----------|--------------------------|---------|
| Byte 0 | ISOMETER® Modbus address | 0x03 |
| Byte 1 | Function code | 0x03 |
| Byte 2 | Number of data bytes | 0x02 |
| Byte 3, 4 | Data | 0x0047 |
| Byte 7, 8 | CRC16 Checksum | 0x81B6 |

6.2 Write Modbus register (parameter setting)

Registers in the device can be modified with the function code 0x10 (Write Multiple Registers). Parameter registers are available from address 3000. The content of the register is listed in the table on [page 31](#).

6.2.1 Command of the Master to the ISOMETER®

In this example, in the ISOMETER® with address 3 the content of the register address 3003 is set to 2.

| Byte | Name | Example |
|------------|--------------------------|---------|
| Byte 0 | ISOMETER® Modbus address | 0x03 |
| Byte 1 | Function code | 0x10 |
| Byte 2, 3 | Start register | 0x0BBB |
| Byte 4, 5 | Number of registers | 0x0001 |
| Byte 6 | Number of data bytes | 0x02 |
| Byte 7, 8 | Data | 0x0002 |
| Byte 9, 10 | CRC16 Checksum | 0x9F7A |

6.2.2 ISOMETER® answer to the Master

| Byte | Name | Example |
|-----------|--------------------------|---------|
| Byte 0 | ISOMETER® Modbus address | 0x03 |
| Byte 1 | Function code | 0x10 |
| Byte 2, 3 | Start register | 0x0BBB |
| Byte 4, 5 | Number of registers | 0x0001 |
| Byte 6, 7 | CRC16 Checksum | 0x722A |

6.3 Exception code

If a request cannot be answered for whatever reason, the ISOMETER® will send a so-called exception code with which possible faults can be narrowed down.

| Exception code | Description |
|----------------|--|
| 0x01 | Impermissible function |
| 0x02 | Impermissible data access |
| 0x03 | Impermissible data value |
| 0x04 | Internal fault |
| 0x05 | Acknowledgement of receipt (answer will be time delayed) |
| 0x06 | Request not accepted (repeat request, if necessary) |

6.3.1 Structure of the exception code

| Byte | Name | Example |
|-----------|-----------------------------|---------|
| Byte 0 | ISOMETER® Modbus address | 0x03 |
| Byte 1 | Function code (0x03) + 0x80 | 0x83 |
| Byte 2 | Data (exception code) | 0x04 |
| Byte 3, 4 | CRC16 Checksum | 0xE133 |

7 Modbus register assignment of the ISOMETER®

The information in the registers is: the measuring value without alarm; the measuring value with alarm 1; the measuring value with alarm 2; or only the device fault, depending on the device condition.

| Register | Measuring value | | | Device fault |
|---------------|--|--|---|--|
| | Without alarm | Alarm 1 | Alarm 2 | |
| 1000 to 1003 | R_f Insulation fault (71) [no alarm] | R_f Insulation fault (1) [prewarning] | R_f Insulation fault (1) [alarm] | --- Connection earth (102) [device fault] |
| 1004 to 1007 | Z_f Insulation fault (86) [no alarm] | Z_f Insulation fault (86) [prewarning] | Z_f Insulation fault (86) [alarm] | --- |
| 1008 to 1011 | U_n Voltage (76) [no alarm] | U_n Undervoltage (77) [alarm] | U_n Overvoltage (78) [alarm] | --- Connection system (101) [device fault] |
| 1012 to 1015 | C_c System leakage capacitance (82) [no alarm] | --- | --- | --- |
| 1016 to 1019 | U_{L1e} Voltage (76) [no alarm] | --- | --- | --- |
| 1020 bis 1023 | U_{L2e} Voltage (76) [no alarm] | --- | --- | --- |
| 1024 to 1027 | Fault location in % --- (1022) [no alarm] | --- | --- | --- |
| 1028 to 1031 | R_{UGF} Insulation fault (71) [no alarm] | --- | --- | --- |
| 1032 to 1035 | Measured value update counter --- (1022) [no alarm] | --- | --- | --- Device fault (115) [device fault] |

() = Channel description code (refer to [chapter 7.2](#))

[] = Alarm type (refer to [chapter 7.1.2.2](#))

| Register | Permissions | Description | Format | Unit | Value range |
|----------|-------------|--|---------|------|--|
| 999 | RO | Number of Modbus measured value channels with active alarm | UINT 16 | --- | 0...9 |
| 3000 | RW | Activation of prealarm value impedance measurement „Z1“ | UINT 16 | --- | [2]/[3] * |
| 3001 | RW | Pre-alarm value impedance measurement „Z1“ | UINT 16 | kΩ | Z2...500 |
| 3002 | RW | Activation of alarm value impedance measurement „Z2“ | UINT 16 | --- | [2]/[3] * |
| 3003 | RW | Alarm value impedance measurement „Z2“ | UINT 16 | kΩ | 10...Z1 |
| 3004 | RW | Activation Pre-alarm value resistance measurement „R1“ | UINT 16 | --- | 0/1/[2]/[3] * |
| 3005 | RW | Pre-alarm value resistance measurement „R1“ | UINT 16 | kΩ | R2...990 |
| 3006 | RW | Activation alarm value resistance measurement „R2“ | UINT 16 | --- | 0/1/[2]/[3] * |
| 3007 | RW | Alarm value resistance measurement „R2“ | UINT 16 | kΩ | 1...R1 |
| 3008 | RW | Activation alarm value undervoltage „U<“ | UINT 16 | --- | 0/1 * |
| 3009 | RW | Alarm value undervoltage „U<“ | UINT 16 | V | 10...U> |
| 3010 | RW | Activation alarm value overvoltage „U>“ | UINT 16 | --- | 0/1 * |
| 3011 | RW | Alarm value Overvoltage „U>“ | UINT 16 | V | U<...500 |
| 3012 | RW | Memory function for alarm messages (Fault memory) „M“ | UINT 16 | --- | 0/1 * |
| 3013 | RW | Operating mode of relay 1 „r1“ | UINT 16 | --- | 0 = n.o. 1 = n.c. |
| 3014 | RW | Operating mode of relay 2 „r2“ | UINT 16 | --- | 0 = n.o. 1 = n.c. |
| 3015 | RW | Bus address „Adr“ | UINT 16 | --- | 0/3...90 |
| 3016 | RW | Baud rate „Adr 1“ | UINT 16 | --- | 0 = BMS 1 = 1.2k 2 = 2.4k 3 = 4.8k 4 = 9.6k 5 = 19.2k 6 = 38.4k 7 = 57.6k 8 = 115.2k |
| 3017 | RW | Parity „Adr 2“ | UINT 16 | --- | 0 = 8N1 1 = 8O1 2 = 8E1 3 = 8N2 |

| Register | Permissions | Description | Format | Unit | Value range |
|----------|-------------|---|---------|------|--------------------------------|
| 3018 | RW | Start-up delay „t“ during device start | UINT 16 | s | 0...10 |
| 3019 | RW | Response delay „ton“ for relays „K1“ and „K2“ | UINT 16 | s | 0...99 |
| 3020 | RW | Delay on release „toff“ for relays „K1“ and „K2“ | UINT 16 | s | 0...99 |
| 3021 | RW | Repetition time „test“ for automatic device test | UINT 16 | --- | 0 = OFF 1 = 1 h 2 = 24 h |
| 3022 | RW | Parameter „Z“: Activation of Z mode for impedance calculation | UINT 16 | --- | 0/1 * |
| 3023 | RW | Parameter „Z“: System frequency f_n for Z mode | UINT 16 | --- | 500 = 50.0 Hz 600 = 60.0 Hz |
| 3024 | RW | Test of the system connection during device test „nEt“ | UINT 16 | --- | 0/1 * |
| 3025 | RW | Device test during device start „S. Ct“ | UINT 16 | --- | 0/1 * |
| 3026 | RW | Request stop mode (0 = deactivate devices) | UINT 16 | --- | 0 = Stop 1 = --- |
| 3027 | RW | Alarm assignment of relay 1 „r1“ | UINT 16 | --- | Bit 11...Bit 1 |
| 3028 | RW | Alarm assignment of relay 2 „r2“ | UINT 16 | --- | Bit 11...Bit 1 |

| | | | | | |
|------|----|---|---------|-----|-------------|
| 8003 | WO | Factory setting for all parameters | UINT 16 | --- | 0x6661 „fa“ |
| 8004 | WO | Factory setting only for parameters resettable by FAC | UINT 16 | --- | 0x4653 „FS“ |
| 8005 | WO | Start device test | UINT 16 | --- | 0x5445 „TE“ |
| 8006 | WO | Clear fault memory | UINT 16 | --- | 0x434C „CL“ |

| Register | Permissions | Description | Format | Unit | Value range |
|--------------|-------------|-------------------------|---|------|-----------------------|
| 9800 to 9809 | RO | Device name | UNIT 16 (ASCII) - refer to chapter 7.1.1 | --- | --- |
| 9820 | RO | Software ID number | UINT 16 | --- | Software ID number |
| 9821 | RO | Software version number | UINT 16 | --- | Software version |
| 9822 | RO | Software version: Year | UINT 16 | | |
| 9823 | RO | Software version: Month | UINT 16 | | |
| 9824 | RO | Software version: Day | UINT 16 | | |
| 9825 | RO | Modbus driver version | UINT 16 | | |

RW = Read/Write; **RO** = Read only; **WO** = Write only

* The values [2] and [3] can neither be changed nor set by the operator.

0/[2] = inactive 1/[3] = active

7.1 Device-specific data types of the ISOMETER®

7.1.1 Device name

The data format of the device name is specified below.

| | | | | | | |
|--|------|------|------|-------|------|------|
| Word 0x00 | 0x01 | 0x02 | 0x03 | ----- | 0x08 | 0x09 |
| 10 Words in total Each Word contains two ASCII characters | | | | | | |

7.1.2 Measuring values

Each measuring value is available as a channel and consists of 8 bytes (4 registers). The first measuring value register address is 1000. The structure of a channel is always identical. Content and number depend on the device. The structure of a channel is shown with the example of channel 1:

| 1000 | | 1001 | | 1002 | | 1003 | |
|------------------------------|--------|--------|--------|--|----------------------------|------------------------|--------|
| HiByte | LoByte | HiByte | LoByte | HiByte | LoByte | HiByte | LoByte |
| Floating point value (Float) | | | | Alarm type and test type (AT&T) | Range and unit (R&U) | Channel description | |

7.1.2.1 Float = Floating point value of the channels

| Word | 0x00 | | | | | | | | | | | | | | | | 0x00 | | | | | | | | | | | | | | | |
|------|--------|----|---|---|---|---|---|----|--------|----|---|---|---|---|---|----|--------|---|---|---|---|---|---|---|--------|---|---|---|---|---|---|--|
| | HiByte | | | | | | | | LoByte | | | | | | | | HiByte | | | | | | | | LoByte | | | | | | | |
| Bit | 31 | 30 | | | | | | 24 | 23 | 22 | | | | | | 16 | 15 | | | | | | 8 | 7 | | | | | | | 0 | |
| | S | E | E | E | E | E | E | E | E | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | M | | |

Presentation of the bit order for processing analogue measuring values according to IEEE 754

S = Sign; **E** = Exponent; **M** = Mantissa

7.1.2.2 AT&T = Alarm type and test type (internal/external)

| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | Meaning |
|------------|---------------|---------------|----------|----------|----------|-------|--------|-----|---------------|
| | Test external | Test internal | Reserved | Reserved | Reserved | Alarm | Errors | | |
| Alarm type | X | X | X | X | X | 0 | 0 | 0 | No alarm |
| | X | X | X | X | X | 0 | 0 | 1 | Prewarning |
| | 0 | 0 | X | X | X | 0 | 1 | 0 | Device error |
| | X | X | X | X | X | 0 | 1 | 1 | Reserved |
| | X | X | X | X | X | 1 | 0 | 0 | Warning |
| | X | X | X | X | X | 1 | 0 | 1 | Alarm |
| | X | X | X | X | X | 1 | 1 | 0 | Reserved |
| | X | X | X | X | X | ... | ... | ... | Reserved |
| | X | X | X | X | X | 1 | 1 | 1 | Reserved |
| Test | 0 | 0 | X | X | X | X | X | X | No test |
| | 0 | 1 | X | X | X | X | X | X | Internal test |
| | 1 | 0 | X | X | X | X | X | X | External test |

The alarm type is coded by bits 0 to 2. Bits 3, 4 and 5 are reserved and always have the value 0. Bit 6 or 7 is usually set when an internal or external test has been completed. Other values are reserved. The complete byte is calculated from the sum of the alarm type and the test type.

7.1.2.3 R&U = Range and unit


| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | Meaning |
|-------------------|---|---|---|---|---|---|---|-------|----------------------------|
| Unit | - | - | - | 0 | 0 | 0 | 0 | 0 | Invalid (init) |
| | - | - | - | 0 | 0 | 0 | 0 | 1 | No unit |
| | - | - | - | 0 | 0 | 0 | 1 | 0 | Ω |
| | - | - | - | 0 | 0 | 0 | 1 | 1 | A |
| | - | - | - | 0 | 0 | 1 | 0 | 0 | V |
| | - | - | - | 0 | 0 | 1 | 0 | 1 | % |
| | - | - | - | 0 | 0 | 1 | 1 | 0 | Hz |
| | - | - | - | 0 | 0 | 1 | 1 | 1 | Baud |
| | - | - | - | 0 | 1 | 0 | 0 | 0 | F |
| | - | - | - | 0 | 1 | 0 | 0 | 1 | H |
| | - | - | - | 0 | 1 | 0 | 1 | 0 | °C |
| | - | - | - | 0 | 1 | 0 | 1 | 1 | °F |
| | - | - | - | 0 | 1 | 1 | 0 | 0 | Second |
| | - | - | - | 0 | 1 | 1 | 0 | 1 | Minute |
| | - | - | - | 0 | 1 | 1 | 1 | 0 | Hour |
| | - | - | - | 0 | 1 | 1 | 1 | 1 | Day |
| - | - | - | 1 | 0 | 0 | 0 | 0 | Month | |
| Range of validity | 0 | 0 | X | X | X | X | X | X | Actual value |
| | 0 | 1 | X | X | X | X | X | X | The actual value is lower |
| | 1 | 0 | X | X | X | X | X | X | The actual value is higher |
| | 1 | 1 | X | X | X | X | X | X | Invalid value |

- The units of bits 0 to 4 are coded.
- Bits 6 and 7 describe the validity range of a value.
- Bit 5 is reserved.

The complete byte is calculated from the sum of the unit and the range of validity.

7.1.3 Alarm assignment of the relays

Several alarms can be assigned to each relay. For the assignment of each relay, a 16-bit-register is used with the bits described below. The following table applies to relay 1 and relay 2, in which „x“ stands for the relay number. A set bit activates the specified function.

| Bit | Display indication | Meaning |
|-----|---|---|
| 0 | Reserved | When reading, always 0 When writing, any value |
| 1 |  x Err | Device error E.xx |
| 2 | rx +R1 < Ω | Pre-alarm R1 Fault R_f at L1/+ |
| 3 | rx -R1 < Ω | Pre-alarm R1 Fault R_f at L2/- |
| 4 | rx +R2 < Ω | Alarm R2 Fault R_f at L1/+ |
| 5 | rx -R2 < Ω | Alarm R2 Fault R_f at L2/- |
| 6 | rx Z1 < Ω | Pre-alarm Z1 |
| 7 | rx Z2 < Ω | Alarm Z2 |
| 8 | rx U < V | Alarm message U_n Undervoltage |
| 9 | rx U > V | Alarm message U_n Overvoltage |
| 10 | rx test | Manually started self test |
| 11 | rx S.AL | Device start with alarm |
| 12 | Reserved | When reading, always 0 When writing, any value |
| 13 | Reserved | When reading, always 0 When writing, any value |
| 14 | Reserved | When reading, always 0 When writing, any value |
| 15 | Reserved | When reading, always 0 When writing, any value |

7.2 Channel descriptions

| Value | Measuring value description/ Alarm message Operating message | Note |
|------------|--|---|
| 0 | | |
| 1 (0x01) | Insulation fault | |
| 71 (0x47) | Insulation fault | Insulation resistance R_i in Ω |
| 76 (0x4C) | Voltage | Measured value in V |
| 77 (0x4D) | Undervoltage | |
| 78 (0x4E) | Overvoltage | |
| 82 (0x52) | Capacitance | Measured value in F |
| 86 (0x56) | Insulation fault | Impedance Z_i |
| 101 (0x65) | Connection system | |
| 102 (0x66) | Connection earth | |
| 115 (0x73) | Device error | Fault ISOMETER® |
| 129 (0x81) | Device error | |
| 145 (0x91) | Own address | |

To convert parameter data, data type descriptions are required.
Text representation is not necessary in this case.

| Value | Description of parameters |
|--------------|--|
| 1023 (0x3FF) | Parameter/measured value invalid. The menu item of this parameter is not displayed. |
| 1022 (0x3FE) | No measured value/no message |
| 1021 (0x3FD) | Measured value/parameter inactive |
| 1020 (0x3FC) | Measured value/parameter only temporarily inactive (e.g. while transmitting a new parameter). Indication in the menu „...“. |
| 1019 (0x3FB) | Parameter/measured value (value) unit not displayed |
| 1018 (0x3FA) | Parameter (code selection menu) unit not displayed |
| 1017 (0x3F9) | String max. 18 characters (e.g. device type, - variant, ...) |
| 1016 (0x3F8) | |
| 1015 (0x3F7) | Time |
| 1014 (0x3F6) | Date: Day |
| 1013 (0x3F5) | Date: Month |
| 1012 (0x3F4) | Date: Year |
| 1011 (0x3F3) | Register address (unit not displayed) |
| 1010 (0x3F2) | Time |
| 1009 (0x3F1) | Factor multiplication [*] |
| 1008 (0x3F0) | Factor division [/] |
| 1007 (0x3EF) | Baud rate |
| 1022 (0x3FE) | |
| 1023 (0x3FF) | Invalid |

8 IsoData data string

In IsoData mode, the ISOMETER® continuously sends the whole data string with a cycle time of approximately 1 s. Communication with the ISOMETER® within this mode is not possible and no additional sender may be connected via the RS-485 bus cable.

IsoData is activated in the menu „out“, menu item „Adr“ when it has been set to Adr = 0. In this event, the symbol „Adr“ flashes on the measuring value display.

| String | Description |
|----------|--|
| !; | Start symbol |
| v; | Insulation fault location ``'/'+'/'-'` |
| 1234, 5; | Insulation resistance R_f [kΩ] |
| 1234; | System leakage capacitance C_e R mode [μF] / Z mode [nF] |
| 1234, 5; | Insulation impedance Z_f [kΩ] |
| +1234; | Nominal system voltage U_n [V _{RMS}] Nominal system voltage type: AC or unknown: `` DC: '+'/'-'` |
| +1234; | Residual voltage U_{11e} [V _{DC}] |
| +1234; | Residual voltage U_{12e} [V _{DC}] |
| +123; | Insulation fault location -100 ... +100 [%] |
| 1234, 5; | Approximate asymmetrical insulation resistance R_{UGF} [kΩ] |
| 1234; | Alarm message [hexadecimal] (without leading „0x“) The alarms are included in this value with the OR function. Assignment of the alarms: 0x0002 Device fault 0x0004 Prewarning insulation resistance R_f at L1/+ 0x0008 Prewarning insulation resistance R_f at L2/- 0x000C Prewarning insulation resistance R_f symmetrical 0x0010 Alarm insulation resistance R_f at L1/+ 0x0020 Alarm insulation resistance R_f at L2/- 0x0030 Alarm insulation resistance R_f symmetrical 0x0040 Prewarning insulation impedance Z_f 0x0080 Alarm insulation impedance Z_f 0x0100 Alarm undervoltage U_n 0x0200 Alarm overvoltage U_n 0x0400 Message system test 0x0800 Device start with alarm |
| 1 | Update counter, consecutively counts from 0 to 9. It increases with the update of the insulation resistance value. |
| <CR><LF> | String end |

9 Technical data

9.1 Tabular presentation

()* = factory setting

Insulation coordination acc. to IEC 60664-1/IEC 60664-3

Definitions:

| | |
|------------------------------|------------------|
| Measuring circuit (IC1)..... | L1/+, L2/- |
| Supply circuit (IC2)..... | A1, A2 |
| Output circuit (IC3) | 11, 14, 24 |
| Control circuit (IC4)..... | E, KE, T/R, A, B |

| | |
|---------------------------|-------|
| Rated voltage..... | 440 V |
| Overvoltage category..... | III |

Rated impulse voltage:

| | |
|-------------------|------|
| IC1/(IC2-4) | 6 kV |
| IC2/(IC3-4) | 4 kV |
| IC3/(IC4)..... | 4 kV |

Rated insulated voltage:

| | |
|-------------------|-------|
| IC1/(IC2-4) | 500 V |
| IC2/(IC3-4) | 250 V |
| IC3/(IC4)..... | 250 V |

| | |
|------------------------|---|
| Pollution degree | 3 |
|------------------------|---|

Protective separation (reinforced insulation) between:

| | |
|-------------------|---------------------------------|
| IC1/(IC2-4) | Overvoltage category III, 600 V |
| IC2/(IC3-4) | Overvoltage category III, 300 V |
| IC3/(IC4)..... | Overvoltage category III, 300 V |

Voltage test (routine test) according to IEC 61010-1:

| | |
|-------------------|-----------|
| IC2/(IC3-4) | AC 2.2 kV |
| IC3/(IC4)..... | AC 2.2 kV |

Supply voltage

| | |
|-----------------------------|------------------------------|
| Supply voltage U_s | AC 100...240 V/DC 24...240 V |
| Tolerance of U_s | -30...+15 % |
| Frequency range U_s | 47...63 Hz |
| Power consumption | ≤ 3 W, ≤ 9 VA |

IT system being monitored

| | |
|--|-----------------------------------|
| Nominal system voltage U_n | 3(N)AC, AC 0...440 V/DC 0...440 V |
| Nominal system voltage range U_n (UL508) | AC/DC 0...400 V |
| Tolerance of U_n | +15 % |
| Frequency range of U_n | DC, 15...460 Hz |

Measuring circuit

| | |
|---|----------------------------|
| Measuring voltage U_m | ± 12 V |
| Measuring current I_m at $R_f, Z_f = 0 \Omega$ | $\leq 110 \mu\text{A}$ |
| Internal resistance R_i, Z_i | $\geq 115 \text{ k}\Omega$ |
| Permissible system leakage capacitance C_e (R mode) | $\leq 300 \mu\text{F}$ |
| Permissible system leakage capacitance C_e (Z mode) | $\leq 1 \mu\text{F}$ |
| Permissible extraneous DC voltage U_{fg} | ≤ 700 V |

Response values

| | |
|--|---|
| Response value R_{an1} | 2...990 k Ω (40 k Ω)* |
| Response value R_{an2} | 1...980 k Ω (10 k Ω)* |
| Relative uncertainty R_{an} (R mode or $Z_f \approx R_f$) | ± 15 %, at least ± 1 k Ω |
| Hysteresis R_{an} | 25 %, at least 1 k Ω |
| Response value Z_{an1} | 11...500 k Ω (off)* |
| Response value Z_{an2} | 10...490 k Ω (off)* |
| Relative uncertainty Z_{an} | ± 15 %, at least ± 1 k Ω |
| Hysteresis Z_{an} | 25 %, at least 1 k Ω |
| Undervoltage detection | 10...499 V (off)* |
| Overvoltage detection | 11...500 V (off)* |
| Relative uncertainty U | ± 5 %, at least ± 5 V |
| Relative uncertainty depending on the frequency ≥ 400 Hz | -0.015 %/Hz |
| Hysteresis U | 5 %, at least 5 V |

Time response

| | |
|--|-----------------|
| Response time t_{an} of $R_f = 0,5 \times R_{an}$ and $C_e = 1 \mu\text{F}$ acc. to IEC 61557-8 | ≤ 10 s |
| Response time t_{an} of $Z_f = 0,5 \times Z_{an}$ | ≤ 5 s |
| Start-up delay t | 0...10 s (0 s)* |
| Response delay t_{on} | 0...99 s (0 s)* |
| Delay on release t_{off} | 0...99 s (0 s)* |

Displays, memory

| | |
|---|---|
| Display | LC display, multi-functional, not illuminated |
| Display range measured value insulation resistance (R_i) | 1 k Ω ...4 M Ω |
| Display range measured value impedance (Z_f) with $f_n = 50/60$ Hz | 1 k Ω ...1 M Ω |
| Operating uncertainty (R_f in R mode, Z_f in Z mode) | ± 15 %, at least ± 1 k Ω |
| Display range measured value nominal system voltage (U_n) | 0...500 V _{RMS} |
| Operating uncertainty | ± 5 %, at least ± 5 V |
| Display range measured value system leakage capacitance of $R_f > 10$ k Ω | 0...300 μF |
| Operating uncertainty | ± 15 %, at least $\pm 2 \mu\text{F}$ |
| Display range measured value system leakage capacitance of $Z_f > 10$ k Ω | 1 nF...1 μF |
| Operating uncertainty ($Z_f \approx X_C$) | ± 15 %, at least ± 2 nF |
| Password | off/0...999 (0, off)* |
| Fault memory alarm messages | on/(off)* |

Interface

| | |
|---|---|
| Interface/protocol | RS-485/BMS, Modbus RTU, isoData |
| Baud rate | BMS (9.6 kbit/s), Modbus RTU (selectable), isoData (115.2 kbit/s) |
| Cable length (9.6 kbit/s) | ≤ 1 200 m |
| Cable: shield connected to PE on one side | recommended: CAT6/CAT7 min. AWG23* |
| * alternative: twisted pairs, shield connected to PE on one side..... | J-Y(St)Y min. 2 x 0.8 |
| Terminating resistor | 120 Ω (0.25 W), internal, can be connected |
| Device address, BMS bus, Modbus RTU | 3...90 (3)* |

Switching elements

| | |
|--|--|
| Switching elements | 2 x 1 N/O contacts, common terminal 11 |
| Operating principle | N/C operation/N/O operation (N/O operation)* |
| Electrical endurance, number of cycles | 10 000 |

Contact data acc. to IEC 60947-5-1:

| | |
|---|---------------------------------------|
| Utilisation category | AC-12...AC-14...DC-12...DC-12...DC-12 |
| Rated operational voltage | 230 V...230 V...24 V...110 V...220 V |
| Rated operational current | 5 A...2 A...1 A...0.2 A...0.1 A |
| Necessary minimum contact load (relay manufacturer's reference) | |
| | 10 mA/DC 5 V |

Environment/EMC

| | |
|-----------|---------------------------------|
| EMC | IEC 61326-2-4, DIN EN 50121-3-2 |
|-----------|---------------------------------|

Ambient temperatures:

| | |
|-----------------|--------------|
| Operation | -40...+70 °C |
| Transport | -50...+85 °C |
| Storage | -55...+80 °C |

Climatic class acc. to IEC 60721:

| | |
|---|------|
| Stationary use (IEC 60721-3-3) | 3K24 |
| Transport (IEC 60721-3-2) | 2K11 |
| Long-time storage (IEC 60721-3-1) | 1K23 |

Classification of mechanical conditions acc. to IEC 60721:

| | |
|---|------|
| Stationary use (IEC 60721-3-3) | 3M12 |
| Transport (IEC 60721-3-2) | 2M4 |
| Long-term storage (IEC 60721-3-1) | 1M12 |

Connection

| | |
|-----------------------|---|
| Connection type | screw-type terminal or push-wire terminal |
|-----------------------|---|

Screw-type terminals:

| | |
|---|----------------------------|
| Nominal current | ≤ 10 A |
| Tightening torque | 0.5...0.6 Nm (5...7 lb-in) |
| Conductor sizes | AWG 24-12 |
| Stripping length | 8 mm |
| rigid/flexible | 0.2...2.5 mm ² |
| flexible with ferrules with/without plastic sleeve..... | 0.25...2.5 mm ² |
| Multi-conductor rigid..... | 0.2...1.5 mm ² |
| Multi-conductor flexible | 0.2...1.5 mm ² |
| Multi-conductor flexible with ferrules | |
| without plastic sleeve | 0.25...1.5 mm ² |
| Multi-conductor flexible with TWIN ferrules | |
| with plastic sleeve | 0.25...1.5 mm ² |

Push-wire terminals:

| | |
|--|-----------------------------|
| Nominal current..... | ≤ 10 A |
| Conductor sizes..... | AWG 24-14 |
| Stripping length..... | 10 mm |
| Rigid | 0.2 .. 2.5 mm ² |
| flexible without ferrules..... | 0.75 .. 2.5 mm ² |
| flexible with ferrules with/without plastic sleeve..... | 0.25 .. 2.5 mm ² |
| Multi-conductor flexible with TWIN ferrules with plastic sleeve | 0.5 .. 1.5 mm ² |
| Opening force | 50 N |
| Test opening, diameter | 2.1 mm |

Other

| | |
|---|---|
| Operating mode | continuous operation |
| Mounting | cooling slots must be ventilated vertically |
| Degree of protection, built-in components (DIN EN 60529) | IP30 |
| Degree of protection, terminals (DIN EN 60529) | IP20 |
| Enclosure material | polycarbonate |
| Flammability class | UL 94V-0 |
| DIN rail mounting acc. to | IEC 60715 |
| Screw fixing | 2 x M4 with mounting clip |
| Weight | ≤ 150 g |

()* = factory setting

9.2 Standards, approvals and certifications

The ISOMETER® has been developed in compliance with the following standards:

- DIN EN 61557-8 (VDE 0413-8):2015-12/Ber1:2016-12
- DIN EN 50155:2014-12
- IEC 61557-8:2014/COR1:2016
- DIN EN 45545-2:2016

9.3 Ordering information

| Type | Version | Art. No. |
|--|---------------------|------------|
| isoRW425-D4W-4 | Push-wire terminal | B71037000W |
| isoRW425-D4W-4 | Screw-type terminal | B91037000W |
| Mounting clip for screw fixing (1 piece per device) | | B98060008 |

9.4 Document revision history

| Date | Document version | Valid from software version | State/Changes |
|---------|------------------|-----------------------------|---|
| 04.2021 | 05 | D0418 V2.08 | <p><i>Editorial revision</i></p> <p><i>Added:</i> chapter 2.3.10: Note on stopped measuring function</p> <p><i>Added:</i> chapter 3: Safety instruction acc. to DIN EN 45545-2:2016</p> <p><i>Changed:</i> chapter 3.3: Wiring diagram chapter 4.2: Menu overview representation</p> <p><i>Corrected:</i> chapter 9.1: Term „Necessary minimum contact load“, climatic/mechanical classifications</p> <p><i>Changed:</i> chapter 9.1: Name bus cable in section „Interface“</p> <p><i>Added:</i> chapter 9.2: Standard DIN EN 45545-2-2016 ISO9001 deleted, UKCA certificate Revision history</p> |



Alle Rechte vorbehalten.
Nachdruck und Vervielfältigung
nur mit Genehmigung des Herausgebers.

Bender GmbH & Co. KG

Postfach 1161 • 35301 Grünberg • Deutschland
Londorfer Str. 65 • 35305 Grünberg • Deutschland
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259
E-Mail: info@bender.de • www.bender.de



All rights reserved.
Reprinting and duplicating
only with permission of the publisher.

Bender GmbH & Co. KG

PO Box 1161 • 35301 Grünberg • Germany
Londorfer Str. 65 • 35305 Grünberg • Germany
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259
E-Mail: info@bender.de • www.bender.de