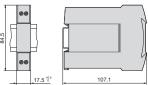
10. Dimensional drawings





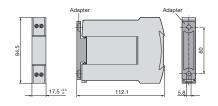


Fig. 13. SINEAX TI 807-5.... (housing N17) with adapter for wall mounting

11. Declaration of conformity



EG - KONFORMITÄTSERKLÄRUNG DECLARATION OF CONFORMITY



Hersteller/ Manufacturer: Camille Bauer AG Switzerland

Anschrift / Address: Aargauerstrasse 7 CH-5610 Wohlen Passiver DC- Signaltrenner Pasive DC signal isolator Produktbezeichnung/ Product name:

Typ / Type: SINEAX TI 807

Das bezeichnete Produkt stimmt mit den Vorschriften folgender Europäischer Richtlinien überein, nachgewiesen durch die Einhaltung folgender Normen:

The above mentioned product has been manufactured according to the regulations of the following European directives proven through compliance with the following standards:

Nr. / No.	Richtlinie / Directive		
89/336/EWG	Elektromagnetische Verträglichkeit - EMV - Richtlinie		
89/336/EEC	Electromagnetic compatibility -EMC directive		
EMV /	Fachgrundnorm /	Messverfahren /	
EMC	Generic Standard	Measurement methods	
Störaussendung / Emission	EN 50 081-2 : 1993	EN 55011 : 1992	
Störfestigkeit /	EN 50 082-2 : 1994	IEC 1000-4-2: 1991	
Immunity		IEC 1000-4-3: 1995	
		IEC 1000-4-4: 1988	
		IEC 1000-4-6: 1995	
Nr. / No.	Richtlinie / Directive		
73/23/EWG	Elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungs-		
	grenzen - Niederspannungsrichtlinie - CE-Kennzeichnung : 95		
73/23/EEC Electrical equipment for use within certain voltage limits - Low '		tain voltage limits - Low Voltage Direc-	
	tive - Attachment of CE mark : 95		
EN/Norm/Standard	IEC/Norm/Standard		
EN 61 010 1 : 1002	IEC 1010 1 · 1000 + A1 · 1002		

EN 61 010-1 : 1993 | IEC 1010-1 : 1990 + A1 : 1992

Die explosionsgeschützte Ausführung dieses Produkts stimmt mit der Europäischen Richtlinie 94/9/EG überein.

The explosion protected variant of this product has been manufactured according the European directive 94/9.

Unterschrift /

Signature: $\mu \cdot \dot{\ } \mathcal{L}$

Wohlen, den 5. Juni 1999

M.Ulrich Leiter Entwicklung

The following symbols in the Operating Instructions indicate safety precautions which must be strictly observed:









Operating Instructions

Passive DC signal isolator SINEAX TI 807-5



Camille Bauer LTD Camille Bauer LTD
Aargauerstrasse 7
CH-5610 Wohlen/Switzerland
Phone +41 56 618 21 11
Fax +41566183535
e-mail: info@camillebauer.com
http://www.camillebauer.com



TI 807-5 Be 999766-01 08.05

Contents

1.	Read first and then	1
2.	Scope of supply	1
3.	Brief description	1
4.	Specification and ordering information	1
5.	Technical data	1
6.	Mounting	2
7.	Electrical connections	3
8.	Commissioning and maintenance	3
9.	Releasing the signal isolator	3
10.	Dimensional drawings	4
11.	Declaration of conformity	4

1. Read first and then ...



The proper and safe operation of the device assumes that the Operating Instructions are **read carefully** and the safety warnings given in the sections 6. Mounting

7. Electrical connections

are observed.

The device should only be handled by appropriately trained personnel who are familiar with it and authorised to work in electrical installations.

Unauthorized repair or alteration of the unit invalidates the warranty!

2. Scope of supply

- Signal isolator (Fig. 1)

 1 Adapter (Fig. 1) for wall mounting
 1 copy Operating Instructions (Fig. 2) in English, French, German
 1 Ex approval (Fig. 2), only for Ex version devices






3. Brief description

The signal isolator SINEAX TI 807 serves to electrically insulate one analogue DC signal in the range 0...20 mA which depending on version is then converted to a current or voltage signal (0...20 mA or 0...10 V), it does **not** require a separate power supply.

4. Specification and ordering information

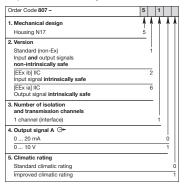

Input signal E →

DC current signal I_E: 0...20 m Max. permissible current: 50 mA 0...20 mA

Non-Ex version: 27 V ±5% (with zener diode) Ex version: 18 V, ±5% Voltage limiter:

Output signal A ⊙► (DC current or DC voltage)

0...20 mA

DC current signal $\rm I_{\rm A}$:

Voltage drop U_v:

< 2.8 V	for the standard (non-Ex) version	
< 4.7 V	for Ex versions (input signal "intrinsically safe")	
< 6.3 V	for Ex versions (output signal "intrinsically safe")	
May burden		

1000 Ω	for the standard (non-Ex) version
500 Ω	for Ex versions (input signal "intrinsically safe")
500 Ω	for Ex versions (output signal "intrinsically safe")

Approx. 40 mA Residual ripple: <20 mV ss Time constant: Approx. 3 ms Response time¹ acc. to IEC 770: Approx. 15 ms

DC voltage signal U,:

Voltage drop U_v:

< 2.8 V	for the standard (non-Ex) version
< 4.7 V	for Ex versions (input signal "intrinsically safe")
< 6.3 V	for Ex versions (output signal "intrinsically safe")

Internal resistance 500 O

< 26 V	for the standard (non-Ex) version
< 16 V	for Ex versions (input signal "intrinsically safe")
< 16 V	for Ex versions (output signal "intrinsically safe")

Residual ripple: < 20 mV ss Time constant: Approx. 3 ms

Accuracy data

 $<\pm 0.1\%^2$ (Reference value 20 mA including linearity error) $<\pm 0.2~\%^3$ (Reference value 10 V including linearity error)

Ambient conditions

-25 to ±55 °C

-25 to +55 °C
-20 to +55 °C
(Ex versions: input or output signal "intrinsically safe")

-40 to +70 °C Storage temperature:

Annual mean relative humidity:

≤75% standard climatic rating ≤95% improved climatic rating

5 g, <200 Hz, 2 h in each of 3 directions 50 g, 10 shocks in each of 3 directions Seismic test

Altitude: 2000 m max.

- 1 This is the time which transpires before the output signal reaches the error limit of 1% for a step change of the input signal from 0 _r 90%. 2 With current signal and R_{_{A}} = 250 Ω 3 With voltage signal

6. Mounting

The SINEAX TI 807 can be mounted either on a top-hat rail or directly onto a wall or mounting plate using the adapter (standard accessory).



Make sure that the ambient temperature stays within the **permissible limits:** -25 and +55 °C for standard instruments -20 and +55 °C for instruments in **Ex** version!

6.1 Top-hat rail mounting

Simply clip the device onto the top-hat rail (EN 50 022) (see Fig. 3).

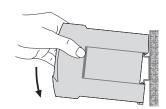
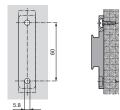


Fig. 3. Mounting on top-hat rails 35×15 or 35×7.5 mm.

6.2 Wall mounting

Drill 2 holes in the wall or panel as shown in the drilling pattern (Fig. 4). Now secure the adapter (standard accessory) to the wall or panel using two 5 mm diameter screws (Fig. 5). Clip the device onto the adapter (Fig. 6).



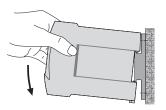


Fig. 6. Mounting on the adapter

7. Electrical connections

The electrical connections are made to screw terminals which are easily accessible from the front of the signal isolator (see Fig. 8 and 9) and can accommodate wire gauges up to 2.5 $\,\mathrm{mm}^2$.



Make sure that the cables are not live when making the connections!



In the case of "Intrinsically safe" [EEx ib] IIC or [EEx ia] IIC explosionproof versions, the supplementary information given on the type examination certification, the EN 60 079-14 and also local regulations applicable to electrical installations in explosion hazard areas must be taken into account.



Note that, ..

- ... the required electrical insulation and transmission data agree with the data on the nameplate of the SINEAX TI 807 (→ input signal and → output signal, see Fig. 7]!
- ... in the case of a signal isolator with current outputs in the case of a signal solation with current output constraints of the external leads (receiver plus leads) does not exceed the maximum burden of 1000 Ω (non-Ex version) or 500 Ω (Ex version)! See "Output signal" in Section 5 "Technical data"!
- . in the case of a signal isolator with voltage output 0...10 V, the external receiver connected across the output has a sufficiently high internal resistance Rs. in relation to the SINEAX TI 807 output impedance of S00 \times 15 ee "Output signal" in Section 5 "Technical data" 1 The error due to Rs. is: $F \left[\% \right] = \frac{500 \left[\Omega \right] \cdot 100}{\text{Ris} \left[\Omega \right]}$


Ria [Ω]

the input and output cables should be twisted pairs and run as far as possible away from heavy current cables!




Connect the input E and output A leads according to Figures 8 and 9.

Signal isolator in housing N17 with one isolation and transmission channel

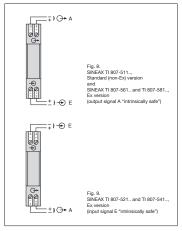

8. Commissioning and maintenance

The device is in operation as soon as the input signal E is connected. The signal isolator requires no maintenance

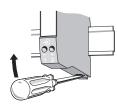

9. Releasing the signal isolator

Release the signal isolator from a top-hat rail as shown in Fig. 10 or from the adapter as shown in Fig. 11.



3

Fig. 11

2