

# GREISINGER electronic GmbH

## EASYBus-Sensor module for humidity temperature

with option: selectable humidity display

from version V3.2

Operating Manual

# EBHT – ... / UNI

### Content

<b>1</b>	<b>INTENDED USE</b>	<b>2</b>
<b>2</b>	<b>GENERAL ADVICE</b>	<b>2</b>
<b>3</b>	<b>SAFETY INSTRUCTIONS</b>	<b>2</b>
<b>4</b>	<b>DISPOSAL NOTES</b>	<b>2</b>
<b>5</b>	<b>ASSIGNMENT OF ELBOW-TYPE PLUG</b>	<b>3</b>
<b>6</b>	<b>GENERAL INSTALLATION INSTRUCTIONS:</b>	<b>3</b>
<b>7</b>	<b>DESIGN TYPES, DIMENSION</b>	<b>3</b>
<b>8</b>	<b>DISPLAY FUNCTIONS (ONLY AVAILABLE FOR DEVICES WITH OPTION ...-VO)</b>	<b>4</b>
8.1	MEASURING DISPLAY	4
8.2	MIN/MAX VALUE MEMORY	4
8.3	USAGE OF UNIT-LABELS	4
8.4	MIN/MAX ALARM DISPLAY	4
<b>9</b>	<b>ERROR AND SYSTEM MESSAGES</b>	<b>5</b>
<b>10</b>	<b>CONFIGURATION OF THE DEVICE</b>	<b>5</b>
10.1	CONFIGURATION VIA INTERFACE	5
10.2	CONFIGURATION AT THE DEVICE (ONLY AVAILABLE FOR DEVICE WITH OPTION ...-VO)	5
<b>11</b>	<b>NOTES TO THE CALIBRATION SERVICES</b>	<b>7</b>
<b>12</b>	<b>SPECIFICATION</b>	<b>7</b>



WEEE-Reg.-Nr.: DE93889386



**GREISINGER electronic GmbH**  
**D - 93128 Regenstauf, Hans-Sachs-Straße 26**

☎ +49 (0) 9402 / 9383-0 📠 +49 (0) 9402 / 9383-33 📧 [info@greisinger.de](mailto:info@greisinger.de)

## 1 Intended use

The device measures the relative humidity and temperature of air or non corrosive / non ionizing gases. From this values others can be derived and displayed instead of the rel. humidity.

Field of application

- Room climate monitoring
  - Monitoring of storage rooms
- etc...

The safety instructions (see chapter 3) have to be observed.

The device must not be used for purposes and under conditions for that the device had not been designed. The device must carefully dealt with and has to be used according to the specifications (do not throw, knock, etc.). It has to be protected against dirt.

Do not expose the sensor to aggressive gases (like ammonia) for longer time.

Avoid condensation, as after drying there may remain residues, which may affect the precision negatively.

In dusty environment additional protection has to be applied (special protection caps).

## 2 General advice

Read through this document attentively and make yourself familiar to the operation of the device before you use it. Keep this document in a ready-to-hand way in order to be able to look up in the case of doubt.

## 3 Safety instructions

This device has been designed and tested in accordance to the safety regulations for electronic devices. However, its trouble-free operation and reliability cannot be guaranteed unless the standard safety measures and special safety advises given in this manual will be adhered to when using it.

1. Trouble-free operation and reliability of the device can only be guaranteed if it is not subjected to any other climatic conditions than those stated under "Specification".  
Transporting the device from a cold to a warm environment condensation may result in a failure of the function. In such a case make sure the device temperature has adjusted to the ambient temperature before trying a new start-up.
2. General instructions and safety regulations for electric, light and heavy current plants, including domestic safety regulations (e.g. VDE), have to be observed.
3. If device is to be connected to other devices (e.g. via PC) the circuitry has to be designed most carefully. Internal connection in third party devices (e.g. connection GND and earth) may result in not-permissible voltages impairing or destroying the device or another device connected.
4. Whenever there may be a risk whatsoever involved in running it, the device has to be switched off immediately and to be marked accordingly to avoid re-starting. Operator safety may be a risk if:
  - there is visible damage to the device
  - the device is not working as specified
  - the device has been stored under unsuitable conditions for a longer timeIn case of doubt, please return device to manufacturer for repair or maintenance.
5. **Warning:** Do not use this product as safety or emergency stop device or in any other application where failure of the product could result in personal injury or material damage.  
Failure to comply with these instructions could result in death or serious injury and material damage.

## 4 Disposal notes



This device must not be disposed as "residual waste".

To dispose this device, please send it directly to us (adequately stamped).

We will dispose it appropriately and environmentally friendly.

## 5 Assignment of elbow-type plug

2-wire connection for EASYBus, no polarity, at terminals 1 and 2

## 6 General installation instructions:

To mount the connection cable (2-wire) the elbow-type plug screw has to be loosened and the coupling insert has to be removed by means of a screw driver at the position indicated (arrow). Pull out connection cable through PG gland and connect to the loose coupling insert as described in the wiring diagram. Replace loose coupling insert onto the pins at the transducer housing and turn cover cap with PG gland in the direction desired till it snaps on (4 different starting positions at 90° intervals). Re-tighten the screw at the angle plug.

## 7 Design types, dimension


**EBHT-1R**  
short sensor tube aside




**EBHT-1K**  
long sensor tube aside



**EBHT-2K**  
long sensor tube bottom

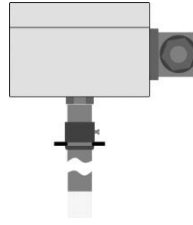

**EBHT-Kabel**  
separated sensor tube

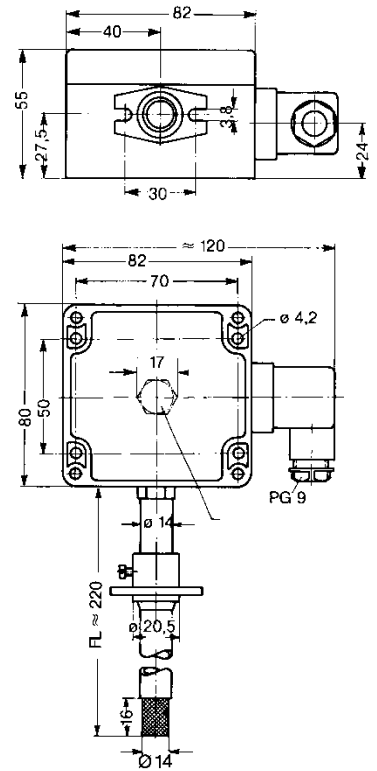


## 8 Display Functions (only available for devices with option ...-VO)

### 8.1 Measuring display

During normal operation the **selectable humidity display value** is displayed alternating to the **temperature** in [°C] or [°F].



display of selectable humidity value

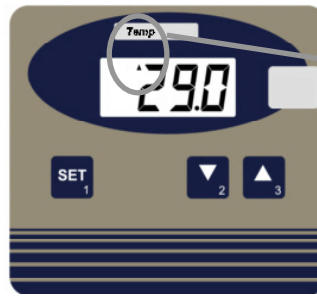

display temperature

Arrow to "Temp" indicates temperature display

If the relative humidity in [%] should be shown, although other display is selected (e.g. dew point temperature, mixing ratio...):

press ▼ and ▲ simultaneous display changes between 'r.H.' and measurand

### 8.2 Min/Max Value Memory

watch Min values (Lo): press ▼ shortly once  
 watch Max values (Hi): press ▲ shortly once  
 restore current values: press ▼ or ▲ once again  
 clear Min-values: press ▼ for 2 seconds  
 clear Max-values: press ▲ for 2 seconds

display changes between 'Lo' and Min values  
 display changes between 'Hi' and Max values  
 current values are displayed  
 Min values are cleared. Display shows shortly 'CLr'.  
 Max values are cleared. Display shows shortly 'CLr'.

After 10 seconds the currently measured values will be displayed again.

### 8.3 Usage of Unit-Labels


As the transmitter is a multiple purpose device, many different display units are possible, e.g. g/kg, g/m<sup>3</sup>.

Therefore unit-labels (within scope of supply) can be shoved between the case cover and the front foil behind the **transparent unit-window**.

To replace a label, unscrew the cover, pull out the old label (if present) and shove in the new one.

The unit depends on the configuration settings "Unit"!

Please refer to table in chapter "10 Configuration of the device"

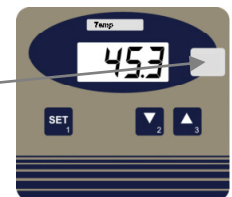

### 8.4 Min/Max Alarm Display

Whenever the measured value is exceeding or undershooting the alarm-values that have been set, the alarm-warning and the measuring value will be displayed alternating.

AL.Lo            the lower alarm boundary is reached or is undershot  
 AL.Hi            the upper alarm boundary is reached or is exceeded

## 9 Error and system messages

Display	Description	Possible fault cause	Remedy
Err.1	Measuring range exceeded	Wrong signal	Temperature above 120°C not allowed.
Err.2	Measuring value below measuring range	Wrong signal	Temperature below -40°C not allowed.
Err.3	Display range has been exceeded	Value >9999	Check settings
Err.7	System fault	Error in device	Disconnect from supply and reconnect. If error remains: return to manufacturer
Err.9	Sensor error	Sensor or cable defective	Check sensors, cable and connections, damages visible?
Er.11	Calculation not possible	Calculation variable missing or invalid	Check temperature
8.8.8.8	Segment test	The transducer performs a display test for 2 seconds after power up. After that it will change to the display of the measuring.	

## 10 Configuration of the device

### 10.1 Configuration via interface

The configuration of the device is done by means of the PC-software EASYBus-Configurator or EBxKonfig. The following parameters can be changed:

- Adjusting of humidity and temperature display (offset and scale correction)
- Setting of the alarm function for humidity and temperature

The adjusting by means of offset and scale is intended to be used to compensate errors of the measurements. It is recommended to keep the scale correction deactivated. The display value is given by following formula:

$$value = measured\ value - offset$$

With a scale correction (just for calibration laboratories, etc) the formula changes:


$$value = (measured\ value - offset) * (1 + scale\ adjustment/100)$$

### 10.2 Configuration at the device (only available for device with option ...-VO)

Note: If EASYBus sensor modules are operated by a data acquisition software, there can be problems if the configuration is changed during a running acquisition. Therefore it is recommended not to change configuration values during a running recording and furthermore to protect it against manipulation by unauthorised persons. (please refer to right picture)

Follow these instructions to configure the functions of the device:

- Press **SET** until the first parameter *Unit* appears in the display
- If a parameter should be changed, press ▼ or ▲, The device changed to the setting – edit with ▼ or ▲
- Confirm the value with **SET**
- Jump to the next parameter with **SET**.

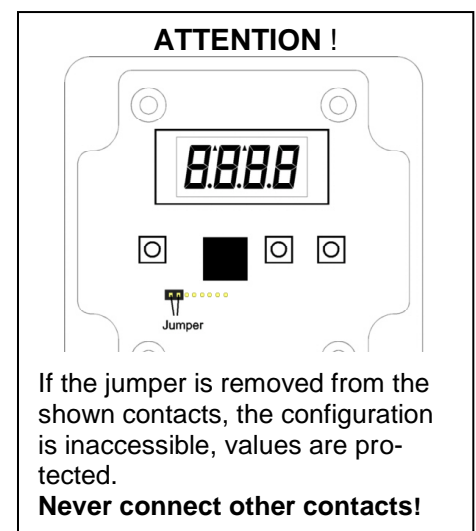

Parameter	value	information
<b>SET</b>	▼ and ▲	
<b>Unit</b>	<b>Unit and Range of humidity display</b> <i>factory setting: rel.H</i>	
	reL.H	0.0 100.0 % relative air humidity
	F.AbS	0.0 ... 200.0 g/m <sup>3</sup> absolute humidity
	FEU.t	-27.0 ... 60.0°C wet bulb temperature
	t.d.	-40.0 ... 60.0°C dew point temperature
	Enth	-25.0 ... 999.9 kJ/kg Enthalpy
	F.G.	0.0 ... 640.0 g/kg Mixing ratio (atmospheric humidity)
<b>Unit</b> + Temp arrow	<b>Unit of temperature displays</b> <i>factory setting: °C</i>	
	°C	Temperatures in °Celsius
	°F	Temperatures in °Fahrenheit
<b>OFFS</b>	<b>Offset correction of humidity measuring *)</b>	
	oFF	deactivated ( <i>factory setting</i> )
	-5.0 ... +5.0	Selectable from -5.0 to +5.0 % rel. humidity
<b>SCAL</b>	<b>Scale correction of humidity measuring *)</b>	
	oFF	deactivated ( <i>factory setting</i> )
	-15.00 ... +15.00	Selectable from -15.00 to +15.00 % scale correction
<b>OFFS</b> + Temp arrow	<b>Offset correction of temperature measuring *)</b>	
	oFF	deactivated ( <i>factory setting</i> )
	-2.0 ... +2.0	Selectable from -2.0 to +2.0 °C
<b>SCAL</b> + Temp arrow	<b>Scale correction of temperature measuring *)</b>	
	oFF	deactivated ( <i>factory setting</i> )
	-5.00 ... +5.00	Selectable from -5.00 to +5.00 % scale correction
<b>ALti</b>	<b>Altitude input (not at all units available)</b> <i>factory setting: 340</i>	
	-500 ... 9000	-500 ... 9000 m selectable
<b>ALLo</b>	<b>Min. alarm-point for humidity measuring</b>	
	-0.1 ... AL.Hi	Selectable from: -0.1 %RH to AL.Hi
<b>ALHi</b>	<b>Max. alarm-point for humidity measuring</b>	
	AL.Lo ... 100.1	Selectable from: AL.Lo to 100.1 %RH
<b>ALdE</b>	<b>Alarm-delay for humidity measuring</b>	
	oFF	deactivated ( <i>factory setting</i> )
	1 ... 9999	Selectable from 1 to 9999 sec.
<b>ALLo</b> + Temp arrow	<b>Min. alarm-point for temperature measuring</b>	
	Min.MB ... AL.Hi	Selectable from: min. measuring range to AL.Hi
<b>ALHi</b> + Temp arrow	<b>Max. alarm-point for temperature measuring</b>	
	AL.Lo ... Max.MB	Selectable from: AL.Lo to max. measuring range
<b>ALdE</b> + Temp arrow	<b>Alarm-delay for temperature measuring</b>	
	oFF	deactivated ( <i>factory setting</i> )
	1 ... 9999	Selectable from 1 to 9999 sec.

Pressing **SET** again stores the settings, the instruments restarts (segment test)

**Please note:** *If there is no key pressed within the menu mode within 2 minutes, the configuration will be cancelled, the entered settings are lost!*

\*) if higher values are needed, please check sensor, if necessary return to manufacturer for inspection.  
Calculation: corrected value = (measured value – Offset) \* (1+Scale/100)


## 11 Notes to the calibration services

Calibration certificates - DKD-certificates - other certificates:

If device should be certificated for its accuracy, it is the best solution to return it with the referring sensors to the manufacturer. (please state desired test values, e.g. 70 %RH)

Only the manufacturer is capable to do efficient recalibration if necessary to get results of highest accuracy! Humidity transmitters are subject to ageing. For optimum measuring precision we recommend a regular adjusting at the manufacturer (e.g. every 2<sup>nd</sup> year). Cleaning and checking of the sensors is part of the service.

## 12 Specification
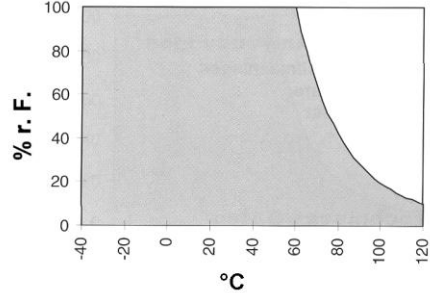
<b>Display ranges humidity</b>	Relative air humidity: 0.0...100.0 %RH Wet bulb temperature: -27.0 ... 60.0 °C (or -16,6 ... 140,0 °F) Dew point temperature: -40.0 ... 60.0 °C (or -40,0 ... 140,0 °F) Enthalpy: -25.0 ... 999.9 kJ/kg Mixing ratio (atmospheric humidity): 0.0 ... 640.0 g/kg absolute humidity: 0.0 ... 200.0 g/m <sup>3</sup>	
<b>Recommended humidity measuring range</b>	Standard: 20.0 ... 80.0 %RH Option "high humidity": 5.0 ... 95.0 %RH	Working range of humidity sensor: 
<b>Meas. range temperature</b>	-40.0 ... 120.0 °C or -40.0 ... 248.0 °F	
<b>Accuracy Display</b>	(at nom. temperature 25°C) Rel. Air humidity: ±2.5 %RH ( <i>within recommended measuring range</i> ) Temperature: ±0.4% of meas. value. ±0.2°C	
<b>Media</b>	Non corrosive gasses	
<b>Sensors</b>	capacitive polymer humidity sensor and Pt1000	
<b>Temperature compensation</b>	automatic	
<b>Meas. frequency</b>	1 per second	
<b>Adjusting</b>	Digital offset and scale adjustment for humidity and temperature	
<b>Min-/Max-value memory</b>	Min and max measured values are stored	
<b>Output signal</b>	EASYBus-protocol	
<b>Connection</b>	2-wire EASYBus, polarity free	
<b>Busload</b>	1.5 EASYBus-devices	
<b>Display</b> (only with option VO)	approx. 10 mm high, 4-digit LCD-display	
<b>Operating elements</b>	3 keys	
<b>Ambient conditions</b>		
<b>Nom. temperature</b>	25°C	
<b>Operating temperature</b>	Electronics: -25 ... 50 °C, sensor head and shaft: -40 ... 100 °C, short time 120 °C for Option "SHUT": sensor head max. 80 °C	
<b>Relative humidity</b>	Electronics: 0 ... 95 %RH (not condensing)	
<b>Storage temperature</b>	-25 ... 70 °C	
<b>Housing</b>	ABS (IP65, except sensor head)	
<b>Dimensions</b>	82 x 80 x 55 mm (without elbow-type plug and sensor tube) for Option "Kabel": Sensor head Ø14mm*68mm, 1m teflon cable, high humidity sensor	
<b>Mounting</b>	Holes for wall mounting (in housing - accessible after cover has been removed).	
<b>Mounting distance</b>	50 x 70 mm, max. shaft diameter of mounting screws is 4 mm	
<b>Electrical connection</b>	Elbow-type plug conforming to DIN 43650 (IP65), max. wire cross section: 1.5 mm <sup>2</sup> , wire/cable diameter from 4.5 to 7 mm	
<b>EMC</b>	The device corresponds to the essential protection ratings established in the Regulations of the Council for the Approximation of Legislation for the member countries regarding electromagnetic compatibility (2004/108/EG). In accordance with EN 61326-1: 2006, additional errors: <1 % FS. When connecting long leads adequate measures against voltage surges have to be taken.	

